Guide de déploiement des clusters à étirement HyperFlex

Contenu

Introduction Conditions préalables Conditions requises Components Used Autres exigences Configuration Diagramme du réseau Configurations Configurer le site A Configurer le site A Configurer le site B Déploiement de VM témoin HX Créer un cluster d'étirement Vérification Création de data stores

Introduction

Un cluster étendu Hyperflex est un cluster unique avec des noeuds répartis géographiquement. Les deux côtés du cluster agissent en tant que machines virtuelles utilisateur principales. Les données de ces machines virtuelles sont répliquées de manière synchrone sur l'autre site. Les clusters étendus vous permettent d'accéder à l'ensemble du cluster même si l'un des sites devait être complètement désactivé. En général, ces sites sont connectés par une liaison haut débit dédiée à faible latence entre eux.

HyperFlex Stretched Cluster vous permet de déployer une solution d'évitement de sinistre actifactif pour les charges de travail stratégiques nécessitant un temps de fonctionnement élevé (objectif de temps de récupération proche de zéro) et aucune perte de données (objectif de point de récupération zéro).

Conditions préalables

Conditions requises

- Tous les noeuds du cluster doivent être des mêmes modèles M5 (All HX220 M5) ou (HX 240 M5)
- Seuls les noeuds M5 sont pris en charge dans les clusters de rétractation
- Les clusters étendus ne sont pris en charge que sur les plates-formes ESXi HX
- Chaque site doit comporter au moins 2 noeuds
- TOUS les VLAN utilisés sur les deux clusters doivent être IDENTIQUES
- L'extension de la configuration du cluster nécessite une machine virtuelle témoin

- Les clusters d'extension nécessitent le même nombre d'adresses IP que celui requis pour un cluster à six noeuds
- Une seule instance de vCenter est utilisée pour un cluster d'extension
- vCenter avec DRS et HA est requis pour que le cluster de stretch fonctionne correctement

Components Used

- Programme d'installation HX
- Serveurs Cisco HX M5
- VMWare vCenter
- Cisco UCSM
- VMWare ESXi

Autres exigences

- Liste de contrôle de pré-installation
- Déploiement de la machine virtuelle témoin
- Modification du mot de passe de la machine virtuelle témoin

Configuration

Diagramme du réseau



Configurations

Toute la configuration d'un cluster d'extension sera effectuée à partir d'un seul installateur HX. Le workflow pour les étapes d'installation du cluster extensible est le suivant :



Configurer le site A

Étape 1. Connectez-vous au programme d'installation HX correspondant pour démarrer la configuration du cluster. Si le programme d'installation affiche toujours l'état d'installation précédent, cliquez sur la roue dans la barre ci-dessus et sélectionnez Start Over pour commencer une nouvelle installation. Dans la section **Sélectionner un flux de travail —> Créer un cluster** —>(sélectionnez) **Cluster d'extension**.

tisco HyperFlex Installer	0		Ø ~
Workflow			
Select a Workflow			
Create Cluster	÷		
Advanced Option 🔒 I know what I'm doing, let me customize my workflow			

Étape 2. Dans le workflow de configuration du site, saisissez les informations d'identification UCSM et le contrôleur de domaine dans le nom du site. Cliquez ensuite sur Continuer.

uluilu cisco	HyperFlex Installer			0				\$ ~
	Credentials	Server Selection	UCSM Configuration		Hyper	rvisor Config	uration	
(i) •	To setup stretch cluster you have to Pun the "Configure Site" workflow Download and deploy the Witness the stretch cluster. Run the "Create Stretch Cluster" w Configure Site Cred UCS Manager Credentials for the UCS Manager Host Name	once for each site. VM, per the user documentation. Provide the orkflow, after both sites have been configured eate Stretch Cluster is site UCS Manager User Name admin	IP address of the Witness VM when you create i. Password	Con	figuration	Prag and dro uration files h	p here or	*
	UCS Manager FQDN or IP address				S Sack	Select a File	Continue	

Étape 3. Dans la sélection du serveur, sélectionnez les serveurs sources et cliquez sur Continuer

							Ŭ	ų.
Server Se	election	UCSM C	onfiguration		Hypervi	sor Configur	ation	
	Co	nfigure Server Ports	Refresh	Config Credent	uration ials			*
Status N	Model S	Serial	Actions	UCS Man	ager Host N ager User N	ame d		admin
unassociated H	HX220C-M5SX		none	Site Nam	e			DC1
unassociated H	HX220C-M5SX		none					
unassociated H	HX220C-M5SX		none					
					Back		ontinue	
	Sever S Status III unassociated III unassociated III unassociated III	Server Selection	Sever Selection UCSM C	Server Selection Configure Server Ports Refresh Status Model Serial Actions unassociated HX220C-M55X Mone HX220C-M55X Mone	Status Model Serial Actions Unassociated HX220C-M55X none unassociated HX220C-M55X none	Sever Selection UCSM Configuration Hypervi Configure Server Ports Refresh Configuration Status Model Serial Actions unassociated HX220C-M55X none unassociated HX220C-M55X none unassociated HX220C-M55X none	Server Selection UCSM Configuration Hypervisor Configure Configure Server Ports Refresh Configuration Status Model Serial Actions unassociated HX220C-M55X none unassociated HX220C-M55X none unassociated HX220C-M55X none unassociated HX220C-M55X none	Server Selection UCSM Configuration Hypervisor Configuration Configure Server Ports Refresh Status Model Serial Actions unassociated HX220C-M5SX none unassociated HX220C-M5SX none unassociated HX220C-M5SX none unassociated HX220C-M5SX none

Étape 4. Sous la section Configuration UCSM, saisissez l'ID de VLAN et les noms de VLAN. Dans

ce cas, nous avons utilisé Inband pour CIMC. Cliquez sur Continuer

HyperFlex Inst	aller			0 0 0	o o
Credentials		Server Selection	UCSM Configuration	Hypervisor C	onfiguration
VLAN Configuration				Configuration	
VLAN for Hypervisor and Hype	rFlex management	VLAN for HyperFlex stor	rage traffic	Credentials	
VLAN Name	VLAN ID	VLAN Name	VLAN ID	UCS Manager Host Name	dm-j-fi-2.cisco.com
hx-inband-mgmt-Pod-6	222 3	hx-storage-data-Pod-	6 3099 3	UCS Manager User Name	admin
				Site Name	DC1
VLAN for VM vMotion		VLAN for VM Network		Admin User name	root
VLAN Name	VLAN ID	VLAN Name	VLAN ID(s)	Server Selection	
hx-vmotion-Pod-6	3093 🔅	vm-network-Pod-6	3094	Server 8	/ HX220C-M55X
				Server 9	/ HX220C-M55X
MAC Bool				Server 7	/ HX220C-M55X
MAC POOL				UCSM Configuration	
MAC Pool Prefix				VLAN Name	hx-inband-mgmt-Pod-6
00:25:85:06				VLAN ID	222
				VLAN Name	hx-storage-data-Pod-6
'by' IP Pool for Cisco IM	r.			VLAN ID	3099
TIX IF FOOT OF CISCO IM	-			VLAN Name	hx-vmotion-Pod-6
IP Blocks	Subnet Mask	Gate	way	VLAN ID	3093
_	255.255.254	•		VLAN Name	vm-network-Pod-6
				VLAN ID(s)	3094
Cisco IMC access manas	gement (Out of band or In	band)		MAC Pool Prefix	00:25:85:06
				IP Blocks	
Out of band 💿	 In band is 			Subnet Mask	255.255.254.0
				Gateway	
VI AN for inband Cisco I	MC connectivity			VLAN Name	hx-inband-cimc-Pod-6
VENTION INDURA CISCO I	ine connectivity			VLAN ID	222
VLAN Name	VLAN ID			UCS Server Firmware Versi	on 3.2(3)
hx-inband-cimc-Pod-6	222	9		HyperFlex Cluster Name	dm-j-hx-clus-6
				Org Name	HX-POD-6
> iSCSI Storage				ISCSI Storage	false
0				VLAN A Name	hx-ext-storage-iscsi-a
> EC Storage				VLAN B Name	hx-ext-storage-iscsi-b
r re storage				FC Storage	false
Advanced				WWXN Pool	20:00:00:25:85:
Advanced				VSAN A Name	tox-ext-storage-fc-a
UCS Server Firmware Version	HyperFlex Cluste	Name Org	Name	VSAN B Name	nx-ext-storage-fc-b
3.2(3) • 0	dm-j-hx-clus-	6 H3	K-POD-6		
				< Back	Continue

Étape 5. Dans la section Configuration de l'hyperviseur, fournissez toutes les informations demandées. Cliquez ensuite sur Configurer le site pour commencer la configuration du site.

Credentials VLAN Configuration		Server Selection	UCSM Configuration	Hyperviso	vr Configuration	
VLAN Configuration					-	
VI AN for Humanizer and Lines				Configuration		*
Torrest for hypervisor and Hyper	Flex management	VLAN for HyperFlex st	torage traffic	Credentials		
VLAN Name	VLAN ID	VLAN Name	VLAN ID	UCS Manager Host Nar		
hx-inband-mgmt-Pod-6	222 0	hx-storage-data-Po	d-6 3099 🕄	UCS Manager User Nar	ne	admin
				Site Name		DC1
VLAN for VM vMotion		VLAN for VM Network	κ.	Admin User name		root
VLAN Name	VLAN ID	VLAN Name	VLAN ID(s)	Server Selection		
hx-vmotion-Pod-6	3093 ©	vm-network-Pod-6	3094	Server 8	7 10(2)	OC-M55X
				Server 9	/ HX22	OC-M55X
MAC De al				Server 7	/ HX23	0C-M55X
MAC POOL				UCSM Configuration		
MAC Pool Prefix				VLAN Name	hx-inband-mg	mt-Pod-6
00:25:85:06				VLAN ID		222
				VLAN Name	hx-storage-d	sta-Pod-6
'by' IP Pool for Cisco IM				VLAN ID		3099
TIX IF FOUTIOF CISCO INTO				VLAN Name	hx-vmot	on-Pod-6
IP Blocks	Subnet Mask	Ga	iteway	VLAN ID		3093
	255.255.25	4.0		VLAN Name	vm-netw	ork-Pod-6
				VLAN ID(s)		3094
Cisco IMC access manag	ement (Out of band or	Inband)		MAC Pool Prefix	00	25:85:06
				IP Blocks	_	
Out of band 💿	 In band in 			Subnet Mask	255.2	255.254.0
				Gateway	_	
VI AN for inhand Cisco II	AC connectivity			VLAN Name	hx-inband-ci	mc-Pod-6
VENTION INDUNG CISCO II	ine connectivity			VLAN ID		222
VLAN Name	VLAN ID			UCS Server Firmware V	ersion	3.2(3))
hx-inband-cimc-Pod-6	222	٢		HyperFlex Cluster Nam	e dm-j	hx-clus-6
				Org Name		K-POD-6
> iSCSI Storage				ISCSI Storage		false
				VLAN A Name	ha-ext-stora	ge-iscsi-a
EC Storage				VLAN B Name	hx-ext-stora	ge-iscsi-b
A LC Storage				FC Storage		false
				WWkN Pool	20:00:	00:25:85:
Advanced				VSAN A Name	hor-ext-sto	rage-fc-a
UCS Server Firmware Version	HyperFlex Clu	ster Name Or	g Name	VSAN B Name	hx-ext-sto	rage-fc-b
3.2(3) • 0	dm-j-hx-cl	us-6	HX-POD-6			

Étape 6. Confirmez que la configuration de l'hyperviseur du site A est réussie.

HyperFlex	Installer



Configurer le site B

Étape 1. Cliquez sur la roue et sélectionnez Configurer le site pour commencer la configuration du site B comme indiqué ci-dessous.

 cisco	' HyperFlex Installer					0	0	0	¢ ~
			Progress				Configu	re Site	_ ^_
							8		
					Conf	figuration	Create S	Stretch Clus	ter
0-	\odot	\odot	\odot	(V)		0	Log Out	(root)	
Start	Config Installer	Validations	UCSM Configuration	Hypervisor Configuration	Crede	ntials			

Étape 2. Dans le workflow Configurer le site, saisissez les informations d'identification UCSM cible et le contrôleur de domaine cible dans le champ Nom du site. Cliquez ensuite sur Continuer.

.ılı.ılı. cısco	HyperFlex Installer			0			0	\$ ~
	Credentials	Server Selection	UCSM Configuration		Нурег	visor Config	uration	
(i) •	To setup stretch cluster you have to • Run the "Configure Site" workflow once for each site. • Download and deploy the Witness VM, per the user documentation. Provide the IP address of the Witness VM when you create the stretch cluster. • Run the "Create Stretch Cluster" workflow, after both sites have been configured. • Configure Site Create Stretch Cluster UICS Manager Credentials for this site					1		*
	UCS Manager Host Name	UCS Manager User Name	Password					
		admin	••••••					1
	Site Name							
	DC2							

Étape 3. Dans la sélection du serveur, sélectionnez les serveurs sources et cliquez sur Continuer

.1 1.1 CISC	11. :0	HyperF	lex Installer					0			ø	\$ ~	
	Credentials		Credentials Server Selection UCSM Configuration		Server Selection UCSM Configuration				Нуре	rvisor Conf	iguration		
	Server	r Selectio	n			Configure Server Port	s Refresh	Con	figuratio	ı		*	
	Sele Unas	ect Nodes fo	or this site.) Associated (0)					Cred	entials				
			Conver Name	Chaburg	Model	Carial	Actions	UCS N	lanager Host	Name	dm-j-fi-3.ci	sco.com	
		-0-	Server Name	Status	Model	Serial	Actions	UCS N	lanager User	Name		admin	
		$\textcircled{\textbf{O}}$	Server 1	unassociated	HX220C-M5SX		none	Site N	ame			DC2	
		O	Server 2	unassociated	HX220C-M5SX		none	Serve	er Selection				
		0	Server 3	unassociated	HX220C-M5SX		none	Serve	r 1		/ HX220	IC-M5SX	
								Serve	r 2		/ HX220	C-M5SX	
			Server 4	unassociated	HX220C-M5SX		none	Serve	r 3		/ HX220	C-M5SX	
	\Box	()	Server 5	unassociated	HX220C-M5SX		none						

Étape 4. Sous la section Configuration UCSM, saisissez l'ID de VLAN et les noms de VLAN. Dans ce cas, nous avons utilisé Inband pour CIMC. Cliquez sur Continuer

disilis HyperFlex Installer			0 0	e e e -
Credentials	Server Selection	UCSM Configuration	Hypervi	sor Configuration
VLAN Configuration VLAN for Hypervisor and HyperFlex manage VLAN Name VLAN ID hx-inband-mgmt 222	ement VLAN for HyperFlex VLAN Name Dx-storage-data	storage traffic VLAN ID 3099	Configuration Credentials UCS Manager Host N UCS Manager User N	ame admin
VLAN for VM vMotion VLAN Name VLAN ID hx-vmotion 3093	VLAN for VM Netwo VLAN Name vm-network	VLAN ID(s) 3094	Site Name Server Selection Server 1 Server 2	DC2 //HX220C-M55X /HX220C-M55X
MAC Pool MAC Pool Prefix 00:25:85: 'hx' IP Pool for Cisco IMC IP Blocks	Subnet Mask	Gateway	Server 3	/ HX22UC-MSSX
Cisco IMC access management (O	255.255.254.0 ut of band or Inband) In band ③			
VLAN for inband Cisco IMC conne	ctivity			
VLAN Name hx-inband-cimc-Pod-7	222 Û			
> iSCSI Storage				
> FC Storage				
Advanced	HyperFlex Cluster Name	Org Name		
3.2(3h) • 💿	HyperFlex cluster	HX-POD-7	K Back	Continue

Étape 5. Dans la section Configuration de l'hyperviseur, fournissez toutes les informations demandées. Cliquez ensuite sur Configurer le site pour commencer la configuration du site.

	HyperFlex Installer			0 0 0	• •
	Credentials	Server Selection	UCSM Configuration	Hypervisor Configur	ation
Confi	gure common Hyperviso	or Settings		Configuration	*
Subnet	Mask	Gateway	DNS Server(s)	Credentials	
255.2	255.254.0			UCS Manager Host Name	_
				UCS Manager User Name	admin
				Site Name	DC2
Hyper	rvisor Settings			Admin User name	root
🗹 Ma	ke IP Addresses and Hostnames	Sequential		Server Selection	
				Server 1	HX220C-M5SX
41	Name A Se	rial Static IP Address	Hostname	Server 2	HX220C-M55X
				Server 3	HX220C-M55X
	Server 1		dm-j-hx-21	UCSM Configuration	
	-			VLAN Name hx	-inband-mgmt
	Server 2		dm-j-hx-22	VLAN ID	222
	_			VLAN Name h	x-storage-data
= (0	D Server 3		dm-j-hx-23	VLAN ID	3099
				VLAN Name	hx-vmotion
				VLAN ID	3093
Hyner	visor Credentials			VLAN Name	vm-network
Type	visor credentidis			VLAN ID(s)	3094
Admin L	Jser name	Hypervisor Password		MAC Pool Prefix	00:25:B5:07
root			•	IP Blocks	
				Subnet Mask	255.255.254.0
				Gateway	
				VLAN Name hx-inba	na-cimc-Pod-7
				VLAN ID	222
				LINE Contract Elements of Manual Street	D D(D))

Étape 6. Confirmez que la configuration de l'hyperviseur du site B est réussie.

disco HyperFlex Installer				
			Progress	
0		(>)		
Start Config Installer		Validations	UCSM Configuration	Hypervisor Configuration
 Hypervisor Configuration Succes 	ssful			
			Hypervisor Configuration	\$
Hypervisor Configuration - Overall	1	Login to UCS API		
Succeeded	1	Configuring static ip on the specified	d ESXi servers	
	1	Configuring static ip on a ESXi serve	r	
	1	Login to ESXi through SoL with user	specified username and password	
	1	Logout from UCS API		
	~	CONFIGURATION COMPLETED SUCC	CESSFULLY	

Déploiement de VM témoin HX

- Il s'agit d'une étape **importante** avant d'aller plus loin. La machine virtuelle témoin HX doit être opérationnelle et accessible pour que l'installation réussisse.
- Une image OVA doit être déployée sur un hôte ESXi.
- Testez la connectivité à cette machine virtuelle et assurez-vous que la connexion fonctionne.
- Reportez-vous aux propriétés d'installation d'OVA ci-dessous.

🎓 Deploy OVF Template		? >>
 1 Select template 2 Select name and location 	Customize template Customize the deployment	properties of this software solution.
✓ 3 Select a resource	All properties have valid	values Show next Collapse all
 4 Review details 		5 settings
✓ 5 Select storage	DNS	The domain name servers for this VM (comma separated). Leave blank if DHCP is desired.
✓ 6 Select networks		
7 Customize template	Default Gateway	The default gateway address for this VM. Leave blank if DHCP is desired.
8 Ready to complete		
	NTP	NTP servers for this VM (comma separated) to sync time.
	Network 1 IP Address	The IP address for this interface. Leave blank if DHCP is desired.
	Network 1 Netmask	The netmask or prefix for this interface. Leave blank if DHCP is desired. 255.255.254.0
		Back Next Finish Cancel

Créer un cluster d'étirement

Étape 1.

- Pour commencer à configurer le cluster d'étirement, accédez à la roue du programme d'installation et sélectionnez Créer un cluster d'étirement pour commencer la configuration du cluster d'étirement.
- Dans l'écran d'informations d'identification, indiquez les informations d'identification source (Site A) et cible (Site B) UCSM et ses informations d'identification, Nom du site, Nom d'organisation UCSM, vCenter et Hypervisor. Cliquez sur Continuer pour passer à l'écran Sélection du serveur.

allalla cisco	HyperFlex Installer				0			ø	۵ -
	Credentials	Server Selection	IP Addresse	в		Clus	ter Configura	ition	
(i) •	To setup stretch cluster you have to • Run the "Configure Site" workflow of • Download and deploy the Witness to the stretch cluster. • Run the "Create Stretch Cluster" wo Configure Site • Cre	once for each site. VM, per the user documentation. Provide the orkflow, after both sites have been configured ate Stretch Cluster	P address of the Witness VM when y	you create	Conf	iguration			4
	UCS Manager Credentials for Sit	e 1 User Name	Password						
		admin		0					
	Site Name DC1	Org Name HX-POD-6							
	UCS Manager Credentials for Sit UCS Manager Host Name Site Name DC2 vCenter Credentials	e 2 User Name admin Org Name HX-POD-7	Password	٢	Drag and drop configuration files here or Select a File				
	vCenter Server	User Name	Admin Password						
		administrator@vsphere.local		0					
	Hypervisor Credentials Admin User name root The hypervisor on this node uses the fac Hypervisor Password	tory default password							
						Back		Continue	

Étape 2. Assurez-vous que tous les serveurs (serveurs source et cible) sont affichés comme sélectionnés. Cliquez ensuite sur Continuer,

•	Нур	erFlex Insta	aller						0	0	?	0	•
		Credentials		_		Server Selection	IP A	ddresses		Clus	ter Configura	ation	
erve Se Ass	er Sele lect Nor ociated	ction des for this site. (6)					Configure Server Ports	Refresh	Confi Creder	guratior ntials	1		*
 Image: A start of the start of	÷.	Server Name	Site	 Status 	Model	Serial	Service Profile	Actions	UCS Ma	inager Host	Name 1		admin
	0	Server 8	DC1	ok	HX220C- M5SX	_	org-root/org-HX-POD-6/ls-rack- unit-8	Actions ~	UCS Ma	inager Host	Name 2		
/	0	Server 9	DC1	ok	HX220C- M55X		org-root/org-HX-POD-6/ls-rack-	Actions ~	User Na Site Na	ame me			admin DC1
2		Server 7	DC1	ok	HX220C-	_	org-root/org-HX-POD-6/ls-rack-	Actions ~	Org Na	me 1		HX-	POD-6
					M5SX		unit-7		Site Nai Org Nai	me 2		HX-	POD-7
2	0	Server 2	DC2	ok	M5SX		unit-2	Actions 🗸	vCenter	Server			
~]	0	Server 3	DC2	ok	HX220C- M5SX		org-root/org-HX-POD-7/ls-rack- unit-3	Actions $$	User Na	ame User name	administra	ator@vspher	root
/	0	Server 1	DC2	ok	HX220C- M5SX	_	org-root/org-HX-POD-7/ls-rack- unit-1	Actions ~					
-					M5SX		unit-1						

Étape 3. Dans la section IP Address, fournissez l'adresse IP Hypervisor and Storage Controller Management (Public Routable) ainsi que leur adresse IP DATA (Privé non routable). Fournissez également l'adresse IP du cluster pour les réseaux de gestion et de données. Cliquez sur Continue.

ului cisco	•	ну	yperFlex In	staller									0			0	¢ ~
			Credentials			Se	erver Selec	tion				IP Addresses		Clus	ter Configu	ation	
1	P Ad	Idres	sses										Config	uration			*
١,	2 M	ake IP	P Addresses Sea	uential									Credent	ials			
													UCS Man	ager Host	Name 1		
					M	anagemer	nt - VLAN			(FQI	Data - ' DN or IP	VLAN Address)	User Nan	ne			admin
													UCS Man	ager Host	Name 2		-
	ļţ	¢	Name~	Site	Нуре	rvisor	O Sto Co	orage ntroller	3	Hypervisor	(i)	Controller ①	User Nan	ne			admin
													Site Nam	e			DC1
) D	Server 9	DC1						192.168		92.168.	Org Nam	e 1		HX	POD-6
													Site Nam	e			DC2
) D	Server 8	DC1						192.168.		92.168.6	Org Nam	e 2		HX	POD-7
			5 T	2.51									vCenter S	ierver			
		0.0	Server /	DC1						192.168.		92.168.	User Nan	ne	administr	ator@vsphe	e.local
			Secure 2	DC2		_							Admin Us	ser name			root
			Server 5	002						192.168.		92.168.6	Server S	election		(10/2200	MEEN
		0))	Server 2	DC2		_				102.102		00.160.4	Server 2	- 1		/ HX2200	-M55X
										192.108.		92.108.0	Server 1			/ HX2200	-M5SX
		Ð	Server 1	DC2						192.168		92 168 6	Server 8			/ HX2200	-M55X
													Server 9			/ HX2200	-M5SX
													Server 7			/ HX2200	-M55X
						Managem	ent	t	Data								
				Cluster	Address	_			100.10								
				cluster i	Address				192.10	0.4							
				Sub	net Mask	255,255	5.254.0		255.25	5.255.0							
						LUUILUU											
					Gateway												
														lack		Continue	_
				1	Vitness IP		÷							-setem		contantae	

Étape 4. Sous Configuration du cluster, saisissez les détails des mots de passe de la machine virtuelle du contrôleur, de la configuration vCenter et des services système. Sous la section Advanced Networking, configurez les mêmes VLAN Management et Data pour les deux sites. Cliquez ensuite sur Start pour commencer les configurations de cluster.

Cisco HX Cluster			Configuration *
Cluster Name	Replication Factor		Credentials
dm-j-hx-clus-6	2+2 •		UCS Manager Host Name 1 m
			User Name admin
Controller VM			UCS Manager Host Name 2
Create Admin Password	Confirm Admin Password		User Name admin
			Site Name DC1
			Org Name 1 HX-POD-6
			Site Name DC2
vCenter Configuration			Org Name 2 HX-POD-7
vCenter Datacenter Name	vCenter Cluster Name		vCenter Server
HX-Stretch	dm-j-hx-clus-6		User Name administrator@vsphere.local
			Admin User name root
System Services			Server Selection
System Services			Server 2 / HX220C-M55X
DNS Server(s)	NTP Server(s)	DNS Domain Name	Server 3 / HX220C-M5SX
	.cisco.com	cisco.com	Server 1 / HX220C-M55X
Time Zone			Server 8 / HX220C-M55X
(UTC-08:00) Pacific Time	• ③		Server 9 / HX220C-MSSX
			Server 7 / HX220C-MSSX
			IP Addresses
Auto Support			Cluster Name dm-j-hx-clus-6
Auto Support	Send service ticket notifications to		Management Cluster
(Recommended)			Data Cluster
			Management Subnet Mask 255.255.254.0
Advanced Networking			Data Subnet Mask 255.255.255.0
Advanced Networking			Management Gateway
Management VLAN Tag - Site 1	Management VLAN Tag - Site 2	Management vSwitch	Witness IP
222 ©	222 3	vswitch-hx-inband-mgmt	Server 9 (WZP22370075)
Data VLAN Tag - Site 1	Data VLAN Tag - Site 2	Data vSwitch	Management Hypervisor
3099 ©	3099 3	vswitch-hx-storage-data	Management Storage Controller
			Data Hypervisor
			Data Storage Controller
Advanced Configuration			Server 3 (WZP22370078)
Jumbo Frames	Disk Partitions	Virtual Desktop (VDI)	
Enable Jumbo Frames on Data Network	Clean up disk partitions	Optimize for VDI only deployment	K Back Start

Étape 5. Confirmez que la création du cluster est terminée.

Pr	rogress		Summary
Start Config	Deploy Deploy	Create	Configuration
Installer	Validation	Validation	Creation
			UCS Manager Host Name 1
			User Name admin
 Cluster Creation Successful 		View S	UCS Manager Host Name 2
			User Name admin
			Site Name DC1
		Cluster Creation	Org Name 1 HX-POD-6
Cluster Creation - Overall	 Preparing Storage Cluster 		Site Name DC2
Succeeded	 Configuring Cluster Resource Manager 		Org Name 2 HX-POD-7
	✓ updateClusterSEDStatus		vCenter Server
			User Name administrator@vsphere.local
192.168.1	4 Configuring NTD Societor		Admin User name root
In Progress	 Conliguring NTP services 		Server Selection
			Server 2 / HX220C-M55X
192.168.	 Configuring NTP Services 		Server 3 / HX220C-M55X
In Progress			Server 1 / HX220C-M55X
			Server 8 / HX220C-M55X
192.168.1	 Configuring NTP Services 		Server 9 / HX220C-M55X
In Progress			Server 7 / HX220C-M55X
192 168			IP Addresses
In Progress	 Configuring NTP Services 		Cluster Name dm-j-stretch-1
			Management Cluster
192.168.1	Configuring NTP Services		Data Cluster 192.168.
In Progress	Comband of Article		Management Subnet Mask 255.255.254.0
			Data Subnet Mask 255.255.255.0
192.168.	 Configuring NTP Services 		Management Gateway
In Progress			Witness IP
			Server 9 (WZP22370075)

Vérification

Création de data stores

Étape 1. La création du data store sur un cluster d'extension est similaire à la création d'un data store sur un cluster normal. La seule différence réside dans le fait que la création d'un data store dans une grappe étendue consiste à définir l'affinité du site. Dans l'interface utilisateur d'Hyperflex Connect, accédez aux data stores et cliquez sur Créer un data store

=	ະເມີນເປັນ cisco HyperFlex Connect			-stretch-1			Ģ	3 🔅	0	<u>8</u>
\odot	Dashboard	Datastores				Las	t refreshed at	02/16/2019 2:	37:10 PM	θ
MON	IITOR	📽 Create Datastore 🖉	Edit √ Mount ⊗ U	nmount × Delete						
\bigcirc	Alarms								-	
슜	Events	Name ^ M	ount Summary	Site Affinity	Pairing Status	Status	Size	Used	Free	
Ê	Activity			No recor	rds found					
anai Edu	LYZE Performance									
PROT	FECT									
Ľ	Replication									
MAN	AGE									
111	System Information									
•	Datastores									
Ţ	Virtual Machines									
$\widehat{}$	Upgrade									
≻_	Web CLI									

Étape 2. Créez un data store et sélectionnez sa taille. Ensuite, dans l'étape supplémentaire, dans la liste déroulante Affinité du site, sélectionnez l'un des deux sites. puis cliquez sur Créer un data store

Create Datastore				$@\otimes$
Datastore Name				
DS-01				
Size			Block Siz	.e
1	ТВ	Ŧ	8K	*
Site Affinity				
Select Site affinity				^
DC2				
DC1				
(Cancel	c	reate Data	astore

Étape 3. Confirmez l'état du nouveau data store qu'il affiche comme MONTÉ et affiche également son affinité de site.

Datastores Last refreshed at: 02/16/2019 2:41:02										
🗹 Creat	e Datastore	🖊 Edit 🗸 Mount 🛞			↓ ~	Filter				
	Name ^	Mount Summary	Site Affinity	Pairing Status	Status	Size	Used	Free		
	DS-01	MOUNTED	DC1	Unpaired	Normal	1 TB	0 B	1 TB		

Showing 1 - 1 of 1