

Dépannage de la liste de commandes de référence rapide pour l'assistance TAC pour les routeurs IOS-XR

Contenu

[Introduction](#)

[Utilisation](#)

[ASR9K - Classique](#)

[ASR9K - eXR](#)

[Plates-formes NCSxxxx et Whitebox](#)

[CRS](#)

[Cisco 8xxx](#)

Introduction

Ce document décrit l'ensemble générique de commandes à collecter auprès des routeurs Cisco IOS®-XR au moment de/après un problème pour les cas TAC.

Utilisation

La liste des commandes peut être collée à l'interface de ligne de commande du routeur exactement comme indiqué sans modification. Certaines commandes peuvent être erronées si les fonctionnalités qui correspondent ne sont pas implémentées. Il s'agit d'un résultat attendu et ne pose aucun problème.

Cette liste peut être copiée/collée dans votre routeur. Activez simplement la journalisation sur votre client **ssh/telnet** à capturer.

ASR9K - Classique

```
term length 0 show platform admin show platform show install active summary show version show hw-module fpd location all show diag show logging show install log show running admin show running show configuration failed show configuration commit changes all show configuration history show configuration failed startup show history show cli history detail admin show environment admin show led show pfm location all show processes show processes cpu show processes blocked location all show watchdog memory-state show context location all show controllers np counters all show drops show redundancy show redundancy summary show snmp mib access show snmp interface show interfaces description show ospf neighbor show bgp sessions show bgp summary show rib update-groups show tcp brief show l2vpn xconnect show mpls traffic-eng tunnels show bfd session show virtual-service list
```

ASR9K - eXR

```
term length 0 show platform show install active summary show version show hw-module fpd show
```

```
diag show logging show install log show running admin show running show configuration failed  
show configuration commit changes all show configuration history show configuration failed  
startup show history show cli history detail admin show environment admin show led show pfm  
location all show processes show processes cpu show processes blocked location all show watchdog  
memory-state show context location all show controllers np counters all show drops show  
redundancy show redundancy summary show snmp mib access show snmp interface show interfaces  
description show ospf neighbor show bgp sessions show bgp summary show rib update-groups show  
tcp brief show l2vpn xconnect show mpls traffic-eng tunnels show bfd session
```

Plates-formes NCSxxxx et Whitebox

C'est le cas pour toutes les plates-formes NCS, par exemple, mais pas uniquement pour NCS6K, NCS5K, NCS55xx, NCS540 et NCS560.

```
term length 0 show platform admin show platform show inventory show install active summary show  
version show hw-module fpd show diag show logging show install log show running admin show  
running show configuration failed show configuration commit changes all show configuration  
history show configuration failed startup show history show cli history detail show environment  
admin show environment show led admin show led show alarms brief system active show asic-errors  
all detail location 0/RP0/CPU0 show asic-errors all detail location 0/0/CPU0 show processes show  
processes cpu show processes blocked location all show watchdog memory-state show context  
location all show redundancy show redundancy summary show snmp mib access show snmp interface  
show interfaces description show ospf neighbor show bgp sessions show bgp summary show rib  
update-groups show tcp brief show l2vpn xconnect show mpls traffic-eng tunnels show bfd session
```

CRS

```
term length 0 show platform admin show platform show install active summary show version show  
hw-module fpd location all show diag show logging show install log show running admin show  
running show configuration failed show configuration commit changes all show configuration  
history show configuration failed startup show history show cli history detail admin show  
environment admin show led show processes show processes cpu show processes blocked location all  
show watchdog memory-state show context location all show redundancy show redundancy summary  
show snmp mib access show snmp interface show interfaces description show ospf neighbor show bgp  
sessions show bgp summary show rib update-groups show tcp brief show l2vpn xconnect show mpls  
traffic-eng tunnels show bfd session
```

Cisco 8xxx

```
term length 0 show platform show install active summary show version show hw-module fpd show  
diag show logging show install log show running show configuration failed show configuration  
commit changes all show configuration history show configuration failed startup show history  
show cli history detail show environment show led show processes show processes cpu show  
processes blocked location all show watchdog memory-state show context location all show reboot  
history show redundancy show redundancy summary show snmp mib access show snmp interface show  
interfaces description show ospf neighbor show bgp sessions show bgp summary show rib update-  
groups show tcp brief show l2vpn xconnect show mpls traffic-eng tunnels show bfd session
```