Catalyst 스위치 간 802.1Q 트렁킹 구성

목차

소개 사전 요구 사항 요구 사항 사용되는 구성 요소 배경 정보 Catalyst 구성 요소 배경 이론 구성 네트워크 다이어그램 설정 다음을 확인합니다. 샘플 show 명령 출력 Catalyst 3560 Switch Catalyst 6500 Switch 문제 해결 관련 정보

소개

이 문서에서는 Cisco IOS^{® Software}를 실행하는 Cisco Catalyst 스위치 간의 IEEE 802.1Q(dot1q) 트 렁킹의 차이점에 대해 설명합니다.

사전 요구 사항

요구 사항

이 컨피그레이션을 시도하기 전에 다음 요구 사항을 충족해야 합니다.

- IEEE 802.1Q 트렁킹 지식
- CLI(Command Line Interface)를 사용하는 Catalyst 3560 및 Catalyst 6500/6000 Series 스위치 의 구성에 대한 지식

사용되는 구성 요소

이 문서의 정보는 다음 소프트웨어 및 하드웨어 버전을 기반으로 합니다.

- Cisco IOS Software 릴리스 12.2(25)SEA를 실행하는 Catalyst 3560 스위치
- Cisco IOS Software 릴리스 12.1(26)E1을 실행하는 Catalyst 6509 스위치

이 문서의 정보는 특정 랩 환경의 디바이스를 토대로 작성되었습니다. 이 문서에 사용된 모든 디바 이스는 초기화된(기본) 컨피그레이션으로 시작되었습니다. 현재 네트워크가 작동 중인 경우 모든 명령의 잠재적인 영향을 미리 숙지하시기 바랍니다.

배경 정보

이 문서에서는 Cisco IOS^{® Software}를 실행하는 Cisco Catalyst 3550/3560/3750 스위치와 Cisco IOS Software를 실행하는 Catalyst 6500/6000 Series 스위치 또는 Catalyst 4500/4000 Series 스위치 간 의 IEEE 802.1Q(dot1q) 트렁킹 샘플 구성을 제공합니다. 트렁킹은 두 디바이스 간의 포인트 투 포 인트 링크를 통해 여러 VLAN의 트래픽을 전달하는 방법입니다.

이더넷 트렁킹을 구현할 수 있는 두 가지 방법은 다음과 같습니다.

- ISL(Inter-Switch Link Protocol)—Cisco 전용 프로토콜
- 802.1Q IEEE 표준

Catalyst 구성 요소

이 문서의 Catalyst 3560 구성은 Cisco IOS 소프트웨어를 실행하는 Catalyst 3550/3750 스위치에도 적용할 수 있습니다. 이 문서의 Catalyst 6500/6000 구성은 Cisco IOS Software를 실행하는 Catalyst 4500/4000 Series 스위치에도 적용됩니다.

참고: 다양한 Catalyst 스위치에서 지원되는 트렁킹 방법에 대한 자세한 내용은 다음 문서를 참조하십시오.

• Catalyst <u>스위치에서 트렁킹을 구현하기 위한 시스템 요구 사항</u>

참고: 이 문서에는 스위치의 컨피그레이션 파일과 관련 샘플의 출력만 포함됩니다 show 명령 을 사용합니다. Catalyst 스위치 간에 802.1Q 트렁크를 구성하는 방법에 대한 자세한 내용은 다음 문서를 참조하십시오.

- <u>VLAN 구성 섹션</u>의 VLAN <u>트렁크 구성</u>—Catalyst 3560 series 스위치
- <u>레이어 2 이더넷 인터페이스</u> 구성의<u>VLAN 트렁크 섹션 이해</u> Cisco IOS 소프트웨어를 실행하 는 Catalyst 4500 Series 스위치

배경 이론

IEEE 802.1Q는 내부 태깅 메커니즘을 사용합니다. 트렁킹 장치는 프레임이 속하는 VLAN을 식별하 기 위해 4바이트 태그를 삽입하고 FCS(Frame Check Sequence)를 재계산한다. 자세한 내용은 다 음 문서를 참조하십시오.

- <u>InterSwitch 링크 및 IEEE 802.1Q 프레임 형식</u>
- <u>Cisco CatOS 시스템 소프트웨어를 사용한 802.1Q 캡슐화를 사용하는 Catalyst 4500/4000,</u> <u>5500/5000 및 6500/6000 Series 스위치 간 트렁킹의 802.1Q 트렁킹</u> 섹션<u>의 기본 특성</u>

참고: 다음은 이 컨피그레이션에서 기억해야 할 중요한 참고 사항입니다.

• Catalyst 3550/3560/3750 시리즈 스위치의 모든 이더넷 인터페이스는 802.1Q 및 ISL 캡슐화를 지원할 수 있습니다. Catalyst 3550 스위치의 이더넷 인터페이스는 기본적으로 레이어 2(L2) 포

트입니다.

- Catalyst 6500/6000 Series 스위치의 모든 이더넷 포트는 802.1Q 및 ISL 캡슐화를 지원할 수 있 습니다.
- 기본적으로 Cisco IOS 소프트웨어를 실행하는 Catalyst 4500 Series 스위치는 ISL 및 802.1Q 트렁킹 모드를 모두 지원합니다. WS-X4418-GB 및 WS-X4412-2GB-T 모듈의 기가비트 포트 차단을 제외한 모든 인터페이스에서 지원됩니다. 이러한 포트는 ISL을 지원하지 않으며 802.1Q 트렁킹만 지원합니다. 포트 3에서 18은 WS-X4418-GB 모듈의 기가비트 포트를 차단하 고 있습니다. 포트 1에서 12는 WS-X4412-2GB-T 모듈의 기가비트 포트를 차단하고 있습니다.

참고: 백플레인에 대한 연결이 오버서브스크립션된 경우 포트는 차단 포트입니다.

- Catalyst 6500/6000과 Catalyst 4500 플랫폼의 주요 차이점은 기본 인터페이스 구성입니다. Cisco IOS Software를 실행하는 Catalyst 6500/6000 스위치에는 기본적으로 레이어 3(L3) 라우 팅 포트인 종료 모드의 인터페이스가 있습니다. Cisco IOS Software를 실행하는 Catalyst 4500/4000 스위치에는 모든 인터페이스가 활성화되어 있습니다. 인터페이스는 기본적으로 L2 스위치 포트입니다.
- Catalyst 3750 스위치의 트렁크 인터페이스에서 802.1Q 캡슐화를 사용할 경우 런트는 show interface q-tag를 포함하는 61~64바이트인 유효한 802.1Q 캡슐화된 패킷이 Catalyst 3750 스위 치에 의해 크기가 작은 프레임으로 계산되므로 이러한 패킷이 올바르게 전달되더라도 출력이 향상됩니다. 자세한 내용은 Cisco 버그 ID CSCec를 <u>참조하십시오14238</u>.

참고: 등록된 Cisco 사용자만 내부 Cisco 툴 및 정보에 액세스할 수 있습니다.

구성

이 섹션에는 이 문서에서 설명하는 기능을 구성하기 위한 정보가 표시됩니다.

참고: 이 섹션에서 사용되는 명령에 대한 자세한 내용을 보려면 명령 조회 도구를 사용하십시 오.

참고: 등록된 Cisco 사용자만 내부 Cisco 툴 및 정보에 액세스할 수 있습니다.

네트워크 다이어그램

이 문서에서는 이 네트워크 설정을 사용합니다.

참고: Catalyst 3560의 기가비트 이더넷 인터페이스는 10/100/1000Mbps로 협상된 이더넷 인 터페이스입니다. 따라서 Catalyst 3560의 기가비트 포트는 이 네트워크 다이어그램에서 Catalyst 6500의 고속 이더넷(100Mbps) 포트에 연결됩니다.



이어그램

설정

이 문서에서는 다음 설정을 사용합니다.

- <u>Catalyst 3560 Switch</u>
- Catalyst 6500 Switch

Catalyst 3560 Switch

```
!--- Notice: This example creates VLAN 1 and VLAN 2
!--- and sets the VLAN Trunk Protocol (VTP) mode to transparent. Use your
!--- network as a basis and set the VTP mode accordingly. For more details,
!--- refer to <u>Configuring VLANs</u>. version 12.2 no service pad service timestamps debug uptime service
timestamps log uptime no service password-encryption ! hostname 3560 ! !--- This is the privileged mode
password for the example. enable password mysecret ! ip subnet-zero ! vtp mode transparent ! !--- VLAN
created. This is visible only when you set VTP mode
!--- to transparent.
vlan 2 ! ! !--- The Gigabit Ethernet interface on the Catalyst 3560 is a 10/100/1000 Mbps
!--- negotiated Ethernet interface. Therefore, the Gigabit port on the
!--- Catalyst 3560 is connected to a Fast Ethernet port on the Catalyst 6500.
!--- Configure the trunk on the Gigabit Ethernet 0/1 interface. interface GigabitEthernet0/1 !--- Confi
trunk encapsulation as dotlq.
!--- For details on trunking, refer to <u>Configuring VLANs</u>. switchport trunk encapsulation dotlg
!--- Enable trunking on the interface. switchport mode trunk
no ip address
snmp trap link-status
 !
 !
!--- Interfaces Gigabit Ethernet 0/2 through 0/5 are placed in VLAN 1.
!--- In order to configure the interface as an L2 port,
!--- refer to the Configuring Ethernet Interfaces section
!--- of Configuring Interface Characteristics. All L2 ports are placed
!--- in VLAN 1, by default. interface GigabitEthernet0/2 switchport mode access
```

네트워크 다

snmp trap link-status ! interface GigabitEthernet0/3 switchport mode access no ip address snmp trap link-status ! ! interface GigabitEthernet0/4 switchport mode access no ip address snmp trap link-status ! interface GigabitEthernet0/5 switchport mode access no ip address snmp trap link-status ! !

!--- Interfaces Gigabit Ethernet 0/6 through 0/12 are placed in VLAN 2. interface GigabitEthernet0/6
switchport access vlan 2

switchport mode access
no ip address
snmp trap link-status
!

!--- Output suppressed. ! interface GigabitEthernet0/12 switchport access vlan 2
switchport mode access
no ip address
snmp trap link-status
!
interface Vlan1

!--- This is the IP address for management. ip address 10.1.1.1 255.255.255.0 ! ip classless ip http se ! line con 0 transport input none line vty 0 4 !--- This is the privileged mode password for the exampl password mysecret login line vty 5 15 login ! end

Catalyst 6500 Switch

!--- Notice: This example creates VLAN 1 and VLAN 2 and sets !--- the VTP mode to transparent. Use your network as a basis and set the VTP !--- mode accordingly. For more details, refer to <u>Configuring VLANs</u>. Current configuration : 4812 bytes version 12.1 service timestamps debug uptime service timestamps log uptime no service password-encrypti hostname Cat6500 ! vtp mode transparent ip subnet-zero ! ! mls flow ip destination mls flow ipx destina !--- This is the privileged mode password for the example. enable password mysecret ! redundancy mode r plus main-cpu auto-sync running-config auto-sync standard ! ! !--- This enables VLAN 2. vlan 2 ! ! inte GigabitEthernet1/1 no ip address shutdown ! interface GigabitEthernet1/2 no ip address shutdown ! !---Gigabit Ethernet interface on the Catalyst 3560 is a 10/100/1000 Mbps !--- negotiated Ethernet interface. Therefore, the Gigabit port on the Catalyst 3560 !--- is connected to a Fast Ethernet port on the Catalyst 6500. interface FastEthernet3/1 no ip address You must issue the switchport command once, !--- without any keywords, in order to configure the interface as an L2 port for the !--- Catalyst 6500 series switch that runs Cisco IOS Software. !--- On a Catalyst 4500 series switch that runs Cisco IOS Software, all ports are L2 !--- ports by default. Therefore, if you do not change the default configuration, !--- you do not need to issue the switchport command. !--- For more details, refer to Configuring Layer 2 Ethernet Interfaces !--- for the Catalyst 4500 series switch that runs Cisco IOS Software. switchport

!--- Configure trunk encapsulation as dot1q.
!--- For more details on trunking, refer to

!--- Configuring LAN Ports for Layer 2 Switching for the Catalyst 6500 series switch

```
!--- that runs Cisco IOS Software, or Configuring Layer 2 Ethernet Interfaces
!--- for the Catalyst 4500/4000 series switch that runs Cisco IOS Software. switchport trunk encapsulat
dot1a
!--- Enable trunking on the interface. switchport mode trunk
1
!--- Configure interfaces Fast Ethernet 3/2 through 3/24 to be in access mode.
!--- By default, all access ports are configured in VLAN 1.
!--- For more details, refer to Configuring LAN Ports for Layer 2 Switching
!--- for the Catalyst 6500 series switch that runs Cisco IOS Software, or
!--- <u>Configuring Layer 2 Ethernet Interfaces</u> for the Catalyst 4500/4000 series
!--- switch that runs Cisco IOS Software. interface FastEthernet3/2 no ip address switchport
switchport mode access
1
!--- Output suppressed. ! interface FastEthernet3/24 no ip address switchport
switchport mode access
!--- Fast Ethernet 3/25 through 3/48 are placed in VLAN 2.
!--- For more details, refer to Configuring LAN Ports for Layer 2 Switching
!--- for the Catalyst 6500 series switch that runs Cisco IOS Software,
!--- or Configuring Layer 2 Ethernet Interfaces for the Catalyst 4500/4000
!--- series switch that runs Cisco IOS Software. interface FastEthernet3/25 no ip address switchport
switchport access vlan 2
switchport mode access
 1
!--- Output suppressed. ! interface FastEthernet3/48 no ip address switchport
switchport access vlan 2
switchport mode access
1
1
interface Vlan1
```

!--- This is the IP address for management. ip address 10.1.1.2 255.255.255.0 ! ! ip classless no ip ht
server ! ! ip classless ip http server ! line con 0 exec-timeout 0 0 transport input none line vty 0 4
This is the Telnet password for the example. password mysecret login ! end

참고: 존재하지 않는 VLAN에 인터페이스를 할당하면 VLAN 데이터베이스에서 VLAN을 생성 할 때까지 인터페이스가 종료됩니다. 자세한 내용은 VLAN 구성의 <u>이더넷 VLAN 생성 또는 수</u> <u>정</u> 섹션을 <u>참조하십시오</u>.

다음을 확인합니다.

설정이 올바르게 작동하는지 확인하려면 이 섹션을 활용하십시오.

OIT(Output Interpreter Tool)는 특정 show 명령을 사용합니다. OIT를 사용하여 show 명령 출력입니다.

참고: 등록된 Cisco 사용자만 내부 Cisco 툴 및 정보에 액세스할 수 있습니다.

Catalyst 3550/3560/3750/6500/4500 스위치에서 다음 명령을 사용합니다.

- 인터페이스interface_typemodule/porttrunk 표시
- show interface_typemodule/portswitchport王트
- vlan 표시
- vtp 상태 표시

샘플 show 명령 출력

Catalyst 3560 Switch

• show interfaces interface_type module/por trunk - 이 명령은 트렁크를 통해 트래픽을 전달할 수 있는 VLAN 번호와 함께 인터페이스의 트렁크 컨피그레이션을 표시합니다. 3560# show interface gigabitethernet 0/1 trunk

```
Port
          Mode
                       Encapsulation Status
                                                 Native vlan
 Gi0/1
                       802.1q trunking
          on
                                                  1
 Port.
          Vlans allowed on trunk
          1 4094
 Gi0/1
 Port
          Vlans allowed and active in management domain
 Gi0/1
          1 - 2
          Vlans in spanning tree forwarding state and not pruned
 Port.
 Gi0/1
           1 - 2
• show interfaces interface_type module/port switchport - 이 명령은 인터페이스의 스위치 포트
 컨피그레이션을 표시합니다.디스플레이에서 Operational Mode() 및 Operational Trunking
 Encapsulation() 선택합니다.
 3560# show interface gigabitethernet 0/1 switchport
 Name: Gi0/1
 Switchport: Enabled
 Administrative Mode: trunk
 Operational Mode: trunk
 Administrative Trunking Encapsulation: dot1q
 Operational Trunking Encapsulation: dot1q
 Negotiation of Trunking: On
 Access Mode VLAN: 1 (default)
 Trunking Native Mode VLAN: 1 (default)
 Voice VLAN: none
 Administrative private-vlan host-association: none
 Administrative private-vlan mapping: none
 Administrative private-vlan trunk native VLAN: none
 Administrative private-vlan trunk encapsulation: dot1g
 Administrative private-vlan trunk normal VLANs: none
 Administrative private-vlan trunk private VLANs: none
 Operational private-vlan: none
 Trunking VLANs Enabled: ALL
 Pruning VLANs Enabled: 2-1001
 Capture Mode Disabled
 Capture VLANs Allowed: ALL
 Protected: false
 Unknown unicast blocked: disabled
 Unknown multicast blocked: disabled
 Appliance trust : none
• show vlan - 이 명령은 특정 VLAN에 속하는 VLAN 및 포트에 대한 정보를 제공합니다.
 3560# show vlan
```

VLAN Name Status Ports

1 default

2 VLAN0002

active Gi0/2, Gi0/3, Gi0/4, Gi0/5 active Gi0/6, Gi0/7, Gi0/8, Gi0/9 Gi0/10, Gi0/11, Gi0/12

1002 fddi-defaultact/unsup1003 token-ring-defaultact/unsup1004 fddinet-defaultact/unsup1005 trnet-defaultact/unsup

!--- Output suppressed.

참고: 출력에 표시되는 포트는 액세스 포트뿐입니다. 그러나 트렁크로 구성되고 '연결되지 않음 ' 상태인 포트는 show vlan 출력에도 **표시됩니다**.

• show vtp status - 이 명령은 VTP 관리 도메인, 상태 및 카운터에 대한 일반적인 정보를 표시합니다.

3560# show vtp status VTP Version : 2 Configuration Revision : 0 Maximum VLANs supported locally : 1005 Number of existing VLANs : 6 VTP Operating Mode : Transparent VTP Domain Name : VTP Pruning Mode : Disabled VTP V2 Mode : Disabled VTP Traps Generation : Disabled MD5 digest : 0x4A 0x55 0x17 0x84 0xDB 0x99 0x3F 0xD1 Configuration last modified by 10.1.1.1 at 0-0-00 00:00:00 3560# ping 10.1.1.2

Type escape sequence to abort. Sending 5, 100-byte ICMP Echos to 10.1.1.2, timeout is 2 seconds: !!!!! Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/4 ms 3560#

Catalyst 6500 Switch

• show interfaceinterface_type module/porttrunk - 이 명령은 트렁크를 통해 트래픽을 전달할 수 있는 VLAN 번호와 함께 인터페이스의 트렁크 컨피그레이션을 표시합니다.

Cat6500# show interfaces fastethernet 3/1 trunk Mode Encapsulation Status Native vlan Port Fa3/1 802.1q trunking 1 on Vlans allowed on trunk Port 1 4094 Fa3/1 Vlans allowed and active in management domain Port Fa3/1 1-2 Port Vlans in spanning tree forwarding state and not pruned Fa3/1 1-2

• show interfaces interface_typemodule/portswitchport - 이 명령은 인터페이스의 스위치 포트 컨 피그레이션을 표시합니다. 디스플레이에서 Operational Mode() 및 Operational Trunking Encapsulation() 선택합니다. cat6500# show interface fastethernet 3/1 switchport Name: Fa3/1 Switchport: Enabled Administrative Mode: trunk Operational Mode: trunk Administrative Trunking Encapsulation: dot1q Operational Trunking Encapsulation: dot1q Negotiation of Trunking: On Access Mode VLAN: 1 (default) Trunking Native Mode VLAN: 1 (default) Voice VLAN: none Administrative private-vlan host-association: none Administrative private-vlan mapping: none Administrative private-vlan trunk native VLAN: none Administrative private-vlan trunk encapsulation: dot1q Administrative private-vlan trunk normal VLANs: none Administrative private-vlan trunk private VLANs: none Operational private-vlan: none Trunking VLANs Enabled: ALL Pruning VLANs Enabled: 2-1001 Capture Mode Disabled Capture VLANs Allowed: ALL

• show vlan - 이 명령은 특정 VLAN에 속하는 VLAN 및 포트에 대한 정보를 제공합니다.

Cat6500# show vlan

| VLAN | Name | Status | Ports |
|----------------------|--|-------------------------------------|--|
| 1 | default | active | Fa3/2, Fa3/3, Fa3/4, Fa3/5 Fa3/6, Fa3/7, Fa3/8, Fa3/9 Fa3/10, Fa3/11, Fa3/12, Fa3/13 Fa3/14, Fa3/15, Fa3/16, Fa3/17 Fa3/18, Fa3/19, Fa3/20, Fa3/21 Fa3/22, Fa3/23, Fa3/24 |
| 2 | VLAN0002 | active | Fa3/25,Fa3/26,Fa3/27,Fa3/28Fa3/29,Fa3/30,Fa3/31,Fa3/32Fa3/33,Fa3/34,Fa3/35,Fa3/36Fa3/37,Fa3/38,Fa3/39,Fa3/40Fa3/41,Fa3/42,Fa3/43,Fa3/44Fa3/45,Fa3/46,Fa3/47,Fa3/48 |
| 1002 | fddi-default | act/unsup |) |
| 1003 1004 1005 | token-ring-default fddinet-default trnet-default | act/unsup act/unsup act/unsup | |

!--- Output suppressed.

참고: 표시되는 포트는 레이어 2 비 트렁크(액세스) 포트로 구성한 포트뿐입니다. 트렁크로 구 성되고 '연결되지 않음' 상태의 포트도 show vlan **출력에** 표시됩니다. 자세한 내용은 레이어 2 스위칭을 *위한 LAN 포트 구성*의 레이어 2 스위칭을 <u>위한 LAN 인터페이스 구성 섹션을 참조하</u> 십시오.

• show vtp status - 이 명령은 VTP 관리 도메인, 상태 및 카운터에 대한 일반적인 정보를 표시합니다.

Cat6500# **show vtp status** VTP Version

```
Configuration Revision
                             : 0
 Maximum VLANs supported locally : 1005
 Number of existing VLANs : 6
VTP Operating Mode
                                  : Transparent
VTP Domain Name
                                   :
 VTP Pruning Mode
                                  : Disabled
 VTP V2 Mode
                                   : Disabled

      VTP Traps Generation
      : Disabled

      VTP direct
      : 0xBF 0x86

                                   : 0xBF 0x86 0x94 0x45 0xFC 0xDF 0xB5 0x70
 Configuration last modified by 10.1.1.2 at 0-0-00 00:00:00
• 핑
 Cat6500# ping 10.1.1.1
```

Type escape sequence to abort. Sending 5, 100-byte ICMP Echos to 10.1.1.1, timeout is 2 seconds: !!!!! Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/4 ms

문제 해결

현재 이 구성에 사용할 수 있는 특정 문제 해결 정보가 없습니다. 트렁킹 및 802.1Q 구성과 관련된 일반적인 문제는 <u>Cisco CatOS 시스템 소프트웨어</u>를 사용한 <u>802.1Q 캡슐화를 사용하는 Catalyst</u> <u>4500/4000, 5500/5000 및 6500/6000 Series 스위치 간 트렁킹</u> 문서<u>의</u> <u>공통 오류 섹션</u>을 참조하십 시오.

관련 정보

- PortFast 및 기타 명령을 사용하여 워크스테이션 시작 연결 지연 해결
- Catalyst 3560 Series 스위치 컨피그레이션 가이드
- Catalyst 4500 Series 스위치 컨피그레이션 가이드
- Catalyst 6500 Series 스위치 컨피그레이션 가이드
- Cisco 기술 지원 및 다운로드

이 번역에 관하여

Cisco는 전 세계 사용자에게 다양한 언어로 지원 콘텐츠를 제공하기 위해 기계 번역 기술과 수작업 번역을 병행하여 이 문서를 번역했습니다. 아무리 품질이 높은 기계 번역이라도 전문 번역가의 번 역 결과물만큼 정확하지는 않습니다. Cisco Systems, Inc.는 이 같은 번역에 대해 어떠한 책임도 지지 않으며 항상 원본 영문 문서(링크 제공됨)를 참조할 것을 권장합니다.