Fazer upload e download de arquivos para o SO com apenas a opção de disco removível KVM

Contents

Introduction Fazer upload e download de arquivos

Introduction

Este documento descreve como carregar e fazer download de arguivos para o sistema operacional (SO) com apenas a opção de disco removível do teclado/vídeo/mouse (KVM) virtual. A opção Disco removível vMedia pode ser usada para operações de leitura/gravação. Isso é útil no cenário em que você precisa copiar informações do SO, mas o único acesso disponível é via KVM (o adaptador de rede não funciona, nenhum acesso físico para conectar um pen drive USB, e assim por diante).

Fazer upload e download de arquivos

- _ 🗆 🗙 A File View Macros Tools Power Virtual Media Help - 0 X Create Image ✓ Activate Virtual Devices Server Man • 🔊 | 🚩 м Map CD/DVD ... 🗸 new enic.img Mapped to Removable Disk Map Floppy ... Local Ser All Servers Configure this local server File and Storage Services 2 Add roles and features 3 Add other servers to manage 4 Create a server group
- 1. Escolha Virtual Media > Create Image para criar uma imagem.

2. Escolha uma pasta de origem na máquina (pode ser uma pasta em branco, pois você só precisa recuperar arquivos da máquina):



ile View Macros Tools Pov	wer Virtual Media Hel	p			
Ъ.		Server Manager			_ 0 ×
Server N	1anager • Dashbo	ard	• © 🖡	Manage Tools	View Help
Dashboard Local Server	WELCOME TO SERVER	/IANAGER			
All Servers		1 Configure this local server			
	QUICK START	2 Add roles and features			
	WHAT'S NEW	 3 Add other servers to manage 4 Create a server group 			
	A	Create Image from Folder	x		
	Create a New Ima	ge File From a Source Folder			Hide
	New Image File:	C:\Users\briamorr.SV-JUMP-WIN12\Desktop\New folder	Browse		
		Create Image	Cancel		
		$\widehat{\mathbf{A}}$			
		BPA results BPA results			
		3/2/2016 10/99 AM			

3. Escolha Virtual Media > Map Removable Disk para mapear o disco removível.

File View Macros Tools Power	Virtual Media Help		
īn -	Create Image	Server Manager	- 0 X
Server Mana	🖌 Activate Virtual Devices	🗸 (3) 📕 Manage Tools	View Help
	Map CD/DVD		
Dashboard V	Map Removable Disk		
Local Server	Map Floppy		
All Servers	1 Confi	iqure this local server	
File and Storage Services ▷	Com		
	QUICK START	d roles and features	
	3 Ad	d other servers to manage	
	WHAT'S NEW 4 Cre	eate a server group	
	LEARN MORE		Hide

4. Escolha o arquivo .img que você acabou de criar.

A	<u> </u>		
ile View Macros Tools Pow	ver Virtual Me 🔺	Virtual Media - Map Removable Disk	
🚡	anager • C	Drive/Image File: enictool.img Browse	- 6 X
Dashboard Local Server All Servers File and Storage Services	WELCOME TO	Read Only Map Device Cancel	
		 Add roles and features Add other servers to manage 	

5. Adicione conteúdo ao disco removível conforme necessário (registros, despejos de memória, etc.).

File View Macros Tools Powe	er Virtual Media Help					
Tao 1		Server Manager				_ 0 X
Server Ma	anager • Dashboard			• © 🏲	Manage Tools	View Help
III Dashboard	WELCOME TO SERVER MANAGER					
Local Server If All Servers File and Storage Services P	QUICK START	e this local server				
- I 🕞 💷 = I	Drive Tools	ENICTOOL (D:)	×			
File Home S	Share View Manage		~ 😧			
€ ⊚ - ↑ -	This PC ENICTOOL (D:)	✓ ♂ Search ENICTOOL (D:)	٩			
	Name	Date modified Type	Size			
Desktop	enictool	4/29/2016 4-42 PM File folder				Hide
Downloads	choppy	5/1/2016 8:19 AM Text Document				1100
🔛 Recent places	choppy1	5/1/2016 8:19 AM Text Document				
	choppy2	5/1/2016 8:20 AM Text Document				
p This PC	Choppy3	5/1/2016 8:20 AM Text Document				
📜 Desktop	Choppy4	5/1/2016 8:21 AM Text Document				
Documents	Choppy5	5/1/2016 8:30 AM Text Document		1		
🗼 Downloads	Сhoppy6	5/1/2016 8:30 AM Text Document				
🚺 Music	Choppy7	5/1/2016 8:31 AM Text Document				
崖 Pictures	choppy8-bsod	5/1/2016 8:32 AM Text Document				

6. Escolha Virtual Media > <filename> Mapped to Removable Disk para desmapear o vMedia.

File View Macros Tools Power	Virtual Media Help				
Ē.	Create Image	rver Manager	_ 0 X		
Server Mana	🗸 Activate Virtual Devices	🗸 (🕄 🚩 Manage Tools Vie			
00	Map CD/DVD				
U. Dashboard	✓ enictool.img Mapped to Removable Disk				
Local Server	Map Floppy				
 All Servers ■ File and Storage Services ▷ 	1 Configure this loc	al server			
	QUICK START 2 Add roles and feat 3 Add other servers	ures to manage			
	WHAT'S NEW 4 Create a server gro	pup			

7. Abra o arquivo .img com um programa como 7-Zip ou monte em uma máquina Linux como uma imagem vfat.

]# mount -t vfat -o loop,ro,noexec enictool.img /home/vdisk									
]# ls /home/vdisk									
log?	choppy3.log	choppy4.log	Choppy5.log	Choppy6.log	Choppy7.log	choppy8-bsod.log	choppy.log			
]# umount	/home/vdisk								
	1#									