

识别SSD/HDD供应商型号和推进固件

目录

[简介](#)

[UCSM受管理设备](#)

[UCS管理器Web接口](#)

[命令行界面 \(CLI\)](#)

[UCSM Visore](#)

[C系列独立设备](#)

[Intersight](#)

简介


此条款为获取特定型号和运行物理磁盘版本提供管理员说明在UCS环境的。它包括UCS管理器 (UCSM)受管理设备、C系列在Intersight要求的独立设备和设备的不同的说法。

UCSM受管理设备

使用一些不同的说法，对于UCSM管理的设备，管理员能确定驱动的固件。

UCS管理器Web接口

导航对设备>固件管理>安装固件。在此接口，思科产品标识符(PID)显示而不是供应商型号。下面报道的其他方法允许如果需要，过滤在供应商型号。

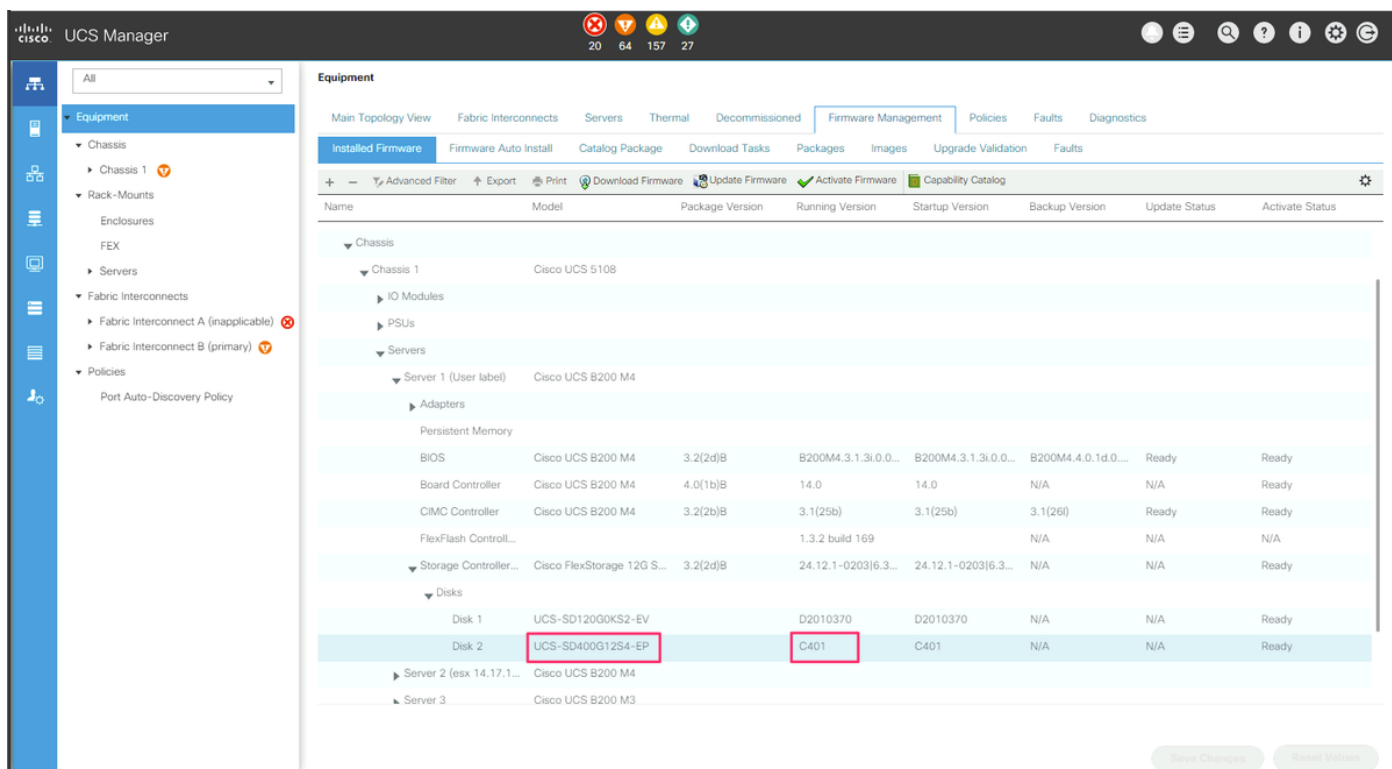

The screenshot shows the UCS Manager interface with the 'Firmware Management' tab selected. The 'Installed Firmware' section is active, displaying a table of firmware details for various components. The table has columns for Name, Model, Package Version, Running Version, Startup Version, Backup Version, Update Status, and Activate Status. Two rows are highlighted with red boxes: 'Disk 2' with model 'UCS-SD400G12S4-EP' and running version 'C401', and 'Server 2 (esx 14.17.1...)' with running version 'C401'.

Name	Model	Package Version	Running Version	Startup Version	Backup Version	Update Status	Activate Status							
▼ Chassis														
▼ Chassis 1 Cisco UCS 5108														
▶ IO Modules														
▶ PSUs														
▼ Servers														
▼ Server 1 (User label) Cisco UCS B200 M4														
▶ Adapters														
Persistent Memory														
BIOS	Cisco UCS B200 M4	3.2(2d)B	B200M4.3.1.3i.0.0...	B200M4.3.1.3i.0.0...	B200M4.4.0.1d.0...	Ready	Ready							
Board Controller	Cisco UCS B200 M4	4.0(1b)B	14.0	14.0	N/A	N/A	Ready							
ClMC Controller	Cisco UCS B200 M4	3.2(2b)B	3.1(25b)	3.1(25b)	3.1(26i)	Ready	Ready							
FlexFlash Controll...			1.3.2 build 169		N/A	N/A	N/A							
▼ Storage Controller...	Cisco FlexStorage 12G S...	3.2(2d)B	24.12.1-0203j6.3...	24.12.1-0203j6.3...	N/A	N/A	Ready							
▼ Disks														
Disk 1	UCS-SD120G0K52-EV		D2010370	D2010370	N/A	N/A	Ready							
Disk 2	UCS-SD400G12S4-EP		C401	C401	N/A	N/A	Ready							
▶ Server 2 (esx 14.17.1...								Cisco UCS B200 M4						
▶ Server 3 Cisco UCS B200 M3														

命令行界面 (CLI)

管理员能也使用CLI得到型号和运行版本。例如，希望的管理员识别[FN70545](#)的影响的设备会使用下面命令。

```
UCS-Domain-B# show server inventory expand | egrep "(^Server|Local Disk [0-9]|Model:
(LT0400MO|LT1600MO)|Device Version: [A-Z][0-9]{3})"
Server 1/1:
    Local Disk 1:
    Local Disk 2:
        Model: LT0400MO
        Device Version: C401
Server 1/2:
    Local Disk 1:
        Device Version: A005
    Local Disk 2:
        Device Version: A005
Server 1/3:
    Local Disk 1:
    Local Disk 2:
        Device Version: A005
Server 1/4:
Server 1/5:
Server 1/6:
Server 1/7:
    Local Disk 1:
    Local Disk 2:
    Local Disk 3:
    Local Disk 4:
Server 1/8:
Server 1:
```

UCSM Visore

管理员能使用UCSM Visore在整个环境间查询。UCSM Visore可以通过点浏览器访问[https://\[UCSM VIP\]/visore.html](https://[UCSM VIP]/visore.html)。输入类或DN的属性的storageLocalDisk，型号和Val1的设备模型。例如，希望的管理员[识别FN70545的影响的设备会输入LT0400MOAND LT1600MO。](#)

