

在F8 CIMC配置实用程序中默认启用自动协商

目录

[简介](#)

[问题](#)

[解决方案](#)

[结论](#)

简介

本文档介绍在使用F8 CIMC配置实用程序在思科集成管理控制器(CIMC)网络模式之间切换时如何解决默认情况下自动协商启用的问题。仅在专用模式下支持自动协商，因此从任何非专用模式切换到专用模式可能会导致此行为。

问题

当您依靠F8实用程序来配置CIMC（尤其是各种网络模式）时，此问题会产生影响。

客户可视性/影响：

您可能会注意到，从非专用网络模式（共享LOM/思科卡/共享LOM扩展）切换到专用网络模式时，自动协商设置默认不启用。

注意：这仅在您使用F8 CIMC配置实用程序更新CIMC设置时可见，并且不影响您使用WebUI更改设置时。

解决方案

使用F8实用程序从共享LOM模式切换到专用模式的步骤如下。

1. 启动服务器并选择**F8**以进入CIMC配置实用程序，如图所示。

```

Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
NIC Properties
NIC mode                               NIC redundancy
Dedicated:      [ ]                   None:           [ ]
Shared LOM:     [X]                   Active-standby: [ ]
Cisco Card:     [ ]                   Active-active:  [X]
Shared LOM Ext: [ ]

IP (Basic)
IPV4:           [X]                   IPV6:          [ ]
DHCP enabled    [ ]
CIMC IP:        172.22.251.72
Prefix/Subnet:  255.255.252.0
Gateway:        172.22.248.1
Pref DNS Server: 0.0.0.0

VLAN (Advanced)
VLAN enabled:   [ ]
VLAN ID:        1
Priority:        0

*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F1>Additional settings

```

注意：您可能必须按F1，这取决于您使用的CIMC版本，以便查看其他配置设置，如图所示。

```

Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
Common Properties
Hostname:      C240-FCH1612V0W4
Dynamic DNS:   [X]
DDNS Domain:

FactoryDefaults
Factory Default: [ ]

Default User(Basic)
Default password:
Reenter password:

Port Properties
Auto Negotiation: [ ]
Speed[1000/100 Mbps]: 100
Duplex mode[half/full]: full

Port Profiles
Reset:         [ ]
Name:

*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F2>PreviousPage

```

注意：在此，您处于共享LOM模式，并且您可以看到自动协商未启用，因为它不是有效设置。

。

当您尝试启用时，它会给您错误，如图所示。

```
Reenter password:
Port Properties
Auto Negotiation:      [ ]
Speed[1000/100 Mbps]: 100
Duplex mode[half/full]: full
Port Profiles
Reset:                 [ ]
Name:

*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F2>PreviousPage

Error: Port Properties SET operation is for Dedicated NIC mode only!
```

2.要返回上一页，请按F1。

然后，选择以下设置以将CIMC切换到专用模式：

- NIC模式>专用
- NIC冗余>无
- Vlan、IPv4或IPv6的使用以及静态与DHCP地址的处理取决于您
- 按F10以保存图像中所示的设置。

```
Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.
*****
NIC Properties
NIC mode                                NIC redundancy
Dedicated:      [X]                    None:           [X]
Shared LOM:     [ ]                    Active-standby: [ ]
Cisco Card:     [ ]                    Active-active:  [ ]
Shared LOM Ext: [ ]

IP (Basic)
IPV4:           [X]          IPV6:  [ ]
DHCP enabled   [ ]
CIMC IP:       172.22.251.72
Prefix/Subnet: 255.255.252.0
Gateway:       172.22.248.1
Pref DNS Server: 0.0.0.0

VLAN (Advanced)
VLAN enabled:  [ ]
VLAN ID:       1
Priority:       0

*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
<F1>Additional settings

Hit the Refresh key in 45 seconds to get the latest network settings.
```

3.确保等待45秒，然后按F5刷新网络设置，如图所示。

Cisco IMC Configuration Utility Version 2.0 Cisco Systems, Inc.

NIC Properties

NIC mode		NIC redundancy	
Dedicated:	<input checked="" type="checkbox"/>	None:	<input checked="" type="checkbox"/>
Shared LOM:	<input type="checkbox"/>	Active-standby:	<input type="checkbox"/>
Cisco Card:	<input type="checkbox"/>	Active-active:	<input type="checkbox"/>
Shared LOM Ext:	<input type="checkbox"/>		

IP (Basic)

IPV4:	<input checked="" type="checkbox"/>	IPV6:	<input type="checkbox"/>
DHCP enabled	<input type="checkbox"/>		
CIMC IP:	172.22.251.72		
Prefix/Subnet:	255.255.252.0		
Gateway:	172.22.248.1		
Pref DNS Server:	0.0.0.0		

VLAN (Advanced)

VLAN enabled:	<input type="checkbox"/>
VLAN ID:	1
Priority:	0

<Up/Down>Selection <F10>Save <Space>Enable/Disable <F5>Refresh <ESC>Exit
<F1>Additional settings

Network settings configured

按F1查看其他设置。现在，它会显示自动协商框（如选中）。

以下是一些快照，显示与1.5(4g)版本固件关联的CIMC配置实用程序的较旧版本。

共享LOM模式如图所示。

```
CIMC Configuration Utility  Version 1.7  Cisco Systems, Inc.
*****
NIC Properties
NIC mode                                NIC redundancy
Dedicated:      [ ]                    None:           [ ]
Shared LOM:     [X]                    Active-standby:[ ]
Cisco Card:     [ ]                    Active-active:  [X]
Shared LOM Ext: [ ]

IPV4 (Basic)                             Factory Defaults
DHCP enabled:   [ ]                    CIMC Factory Default:[ ]
CIMC IP:        10.29.131.127          Default User (Basic)
Subnetmask:     255.255.255.0          Default password:
Gateway:        10.29.131.1           Reenter password:

VLAN (Advanced)                          Port Profile
VLAN enabled:   [ ]                    Reset:         [ ]
VLAN ID:        1                      Name:
Priority:        0

Port Properties
Auto Negotiation:  [ ]
Speed[1000/100 Mbps]:  100
Duplex mode[half/full]: full
*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
Network settings configured
```

专用模式如图所示。

```
CIMC Configuration Utility  Version 1.7  Cisco Systems, Inc.
*****
NIC Properties
NIC mode                                NIC redundancy
Dedicated:      [X]                    None:           [X]
Shared LOM:     [ ]                    Active-standby:[ ]
Cisco Card:     [ ]                    Active-active:  [ ]
Shared LOM Ext: [ ]

IPV4 (Basic)                             Factory Defaults
DHCP enabled:   [ ]                    CIMC Factory Default:[ ]
CIMC IP:        10.29.131.127          Default User (Basic)
Subnetmask:     255.255.255.0          Default password:
Gateway:        10.29.131.1           Reenter password:

VLAN (Advanced)                          Port Profile
VLAN enabled:   [ ]                    Reset:         [ ]
VLAN ID:        1                      Name:
Priority:        0

Port Properties
Auto Negotiation:  [X]
Speed[1000/100 Mbps]:  1000
Duplex mode[half/full]: full
*****
<Up/Down>Selection  <F10>Save  <Space>Enable/Disable  <F5>Refresh  <ESC>Exit
Network settings configured
```

注意：您可以看到自动协商框实际上已勾选。

结论

自动协商设置仅在专用模式下可用。只要设置了有效的专用配置，此设置就会启用自身。