# 在 CUCM 和 CUBE 之间配置选项 Ping

#### 目录

<u>简介</u> <u>先决条件</u> <u>要求的组件</u> <u>背景置</u> <u>验障排除</u>

### 简介

本文档介绍如何在 Cisco Unified Communications Manager (CUCM) 和 Cisco Unified Border Element (CUBE) 之间启用功能选项 Ping。

由 Cisco TAC 工程师 Luis J Esquivel Blanco 提供。

### 先决条件

Cisco 建议您了解以下主题:

- Cisco Call Manager 管理
- Cisco Unified Border Element 或网关管理
- 会话初始协议 (SIP)

#### 使用的组件

- 思科集成多业务路由器 (ISR4351/K9)
- Cisco Unified Communications Manager 12.0
- Cisco Unified IP 电话

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原 始(默认)配置。如果您的网络处于活动状态,请确保您了解所有命令的潜在影响。

### 背景信息

务必查看 CUCM 如何将呼叫扩展到 SIP 中继之外,如下所示:



为了使 CUCM 能够将呼叫扩展到 SIP 中继之外,它会继续使用"Trunk Configuration"(中继配置 )页面中指定的 IP 地址建立传输控制协议 (TCP) 三次握手,如下图所示:

- 9	SIP Information							
-								
_	Destination							
	Destination							
	Destination Address is an SRV							
	Destination Address							
	1* 19257							
L								

Wireshark 中的 TCP 三次握手如下图所示:

Source	Destination	Protocol	Length Info
19226	19257	TCP	74 38672 → 5060 [SYN] Seq=0 Win=14600 Len=0 MSS=1460 SACK_PERM
19257	19226	TCP	60 5060 → 38672 [SYN, ACK] Seq=0 Ack=1 Win=4128 Len=0 MSS=1460
19226	19257	TCP	54 38672 → 5060 [ACK] Seq=1 Ack=1 Win=14600 Len=0
19226	19257	SIP	1271 Request: INVITE sip:5123@192

按照每个呼叫、每个节点来完成此操作;因此,CUCM 被迫等待 SIP 服务的同步 (SYN) 消息超时 或错误,然后再尝试备用中继或 GW(网关)。

为了解决这一问题,请启用选项 Ping 并主动检查 SIP 中继的状态。

在 SIP 中继上启用选项 Ping 时,您还将添加 SIP 中继状态和正常运行时间统计信息,在此情况下 ,可以监控每个 SIP 中继的状态并在中继断开时进行排除故障。 这些统计信息可在"SIP trunk Configuration"(SIP 中继配置)页面上查看。

#### 配置

第1步:在SIP 配置文件配置中,启用 SIP 选项 Ping。

• 导航至 Cisco Unified CM Administration(Cisco Unified CM 管理)>> Device(设备)>> Device Settings(设备设置)>> SIP Profile(SIP 配置文件),如图所示:

ions								
atures 🔻	Dev	vice 🔻	Application	•	User Manager	nent	▼ Bulk Administration ▼ Help ▼	
		CTI Rou	ite Point					
		Gateke	eper					
		Gatewa	ay					
		Phone				⊢		
		Trunk						
ins with		Remote	Destination			h	Clear Filter 🕂 🚍	
		Device	Settings		•		Device Defaults	
							Firmware Load Information	ir sear
							Default Device Profile	
							Device Profile	
							Phone Button Template	
							Softkey Template	
							Phone Services	
							SIP Profile	
							Common Device Configuration	

• **点击"Find"(查找)并确定是否要创建新的 SIP 配置文件**、编辑已存在的 SIP 配置文件或创建 SIP 配置文件的副本。在本示例中,创建**标准 SIP 配置文件的副本,如图所示:** 

SIP Profile Configuration									
🗋 Copy 🎦 Reset 🧷 Apply Config 🕂 Add New									
_ Status									
G Status: Ready									
All SIP devices using this profile must	be restarted before any changes will take affect.								
⊂SIP Profile Information									
Name*	Standard SIP Profile								
Description	Default SIP Profile								
Default MTP Telephony Event Payload Type	* 101								

• 重命名新的 SIP 配置文件并启用选项 Ping,如图所示:

SIP Profile Configuration		
Save		
Status		
(i) Status: Ready		
All SIP devices using this profile must be	e restarted before any change	es will take affect.
┌SIP Profile Information		
Name*	Options Ping SIP Profile	
Description	Default SIP Profile	
Default MTP Telephony Event Payload Type*	101	
Early Offer for G.Clear Calls*	Disabled	~
User-Agent and Server header information*	Send Unified CM Version Inf	ormation as User-Agen' 🗸
Version in User Agent and Server Header*	Major And Minor	~
Dial String Interpretation*	Phone number consists of ch	maracters 0-9, *, #, and $\checkmark$
Confidential Access Level Headers*	Disabled	~
- STD OPTIONS Bing		
Enable OPTIONS Ping to monitor destination status for	or Trunks with Service Type "None (D	efault)"

Ping Interval for In-service and Partially In-service Trunks (seconds) $^{st}$	60
Ping Interval for Out-of-service Trunks (seconds)*	120
Ping Retry Timer (milliseconds)*	500
Ping Retry Count*	6

第2步:将 SIP 配置文件添加到所涉及的 SIP 中继,然后点击"Save"(保存):

**注意:**请记住,必须事先配置此中继。如果您需要有关如何配置 SIP 中继的指导,请访问以 下链接:<u>系统配置指南</u>

•导航至 Device(设备)> > Trunk(中继),然后选择要编辑的中继,如图所示:

Cisco Unified CM A For Cisco Unified Communic	dministration ations Solutions	•					
Call Routing 👻 Media Resources 💌	Advanced Features 💌	Dev	vice 🔻	Applic	cation 🔻	User Managen	nent 🔻
le Configuration		CTI Route Point					
🗙 Delete 📋 Copy 省 Rese		Gatew					
			Phone				
			Trunk				
successful			Remot		1		
IP devices using this profile must b		Device	Setting	)s	•		
ile Information							
	file						
Default SIP Profile							

	Deladit SIF Frome	
TP Telephony Event Payload Type $^{st}$	101	
er for G.Clear Calls*	Disabled ~	
nt and Server header information $^{st}$	Send Unified CM Version Information as User-Agen $\checkmark$	
1 User Agent and Server Header*	Major And Minor 🗸	
g Interpretation*	Phone number consists of characters 0-9, $*$ , $\#$ , and $\checkmark$	

Find and List Trunks			
Add New Eslect All	Clear All Delete	Selected 🎦 Reset S	Selected
Status 1 records found			
Trunks (1 - 1 of 1)			
Find Trunks where Device Name	√ begin	s with v TAC Select ite	Find m or enter search text $\checkmark$
	Name <sup>▲</sup>	Description	Calling Search Space
	TAC-SIP-Trunk	TAC SIP Trunk	

•请注意,将状态、状态原因和持续时间设置为 N/A。

•选择正确的 SIP 配置文件,然后点击"Save"(保存)

L.	STR Information								
	SIF Information								
	Destination								
	Destination Address is an SRV								
	Destination Add	iress	Desti	nation Address IPv6	Destination Port	Status	Status Reason	Duration	
	1* 192 .57		]		\$060	N/A	N/A	N/A	÷ =
	MTP Preferred Originating Codec*	711ulaw		~					
	BLF Presence Group*	Standard Presence gro	oup	~					
	SIP Trunk Security Profile*	Non Secure SIP Trunk	Profile	~					
	Rerouting Calling Search Space	< None >		~					
	Out-Of-Dialog Refer Calling Search Space	< None >		~					
	SUBSCRIBE Calling Search Space	< None >		~					
	SIP Profile*	Options Ping SIP Profil	le	View Detail	2				
	DTMF Signaling Method*	No Preference		~					
1									



#### • 此时,CUCM 必须能够监控 SIP 中继的状态,如图所示:

Trunks (1 - 1 of 1)												
Find Trunks where Device Name  V begins with V tac Find Clear Filter  Select item or enter search text V												
	Name *	Description	Calling Search Space	Device Pool	Route Pattern	Partition	Route Group	Priority	Trunk Type	SIP Trunk Status		SIP Trunk Duration
	TAC-SIP-Trunk	TAC SIP Trunk		Default	5XXX				SIP Trunk	Full Service	Time In Fu	ull Service: 0 day 0 hour 2 minutes
SIP Information												
Destination Address is an S	RV											
1 * 192. 57	nation Address		Destinatio	on Address IP	/6	Des 5060	tination Port		Status up	Status	Reason	Duration Time Up: 0 day 0 hour 4 minutes

第3步:(可选)在 SIP 中继的远端启用 SIP 选项 Ping。在这种情况下:192.X.X.57 (ISR 4351)

• 导航至 ISR Cisco Unified Border Element 或网关,并确认要向其添加选项 Ping 的拨号对等体 ,如图所示:



• 使用以下命令添加选项 Ping: voice-class sip options-keepalive ,如图所示:

LESQUIVE-4351-A(config)#do show run   sec dial-peer voice 100
dial-peer voice 100 voip
description CUCM dial-peer
session protocol sipv2
session target ipv4:19226
dtmf-relay rtp-nte sip-kpml
codec g7llulaw
LESQUIVE-4351-A(config) dial-peer voice 100
LESQUIVE-4351-A(config-dial-peer) voice-class sip options-keepalive

#### 验证

使用此部分来确认是否已正确交换"Options"(选项)消息。

**注意:**如果您需要了解如何在 CUCM eth0 端口上运行数据包捕获,请遵循以下链接中的说明 :<u>CUCM 设备型号上的数据包捕获</u>

请注意,当中继重新启动时,TCP 三次握手只执行一次,随后,我们仅会从 CUCM 向 ISR 发送"OPTIONS"(选项)消息,并预计将 200 OK 作为响应。默认情况下,这些消息每 60 秒交换一次。

Source	Destination	Protocol	Length	Info
192	192	TCP	74	46535 → 5060 [SYN] Seq=0 Win=14600 Len=0 MSS=1460 S
19257	192	TCP	60	5060 → 46535 [SYN, ACK] Seq=0 Ack=1 Win=4128 Len=0
19226	19257	TCP	54	46535 → 5060 [ACK] Seq=1 Ack=1 Win=14600 Len=0
19226	192	SIP	451	Request: OPTIONS sip:192. 57:5060
19257	192	TCP	60	5060 → 46535 [ACK] Seq=1 Ack=398 Win=3731 Len=0
192	19226	SIP/SDP	1014	Status: 200 OK

## • 请注意,"Options"(选项)消息只会从 192.X.X.26 (CUCM) 发送到 192.X.X.57 (ISR),因为仅 将 CUCM 配置为监控中继状态:

Time	Source	Destination	Protocol	Length	Info
13:37	46.029581 19226	192	SIP	451	Request: OPTIONS sip:192. 57:5060
13:37	46.031672 19257	192	SIP/SDP	1014	Status: 200 OK
13:38	47.552245 19226	192	SIP	451	Request: OPTIONS sip:192. 57:5060
13:38	47.554691 19257	192	SIP/SDP	513	Status: 200 OK
13:39	48.895232 19226	192	SIP	452	Request: OPTIONS sip:192. 57:5060
13:39	48.897399 19257	192	SIP/SDP	1014	Status: 200 OK
13:40	50.418479 19226	192	SIP	451	Request: OPTIONS sip:192. 57:5060
13:40	50.420957 19257	192	SIP/SDP	1014	Status: 200 OK
13:41	51.014881 19226	192	SIP	451	Request: OPTIONS sip:192. 57:5060
13:41	51.017117 19257	192	SIP/SDP	1013	Status: 200 OK
13:42	52.389610 19226	192. 57	SIP	451	Request: OPTIONS sip:192. 57:5060

• 现在,进行呼叫时,CUCM 已经知道中继处于运行状态并立即发送邀请:

192.	57	192 26	SIP/SDP	1013 Status: 200 OK
192.	26	19257	SIP	451 Request: OPTIONS sip:192. 57:5060
192.	57	192 26	SIP/SDP	1013 Status: 200 OK
192.	26	192. ,57	SIP	1271 Request: INVITE sip:5123@192

• 如果已执行第 3 步(CUBE 上的可选配置),您将会看到"Options"(选项)消息通过以下两种 方式发送:

192	26	SIP	440 Request: OPTIONS sip:192
192	.57	SIP	449 Status: 200 OK
192	.57	SIP	452 Request: OPTIONS sip:192 57:5060
192	.26	SIP/SDP	1014 Status: 200 OK

### 故障排除

- 要对 CUCM 中的 Ping 选项进行故障排除,您需要:

- •最佳选择是从CUCM Eth0端口捕获数据包,更多详细信息:CUCM设<u>备型号上的数据包捕获</u> 使用第三方免费软件 Wireshark 打开捕获,并使用 SIP 过滤
- 您还可以检查详细的Cisco Callmanager跟踪,使用RTMT下载这些跟踪,在此处找到步骤:<u>如</u> <u>何收集CUCM 9.x或更高版本的跟踪</u>
- 验证此链接中的SIPTrunkOOS原因代码:系<u>统错误消息</u>
   Local=1(请求超时)
  - Local=2(本地 SIP 堆栈无法创建与远程对等体的套接字连接)
  - Local=3(DNS 查询失败)
- 要对 ISR4351 中的 Ping 选项进行故障排除,您需要:
  - 调试 ccsip 消息
  - 调试 ccapi inout
  - •从指向 CUCM 的接口捕获数据包