在CUCM集群中设置警报和监控资源使用情况

目录

<u>简介</u> <u>先决条件</u> <u>要求</u> <u>使用的组件</u> <u>使用电子邮件设置RTMT</u> 设置警报

简介

本文档提供有关如何使用实时监控工具(RTMT)监控思科统一通信管理器(CUCM)群集上资源使用参数的信息。

组织中的网络管理员必须监控集群中正在进行的并发呼叫数。但是,没有任何Cisco Call Manager(CCM)MIB可帮助网络管理员监控集群的活动呼叫数、媒体资源使用情况和其他参数。

网络管理员可以通过两种方式监控这些呼叫:

• 使用性能计数器。对于参数(如CallsActive),可以连续转储性能计数器到PC上的.csv文件。

• 定期安排Perfmon日志跟踪收集,并检查各种服务器日志中的CallsActive参数。

当特定性能计数器超过限制时,警报也可设置为在系统日志(系统日志)中发送电子邮件或打印警报。然后,管理员可以使用此警报信息来分析集群中是否需要更多资源。

先决条件

要求

思科建议您了解CUCM并了解RTMT的操作。

使用的组件

本文档中的信息基于以下软件和硬件版本:

- CUCM版本8.X
- RTMT插件

注意:从"应用程序">"插件"下的CCMAdmin页下载RTMT插件。

使用电子邮件设置RTMT

在域(如Exchange服务器)中使用功能正常的邮件服务器,并使用名为mail.xyz.com的简单邮件传 输协议(SMTP)**服务器**。 在RTMT上设置电子邮件非常简单。

1. 选择System > Tools > Alert > Config Email Server。

Cisco Unified Real Time Monitoring Tool (Currently Logged into:							
File Syst	tem <u>C</u> allManag	er <u>A</u> nalysi	isManag	er <u>E</u> dit	Window	Application	Help
Re <u>Sys</u>	System Summary ing Tool For Cisco Unified Communications Solutions Sy Performance System Summary						
Sy Per							
Syste Too	ols 🕨 🕨	Alert	•	Alert Ce	entral		Usage
🗌 – 🙀 s	system Summary	Tra <u>c</u> e	•	Set Ale	rt/Properti	es	
Server	Server SysLog Viewer		/iewer •	<u>R</u> emove	e Alert		
– <u>₿</u> °	PU and Memory	Plugins	•	Enable	Alert		
▋▁ <u>゚゚</u> ₽	rocess	00000	70%	Disable	Alert		
	— 🛃 Disk Usage		500000		d Cluster/I	Node Alerts	
- 🔀 c	ritical Services	00000	56%	Clear A	lert		
Performan	Performance 42%		Clear all Alerts				
P			204	Reset all Alerts to Default Config			
Performance Log Viewer		20%	Alert De	etail			
	Tools 14%-		Config I	Email Serv	ег		
	race & Log Centr	al a	0%	Config /	Alert Actio	n	Ļ
	oh Status	000000				11.20.00	
		00000					
	sysLog viewer	100000					
- 🔁 V	Alert History						
		193		Time	01		NI- de

- 2. 在邮件服务器字段中输入邮件服务器的主机名,并在端口字段中输入端口号。
- 3. 输入要从中获取邮件的电子邮件ID。

S	Configure Mail Server to send Email alert: Mail Server:
	mail.xyz.com
	Port:
	25
	Sender User Id:
	RTMT Admin

4. 单击"**确定"**。电子邮件将发送到电子邮件地址。现在,在"警报"部分配置了最近的电子邮件地址。您将在下一节中看到此内容。

设置警报

单击RTMT**中的**Performance选项卡。RTMT使用其IP地址加载集群中的服务器。在这些服务器的每 个下面都列出服务器运行的服务,例如Cisco CallManager服务或Cisco IP Voice Media Streaming App服务。

每个服务下都有一个参数列表。在此屏幕截图中,有Cisco CallManager服务,在它下面有许多参数 ,如CallsActive、CallsAttempted和CallsCompleted。要实时查看其中任何参数,必须单击该参数 并将其拖动到区域的右侧,然后会显示图形。

1. 右键单击"CallsActive"窗口,然后单击"设置警报/属性"按钮。



2. 在"说明"字**段中**输入说明,然后从"严重性"下**拉列**表中选择严重性。单击 Next。

	Name: 110.106.120.8/Cisco CallMa	inageriCalisActive	
	Pescription	Severity: Critical	•
	Calls have exceeded 0!		
18:31:00 18:31:30 18:3	Recommended Action:		9:32:30 18:33:30 18:33:3
10,108,12			

3. 选中Value Over/Under复选框并输入值以设置此计数器的限制。单击 Next。

	4-	
	Alert Properties: Threshold & Duration	
	Threshold: Trigger alert when following condition is met:	
	Value: Value: Value: Over 1 OR Under	
	Value Calculated As:	
8:32:30 18:3	Absolute	3:33:30
	O Delta (curr - prev)	npted
	O Delta Percentage ((curr - prev)/prev)	
10.106.120	Duration:	
	Trigger alert only when value constantly below	
	or over threshold for 0 seconds	
	Trigger alert immediately	
	< Back Next > Cancel	

4. 设置警报触发器计划。

ľ	Alert Properties: Frequency & Schedule	
18:3	Frequency When value exceed/below configured threshold: Trigger alert on every poll Trigger up to 0 alerts within 0 minutes Schedule Alert will be triggered in following period: Trigger Alert when it occurs. (Non-Stop Monitoring) Trigger Alert everyday (Scheduled Monitoring) between: Start Time: 06:34 PM + and End Time: 06:34 PM + and End Time: 06:34 PM + and End Time:	3:34:30 mpted
	< Back Next > Cancel	

如果电子邮件已配置,并且RTMT使用SMTP向管理员发送通常的严重警报,您也可以为此 计数器配置电子邮件警报。

- 5. 设置必须显示的邮件文本。单击 Configure。这将设置新的电子邮件地址。
- 6. 单击**Save**。电子邮件将从您在上一节(RTMT_Admin)中配置的邮件ID发送到此处配置的邮件ID。请**参阅此屏**幕截图。



7. 请参阅具有CUSTOM标记的系统日志上的自定义警报。

06 31:32 PM 04/14/14	10.108.120.15	CriticalServiceDown	Critical
08 31 32 PM 04/14/14	10.106.120.8	510 108 120 BiCisco CallVanage/CallsA	Citical
06.31/02 PM 04/14/14	10.106.120.18	CriticalServiceDown	Critical
06/31/02 PM 04/14/14	10.106.120.15	CriticalServiceDown	Critical
06.31.02 PM 64/14/14	10.106.120.18	SyslogSeverit/MatchFound	Critical
36.31:02 PM 64/14/14	10.106.120.15	SyslogSeverit/HatchFound	Critical
06:31:02 PM 04/14/14	10.106.120.8	SyslogSeverbWatchFound	Critical
06:31:02 PM 04/14/14	10.106.120.8	10.105.120.8)Cisco.CallVanaperiCallsA.	Critical
00:30:32 PM 04/14/14	10.106.120.15	CrticalServiceDown	Critical

Senice operational status is DOWN Claco DRF Local .	System
On Non Apr 14 18 31 32 IST 2014; alert 010 108 120	CUSICIE
Service operational status is DOWN. Cisco DRF Locat.	System
Service operational status is DOWN, Cisco DRF Locat.	System
Al Mon Apr 14 18 31:02 IST 2014 on node 10.106.120	System
At Mon Apr 14 18 31:02 IST 2014 on node 10.106.120	System
At Mon Apr 14 18 31:02 (ST 2014 on hode 10:106:120	System
On Mon Apr 14 18:31:02 IST 2014; alert 910.106.120	CUSTON
Service operational status is DOWN, Clisco DRF Local .	System

8. 右键单击基**本(**Perfmon计数器)的"性能"窗口,并设置轮询间隔和日志选项。您可以非常具体地说明将转储到.csv文件中的值。如果RTMT会话已打开,则此特定参数的统计信息将转储到计算机上的.csv文件。

