# 的统一快速软件从版本1.0.2升级到1.1.1

# 目录

<u>简介</u> 先决条件 要求 使用的组件 规则 Cisco Unity Express的升级步骤 升级设置 程序 初始设置示例 准备软件升级到Cisco Unity Express版本2.3.x 加载新的Cisco Unity Express软件 相关信息

# <u>简介</u>

本文档说明如何分步将Cisco Unity Express软件从版本1.0.2升级到版本1.1.1和1.x.x。版本2.3.x。 以下是本文档中讨论的重要亮点:

- Cisco Unity Express版本1.1.1需要新的引导加载程序。新的引导加载器具有ping和验证功能。
- 升级Cisco Unity Express软件会清除已存在的配置和数据。如果要在升级后恢复当前配置和 Cisco Unity Express中的数据,请执行备份。
- 在Cisco Unity Express版本1.1.1中, Cisco CallManager和CallManager Express需要单独的许可证。

# <u>先决条件</u>

### <u>要求</u>

升级过程的唯一具体要求是Cisco Unity Express产品所在网络上的FTP或TFTP服务器可用性。

## 使用的组件

此系统中唯一使用的组件是正在升级的Cisco Unity Express产品。

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原 始(默认)配置。如果您使用的是真实网络,请确保您已经了解所有命令的潜在影响。

## <u>规则</u>

有关文档约定的更多信息,请参考 Cisco 技术提示约定。

# <u>Cisco Unity Express的升级步骤</u>

本节详细介绍如何从Cisco Unity Express 1.0.2版升级到1.1.1版的必要设置条件和步骤。

## <u>升级设置</u>

- 必须为软件下载设置FTP和TFTP服务器。
- •确保可以从TFTP和FTP服务器ping Cisco Unity Express模块。
- 进行初始化时,可选择域名系统 (DNS) 服务器。如果需要 DNS,请在继续之前安装并且激活
   PC 或服务器上的 DNS 服务器。

## <u>程序</u>

软件升级到Cisco Unity Express版本1.1.1涉及三个软件加载活动:

- 加载新的引导加载程序
- 加载适当的新许可证
- 加载Cisco Unity Express软件

### <u>准备</u>

请完成以下步骤:

- 1. 从Cisco.com下载Cisco Unity Express版本1.1.1软件和相应<u>的许可证</u>。**注意:**Cisco CallManager和CallManager Express需要不同的许可证。要下<u>载Cisco Unity Express 1.1.1软</u> <u>件,请</u>参阅<u>Cisco Unity Express — 网络模块(仅</u>限注册客户)。
- 2. 将cue-installer.1.1.1安装文件放入TFTP服务器。
- 3. 将这些文件放入FTP服务器:cue-boot loader.1.0.17.pkgcue-vm.1.1.pkgcuevm.1.1.prt1cue-vm.1.1.manifestcue-vm-*YY-ZZZ*.pkg**注意:**变量*YY*表示语音邮件用户数 ,*ZZZ*表示Cisco CallManager或CallManager Express。
- 4. 确保TFTP和FTP服务器已启动并运行。如果是 PC,请确保已激活 PC 上的 TFTP 和 FTP 程 序。
- 5. 发出**service-module service-engine** *<slot/0>* session命令,以便通过Cisco IOS®软件与Cisco Unity Express网络模块(NM)进行会话。
- 6. 在se-x-x-x-x提示符下,发出**reload**命令以重新加载Cisco Unity Express NM。**注意:**在每个 步骤中,直到最后都无需重新加载模块。
- 7. 当系统提示您输入"\*\*\*"\*\*\*。这允许NM进入引导加载器模式。
- 8. 在 ServicesEngine boot loader> Config。
- 9. 输入这些各种提示的详细信息。NM IP地址子网掩码TFTP服务器地址网关路由器地址以太网接口为内部。对于默认帮助程序映像,输入cue-installer.x.x.x,其中x表示最新的修订版号。输入disk作为默认引导。

```
IP Address [192.168.2.3] >
Subnet mask [255.255.255.0] >
TFTP server [192.168.1.2] >
Gateway [192.168.2.2] >
Default Helper-file [cue-installer.1.1.1] >
Ethernet interface [internal] >
```

Default Boot [**disk**] >

10. 系统将信息写入闪存, ServicesEngine boot loader> 提示符将再次出现。输入**boot helper**。 NM从TFTP服务器引导帮助程序映像。

加载新引导加载程序

请完成以下步骤:

注意: Cisco Unity Express版本1.1.1使用与版本1.0.2不同的引导加载程序。

**注意:**系统仅在用户按y时重新加载。基本上,您可以完成所有三种不同的加载(软件、许可证和引 导加载器),而无需在两者之间重新加载。

- 1. 在ServicesEngineinstaller#>提示符下,输入so i p ftp:// *<ftp\_ip\_addr>/cue-boot* loader.1.0.17.pkg,其中*<ftp ip addr>*表示FTP服务器(如笔记本电脑或服务器)的IP地址。
- 2. 当系统询问**您**要更新主要或辅助(p,s)[p]时,<sub>p</sub>使用窗口中的其他提示。
- 3. 系统启动时,系统会提示您<sub>``\*\*\*</sub>置。输入\*\*\*进入引导加载程序模式。**注意:**在窗口顶部,显示ServiceEngine引导加载1.0.17(NM现在运行新的引导加载程序)。
- 4. 在ServicesEngine引>示符下,输入help以显示新的引导加载程序功能。
- 5. 发出**ping <ftp\_ip\_addr>命**令,*其中<ftp\_ip\_addr*>是FTP服务器的IP地址。系统应能ping通该地 址。这演示了新的ping功能,并且FTP服务器可访问。

加载Cisco Unity Express许可证

请完成以下步骤:

- 在ServicesEngine boot loader>提示符下,输入boot helper以从TFTP服务器启动帮像。注意 : 在Cisco Unity Express版本1.1.1中, Cisco CallManager和CallManager Express有单独的许可证。选择所需的许可证。
- 2. 在ServicesEngineinstaller#>提示符下,输入so i ftp:// *<ftp\_ip\_addr>/cue-vm-YY-ZZZ.pkg*,其 中<ftp\_ip\_addr>表示FTP服务器的IP地址,YY表示语音邮件用户数,而*ZZZZ表示Cisco CallManager或CallManager Express。*
- 3. 当提示**输入**任何内容时,输入y。系统应加载Cisco Unity Express映像。

加载新的Cisco Unity Express软件

请完成以下步骤:

- 1. 在ServicesEngine引>示符下,输入boot helper以从TFTP服务器引导帮助程序映像。
- 2. 在servicesEngineinstaller#>提示符下,**输入so i p ftp://** *<ftp\_ip\_addr>***cue-vm.1.1.1.pkg**命令 ,其中*<ftp\_ip\_addr>*表示FTP服务器的IP地址。
- 当提示输入任何内容时,输入y。出现一些说法,但让系统运行并加载Cisco Unity Express映像。注意:仅当用户按y时,系统才重新加载。基本上,您无需重新加载即可完成所有三种不同的加载(软件、许可证和引导加载器)。

<u>CLI设置</u>

请完成以下步骤:

- 1. 让系统运行,当系统提示输入任何内容时,输入**y**。
- 系统会询问一些设置问题。当询问是否要将DNS用于CUE(y, n)时,输入n。DNS服务器地址 可以稍后输入。
- 3. 收到这些行时,按Enter键。 Enter IP Address of the Primary NTP Server (IP address, or enter for x.x.x.x)
- 您仍需回答的问题是如何设置大洲、国家/地区和时区。相应地输入信息。NM继续启动顺序。
   系待xx...行,其中xx表示完成启动的秒数。对于NM,完成启动通常需要130到160秒。对于高级集成模块(AIM),完成启动通常需要500秒。
- 5. 当您看到<sub>se-a-b-c-d</sub>提示符(其中*a-b-c-d是NM的IP地址)时,软件安装过程将完成,您位于 Cisco Unity Express CLI。*
- 在Cisco Unity Express提示符下,发出show software version命令,以验证是否安装了正确的 软件。这是show software version命令的输出示例。
   se-10-10-9-221>show software versions

Installed Packages:

- Core 1.1.1
- Auto Attendant 1.1.1
- Voice Mail 1.1.1
- Boot Loader 1.0.17

Installed Languages:

```
- US English 1.1.1
```

7. 发出**show software license**命令以验证是否安装了正确的许可证。**注意:**Cisco CallManager和 CallManager Express的许可证不同。

以下是Cisco CallManager许可证的示例:

se-10-10-9-221> show software licenses

Core:

- application mode: CCM
- total usable system ports: 8

Voicemail/Auto Attendant:

- max system mailbox capacity time: 6000
- max general delivery mailboxes: 15
- max personal mailboxes: 50

```
- max installed languages: unlimited
```

- max enabled languages: 1

#### 以下是Cisco CallManager Express许可证的示例:

```
se-10-10-9-123>show software licenses
```

Core:

- application mode: CCME
- total usable system ports: 8

Voicemail/Auto Attendant:

- max system mailbox capacity time: 6000
- max general delivery mailboxes: 15
- max personal mailboxes: 50

#### Languages:

- max installed languages: 1
- max enabled languages: 1



### 以下是如何将Cisco Unity Express软件版本从版本1.0.2升级到版本1.1.1的示例设置示例:

IMPORTANT:: IMPORTANT:: Welcome to Cisco Systems Service Engine IMPORTANT:: post installation configuration tool. IMPORTANT:: IMPORTANT:: This is a one time process which will guide IMPORTANT:: you through initial setup of your Service Engine. IMPORTANT:: Once run, this process will have configured IMPORTANT:: the system for your location. IMPORTANT:: IMPORTANT:: IMPORTANT:: IMPORTANT:: IMPORTANT:: If you do not wish to continue, the system will be halted IMPORTANT:: so it can be safely removed from the router.

#### IMPORTANT::

Do you wish to start configuration now (y,n)? **y** Are you sure (y,n)? **y** A valid configuration has been found in flash. Would you like to use it and bypass configuration? (y,n) **n** Erasing old configuration...done.

IMPORTANT:: DNS Configuration: IMPORTANT:: IMPORTANT:: This allows the entry of hostnames, for example foo.cisco.com, instead IMPORTANT:: of IP addresses like 1.100.10.205 for servers used by CUE. In order IMPORTANT:: to configure DNS you must know the IP address of at least one of your IMPORTANT:: DNS Servers.

Would you like to use DNS for CUE (y,n)?n

WARNING: If DNS is not used CUE will require the use WARNING: IP addresses.

Are you sure (y,n)? y

Enter IP Address of the Primary NTP Server

(IP address, or enter for 1.3.231.12):

Enter IP Address of the Secondary NTP Server

(IP address, or enter to bypass):

Please identify a location so that time zone rules can be set correctly.

Please select a continent or ocean.

1) Africa4) Arctic Ocean7) Australia10) Pacific Ocean2) Americas5) Asia8) Europe3) Antarctica6) Atlantic Ocean9) Indian Ocean

#? **2** 

Please select a country.

1) Anguilla	18) Ecuador	35) Paraguay		
2) Antigua & Barbuda	19) El Salvador	36) Peru		
3) Argentina	20) French Guiana	37) Puerto Rico		
4) Aruba	21) Greenland	38) St Kitts & Nevis		
5) Bahamas	22) Grenada	39) St Lucia		
6) Barbados	23) Guadeloupe	40) St Pierre & Miquelon		
7) Belize	24) Guatemala	41) St Vincent		
8) Bolivia	25) Guyana	42) Suriname		
9) Brazil	26) Haiti	43) Trinidad & Tobago		
10) Canada	27) Honduras	44) Turks & Caicos Is		
11) Cayman Islands	28) Jamaica	45) United States		
12) Chile	29) Martinique	46) Uruguay		
13) Colombia	30) Mexico	47) Venezuela		
14) Costa Rica	31) Montserrat	48) Virgin Islands (UK)		
15) Cuba	32) Netherlands Antilles	49) Virgin Islands (US)		
16) Dominica	33) Nicaragua			
17) Dominican Republic	34) Panama			
#? <b>45</b>				
Please select one of the	following time zone region	s.		
1) Eastern Time				
2) Eastern Time - Michiga	an - most locations			
3) Eastern Time - Kentuc	ky – Louisville area			
4) Eastern Time - Kentucky - Wayne County				
5) Eastern Standard Time	- Indiana - most location	s		
6) Eastern Standard Time	- Indiana - Crawford Coun	ty		
7) Eastern Standard Time - Indiana - Starke County				
8) Eastern Standard Time - Indiana - Switzerland County				
9) Central Time				
10) Central Time - Michigan - Wisconsin border				
11) Central Time - North Dakota - Oliver County				
12) Mountain Time				
13) Mountain Time - south Idaho & east Oregon				

14) Mountain Time - Navajo
15) Mountain Standard Time - Arizona
16) Pacific Time
17) Alaska Time
18) Alaska Time - Alaska panhandle
19) Alaska Time - Alaska panhandle neck
20) Alaska Time - west Alaska
21) Aleutian Islands
22) Hawaii
#? 161

The following information has been given:

United States

Pacific Time

Therefore TZ='America/Los\_Angeles' will be used.

Local time is now: Thu Nov 6 03:43:07 PST 2003.

Universal Time is now: Thu Nov 6 11:43:07 UTC 2003.

Is the above information OK?

1) Yes

2) No

#### #?

Changing owners and file permissions. Change owners and permissions complete.

INIT: Switching to run level: 4

INIT: Sending processes the TERM signal

STARTED: cli\_server.sh

STARTED: ntp\_startup.sh

STARTED: LDAP\_startup.sh

STARTED: superthread\_startup.sh

STARTED: SQL\_startup.sh

STARTED: HTTP\_startup.sh

STARTED: \${ROOT}/usr/wfavvid/run

```
waiting 174 ...
IMPORTANT::
IMPORTANT:: Administrator Account Creation
IMPORTANT::
IMPORTANT:: Create an administrator account. With this account,
IMPORTANT:: you can log in to the Cisco Unity Express GUI and
IMPORTANT:: run the initialization wizard.
IMPORTANT::
Enter administrator user ID:
  (user ID): admin
Enter password for admin:
  (password):
```

Confirm password for admin by reentering it:

(password):

se-10-10-21-2>

### 准备软件升级到Cisco Unity Express版本2.3.x

请完成以下步骤:

- 1. 从Cisco.com下载Cisco Unity Express版本2.3.x软件和相应<u>的许可证</u>。**注意:**Cisco CallManager和CallManager Express需要不同的许可证。要下<u>载Cisco Unity Express 2.3.x软</u> <u>件,请</u>参阅<u>Cisco Unity Express — 网络模块(仅</u>限注册客户)。
- 2. 将cue-installer.2.3.x安装文件放入TFTP服务器。
- 3. 将这些文件放入FTP服务器:cue-installer.2.3.xcue-vm-installer.2.3.x.ptr1cuevm.2.3.x.pkgcue-vm-full.2.3.x.ptr1cue-vm-lang-pack.2.3.x.pkgcue-vm-en\_US-langpack.2.3.x.ptr1CUEEditor2.3.1.exe
- 4. 确保TFTP和FTP服务器已启动并运行。如果是 PC,请确保已激活 PC 上的 TFTP 和 FTP 程 序。
- 5. 使用Cisco IOS®软件,发出**service-module service-engine** *<slot/0>* session命令以便与Cisco Unity Express网络模块(NM)进行会话。
- 6. 在se-x-x-x-x提示符下,发出**reload**命令以重新加载Cisco Unity Express NM。**注意:**在每个 步骤中,直到最后都无需重新加载模块。
- 7. 当系**统提示您**输入"\*\*\*"\*\*\*。这允许NM进入引导加载器模式。
- 8. 在 ServicesEngine boot loader> CONfig。

9. 输入以下详细信息,查看显示的各种提示。NM IP地址子网掩码TFTP服务器地址网关路由器 地址以太网接口为内部。对于默认帮助程序映像,输入cue-installer.x.x.x,其中x表示最新的修 订版号。输入disk作为默认引导。

IP Address [192.168.2.3] >
Subnet mask [255.255.255.0] >
TFTP server [192.168.1.2] >
Gateway [192.168.2.2] >
Default Helper-file [cue-installer.2.3.1] >
Ethernet interface [internal] >
Default Boot [disk] >

10. 系统将信息写入闪存,ServicesEngine boot loader> 提示符将再次出现。输入**boot helper**。 NM从TFTP服务器引导帮助程序映像。

加载新的Cisco Unity Express软件

请完成以下步骤:

1. 从"安装"菜单中选择"安装软件":

Welcome to Cisco Systems Service Engine Helper Software Please select from the following

- 1 Install software
- 2 Reload module
- 3 Disk cleanup
- 3 Disk cleanup (Type '?' at any time for help)
- Choice: 1
- 2. 输入软件包名称、FTP服务器地址、用户名和密码:

```
Package name: cue-vm.2.3.1.pkg
Server url: ftp://192.168.2.2
Username: admin
Password:******
Validating package signature ... done
Downloading cue-vm-lang-pack.2.3.1.pkg
Bytes downloaded : 387252
type: application
WARNING:: Software installation will clear disk contents
Continue [n]? y
```

#### 3. 从语言选择菜单中选择语言版本:

Language Selection Menu:

#	Selected	SKU	Language Name
1		PTB	CUE Voicemail Brazilian Portuguese (2.3.0)
2		ENG	CUE Voicemail British English (2.3.0)
3		DAN	CUE Voicemail Danish (2.3.0)
4		FRA	CUE Voicemail European French (2.3.0)
5		ESP	CUE Voicemail European Spanish (2.3.0)
6		DEU	CUE Voicemail German (2.3.0)
7		ITA	CUE Voicemail Italian (2.3.0)
8		ESO	CUE Voicemail Latin American Spanish (2.3.0)
9		ENU	CUE Voicemail US English (2.3.0)

Available commands are: # - enter the number for the language to select one r # - remove the language for given # i # - more information about the language for given # x - Done with language selection

### 4. 您的选择在语言选择菜单中显示为"\*"。使用菜单可添加、删除或获取有关语言的信息。完成后 输入x。

Language Selection Menu:

#	Selected	SKU	Language Name
1		PTR	CIIE Voicemail Brazilian Portuguese (2,3,0)
2		ENG	CUE Voicemail British English (2.3.0)
3		DAN	CUE Voicemail Danish (2.3.0)
4		FRA	CUE Voicemail European French (2.3.0)
5		ESP	CUE Voicemail European Spanish (2.3.0)
б		DEU	CUE Voicemail German (2.3.0)
7		ITA	CUE Voicemail Italian (2.3.0)
8		ESO	CUE Voicemail Latin American Spanish (2.3.0)
9	*	ENU	CUE Voicemail US English (2.3.0)

Available commands are: # - enter the number for the language to select one r # - remove the language for given #

i # - more information about the language for given #

x - Done with language selection

>x

## 系统安装软件。安装完成后,系统重新加载: 5. 输入y以开始初始配置:

IMPORTANT::

IMPORTANT::

	IMPORTANT::	post installation configuration tool.
	IMPORTANT::	
	IMPORTANT::	This is a one time process which will guide
	IMPORTANT::	you through initial setup of your Service Engine.
	IMPORTANT::	Once run, this process will have configured
	IMPORTANT::	the system for your location.
	IMPORTANT::	
	IMPORTANT::	If you do not wish to continue, the system will be halted
	IMPORTANT::	so it can be safely removed from the router.
	IMPORTANT::	
	Do you wish	to start configuration now (y,n)? y
6.	输入相应的	响应y或n。请参阅输出以确定您的配置需求。
	IMPORTANT::	-

Welcome to Cisco Systems Service Engine

IMPORTANT:: A Cisco Unity Express configuration has been found in flash. IMPORTANT:: You can choose to restore this configuration into the IMPORTANT:: current image.

```
IMPORTANT::
  IMPORTANT:: A stored configuration contains some of the data from a
  IMPORTANT:: previous installation, but not as much as a backup. For
  IMPORTANT:: example: voice messages, user passwords, user PINs, and
  IMPORTANT:: auto attendant scripts are included in a backup, but are
  IMPORTANT:: not saved with the configuration.
  IMPORTANT::
  IMPORTANT:: If you are recovering from a disaster and do not have a
  IMPORTANT:: backup, you can restore the saved configuration.
  IMPORTANT::
  IMPORTANT:: If you are going to restore a backup from a previous
  IMPORTANT:: installation, you should not restore the saved configuration.
  IMPORTANT::
  IMPORTANT:: If you choose not to restore the saved configuration, it
  IMPORTANT:: will be erased from flash.
  IMPORTANT::
  Would you like to restore the saved configuration? (y,n)
7. 输入Cisco Unity Express管理员ID。这是登录Cisco Unity Express GUI的用户名。
  IMPORTANT::
  IMPORTANT::
                    Administrator Account Creation
  IMPORTANT::
  IMPORTANT:: Create an administrator account. With this account,
  IMPORTANT:: you can log in to the Cisco Unity Express GUI and
  IMPORTANT:: run the initialization wizard.
  IMPORTANT::
  Enter administrator user ID:
    (user ID): Admin
  Enter password for admin:
```

(password): \*\*\*\*\*

Confirm password for admin by reentering it:

(password): \*\*\*\*\*

# 相关信息

- •<u>语音技术支持</u>
- 语音和统一通信产品支持
- Cisco Unity Express 2.3 安装和升级指南
- Cisco Unity安装和升级指南
- <u>Cisco IP 电话故障排除</u>
- <u>技术支持和文档 Cisco Systems</u>