# 从U-boot修复C9120/C9115接入点

目录 简介 背景信息 恢复过程-概述 详细步骤 <u>下载特殊映像套件-Axel-SS-8 10 130.0.img</u> <u>将特殊映像复制到TFTP服务器</u> 进入控制台上的U-boot 将特殊映像下载到AP闪存 附录A -在Windows中设置Tftpd64 <u>将PC的地址配置为10.1.1.1</u> 下载Tftpd64 <u>将特殊映像复制到TFTP基本文件夹</u> <u>附录B-通过MobaXterm连接到AP控制台</u> <u> 附录C -示例拓扑</u> 选项1-多个AP、PoE交换机和终端服务器 选项2 -多个AP、PoE交换机和USB集线器,带多个USB转RS232适配器 <u>选项3 -单AP,PoE馈电器</u>

# 简介

本文档介绍在U-boot提示符(而不是普通操作系统)中引导的Catalyst 9115/91120接入点的恢复过 程。

# 背景信息

在2021年10月20日至10月27日期间,思科制造了许多C9115和C9120接入点,但出现了不良图像。 这些单元在启动期间将"无法纠正的ECC错误"消息记录到控制台,并且无法成功启动。 要恢复它 们,您必须通过控制台连接到每个AP,并通过TFTP加载到特殊映像中。

此问题记录为<u>Field Notice: FN - 72278 -某些C9120和C9115 AP可能停滞在启动中,并显示错误</u> <u>"Uncorrectable ECC Error" -提供解决方法</u>,并且显示为Cisco Bug ID <u>CSCwa12652</u>。

# 恢复过程-概述

- 1. 下载特殊映像bundle-axel-SS-8\_10\_130\_0.img。
- 2. 将映像放在TFTP服务器上。
- 3. 通过控制台连接到受影响的AP。
- 4. 进入u-boot模式。
- 5. 使用u-boot模式通过TFTP将映像复制到AP。

# 详细步骤

## 下载特殊映像套件-Axel-SS-8\_10\_130.0.img

1. 浏览到隐藏的公告

https://software.cisco.com/download/specialrelease/aa90a6d87be2275f1f0111c4973295c2 工業Cotolyct 0115AX/0120AX培礼方会只图片拥拥有 avail SS 8, 10, 120, 0 imm

2. 下载Catalyst 9115AX/9120AX接入点产品图片捆绑包-axel-SS-8\_10\_130\_0.img



注意:这些映像仅用于恢复无法启动的AP。

### 将特殊映像复制到TFTP服务器

在连接到AP的LAN端口(标记为"2.5G")的网络中设置TFTP服务器。

有关如何在Windows中设置Tftpd64服务器的示例,请参阅<u>附录A</u>。

### 进入控制台上的U-boot

- 将一条串行电缆连接到AP的控制台端口(此端口有一个淡蓝色标签,未标记"2.5G")。串行端口可配置为9600 bps、8个数据库、1个中位、无奇偶校验、无流量控制。 有关使用MobaXterm连接到串行端口的示例,请参阅<u>附录B</u>。
- 2. 打开AP电源。

一旦AP开始通电,请在终端窗口中重复输入ESC键,直到您看到u-boot提示符。

Verify that the firmware has been loaded with good CRC: OK
Firmware loading completed successfully
bcm4908\_eth-0
MAC: 70:69:5a:76:40:3c
Hit ESC key to stop autoboot:
u-boot>

#### 将特殊映像下载到AP闪存

配置u-boot以通过IP访问TFTP服务器。通过终端手动输入的文本以粗体显示。

使用TFTP服务器子网中未使用的IP地址配置AP。
 #root>

u-boot>

2. 配置AP的网络掩码。

<#root>

u-boot>

setenv netmask 255.255.255.0

3. 配置TFTP服务器的IP地址。

<#root>

u-boot>

```
setenv serverip 10.1.1.1
```

4. 配置默认网关的IP地址。如果TFTP服务器与AP位于同一子网,则可以在此处输入TFTP服务器的地址。 #root>

u-boot>

setenv ipaddr 10.1.1.101

setenv gatewayip 10.1.1.1

5. 清除目标TFTP目录,并保存设置。



注意:要验证当前设置,您可以使用printenv命令。

<#root>

u-boot>

setenv tftpdir

u-boot>

saveenv

Saving Environment to SPI Flash... Erasing at 0x0 -- 100% complete. SF: Detected mx2516405d with page size 256 Bytes, erase size 4 KiB, total 8 MiB Erasing SPI flash...Writing to SPI flash...done 对TFTP服务器执行ping操作以确保其可访问。

 #root>

u-boot>

ping 10.1.1.1

Use bcm4908\_eth-0 device host 10.1.1.1 is alive

2. 将映像下载到AP闪存中,并提供提示的答案,如本示例所示(加载映像后可能会出现交互式 提示)。



#### 注意:在此步骤中不要重新启动AP。

<#root>

u-boot>

boardinit bundle-axel-SS-8\_10\_130\_0.img

// Some output here was removed in order to emphasize the interactive prompts. Full outputs are sh

```
Program PHY firmware? [y/N]:
y
Program UBIFS image? [y/N]:
y
Program bootloaders? [y/N]:
n //pay attention: the last option must be "n"
```

 重新启动AP并使用reset命令。完全重新启动后,它必须通过"Username:"提示符来响应 Enter。

<#root>

u-boot>

reset

```
闪烁期间的输出示例:
```

<#root>

u-boot>

```
boardinit bundle-axel-SS-8_10_130_0.img
```

// Note: The # symbols can continue to print until the image is fully transfered, this can take a

```
done
Bytes transferred = 147999664 (8d24bb0 hex)
Program PHY firmware? [y/N]:
```

У

```
Writing PHY firmware to NOR flash...
>>> Backup current PHY firmware image @300000:45000...[Success]
>>> Erase flash blocks .....[Success]
>>> Write PHY firmware image ...[Success]
[Success]
Program UBIFS image? [y/N]:
```

У

Writing UBIFS to NAND...

NAND erase.part: device 0 offset 0x6c0000, size 0x3f940000
Skipping bad block at 0x00e00000 .....
Erasing at 0x3ffc0000 -- 100% complete.
OK
NAND write: device 0 offset 0x6c0000, size 0x8c80000
Skip bad block 0x00e00000
147324928 bytes written: OK
[Success]
Program bootloaders? [y/N]:
n //pay attention: the last option must be "n"
u-boot>
u-boot>
u-boot>
reset

# 附录A -在Windows中设置Tftpd64

在本示例中,Windows PC手动配置了地址10.1.1.1,并且Ttftpd64设置为提供特殊映像。

#### 将PC的地址配置为10.1.1.1

	Control Panel > Network and Internet > Network Connection	× 0
iniae 🕶	Disable this network device Diagnose this connection Renam	me this connection Change settings of this connection
Blue	tooth Network Connection connected tooth Device (Personal Area Disabled Ethernet 2 Properties X Networking Authentication Sharing Connect using: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Connection (10) (2154LM Configure This connection uses the following items: Pritel(R) Ethernet Protocol Version 4 (TCP/IPv4) Pritel(R) Ethernet Protocol Version 5 (TCP/IPv6) Pritel(R) Pritel(R) P	Internet 2       Network cable unplugged       With With With With With With With With
	Instal Uninstal Properties Description Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.	Alternate DNG server: Validate settings upon exit Advanced OK Cancel

### 下载Tftpd64

### <u>TFTPD64软件</u>

将特殊映像复制到TFTP基本文件夹

Select the folder where the AP images storing	-the Through Settings	$\times$
Select the folder where the AP images storing	Thodds Settings     GLOBAL TYTP   DHCP   SYSLOG        Stat Services     P TYTP Server     Syntog Server     DHCP Server     DHCP Server     DHCP Server     DHCP Server     DHCP Server	×
please follow next page with details	CK Delauk Help Carcel	Ţ

Curr Curr Serv The Late	Theoremain of the settings X      Curre GLOBAL TFTP HICP SYSLOG      Serve Base Directory      The Critical Base Directory      Determined Base Direct			
	TFTP Security C None Standard C High C Read Only	TFTP configuration       Timeout (seconds)       Max Riebanomit       Titp port       Kocal ports pool		
×	Advanced TFTP Options © Option regotiation PXE Compatibility Show Progress bar © Translate Unix file nam © Bind TFTP to this add © Allow VAs virtual room Use anticipation wind © Hide Window at starts	Set TFTP IP address (ex:10.1.1.1)		
	Create "dk.txf" files Create nd5 files E Beep for long transfer OK. Defa	ut Help Cancel		

将bundle-axel-SS-8\_10\_130\_0.img文件复制到TFTP基本目录(例如C:\tftpboot)中。

附录B -通过MobaXterm连接到AP控制台



附录C -示例拓扑

选项1-多个AP、PoE交换机和终端服务器



选项2 -多个AP、PoE交换机和USB集线器,带多个USB转RS232适配器



选项3 -单AP,PoE馈电器



#### 关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。