# 排除與Cisco ONS 15454 TCC、TCC+或TCC2卡 的直接PC連線故障

目錄
。 <u>簡介</u> ————————————————————————————————————
<u>必要條件</u>
採用元件
<u>解決常見的連線問題</u>
從直接連線到活動TCC卡的PC建立鏈路級連線
<u>從直接連線到活動TCC卡的PC建立IP連線</u>
<u>僅新15454貨架</u>
安裝並配置Java軟體
安裝並配置JRE軟體
下載並安裝JAR檔案
下載並啟動CTC應用程式
安裝和配置JRE軟體時的常見問題
相關資訊

# 簡介

本文檔解決您在嘗試以下操作時遇到的常見問題:

- 從直接連線到活動計時、通訊和控制(TCC)卡的PC建立鏈路級連線。
- 從直接連線到活動TCC卡的PC建立IP連線。
- 在PC上安裝並配置JavaTM軟體。
- 使用TCC卡以下載和啟動思科傳輸控制器(CTC)軟體。

注意:本文檔不是安裝指南。將本文檔與<u>使用者文檔</u>結合使用,作為故障排除和參考指南或獨 立的故障排除指南。

## 必要條件

### 需求

本文件沒有特定需求。

採用元件

本文檔中的資訊基於Cisco ONS 15454。

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路正在作用,請確保您已瞭解任何指令可能造成的影響。

# 解決常見的連線問題

本部分說明如何解決簡介部分列出的每個方案中的常見連線問題。

從直接連線到活動TCC卡的PC建立鏈路級連線

對於Cisco ONS 15454的初始設定,將直通RJ-45乙太網電纜從PC中網路介面卡(NIC)的RJ-45埠連 線到ONS 15454中TCC卡的RJ-45埠。大多數15454都有主用TCC卡和備用TCC卡。在軟體版本 2.0及更高版本中,您可以將電纜連線到主用TCC卡或備用TCC卡。

註:插槽7和插槽11保留用於主用和備用TCC卡。這兩個插槽與背板LAN一起使用中樞,並且 速度固定為10 MB的半雙工。

使用<u>表1</u>和<u>圖1</u>中的資訊驗證是否使用了正確的電纜。

表1-引腳佈局圖

固定	顏色	配對	名稱
1	白色/橙色	2	TxData +
2	橙色	2	TxData -
3	白色/緑色	3	RecvData +
4	藍色	1	-
5	白色/藍色	1	-
6	綠色	3	記錄資料-
7	白色/棕色	4	-
8	棕色	4	-

#### 圖1-直通乙太網RJ-45電纜圖



註:TCC卡上的RJ-45埠沒有LED指示鏈路級連線。您需要使用PC中網路介面控制器(NIC)上的 LED來驗證乙太網連線的鏈路級連線。成功建立與TCC卡的鏈路級連線後,紅色LED亮起。當流量 開始透過時,綠色LED閃爍。





## 從直接連線到活動TCC卡的PC建立IP連線

#### 僅新15454貨架

ONS 15454隨附的預設節點名稱為TCCP。預設情況下,為所有ONS 15454分配一個C類IP地址 192.1.0.2。要成功連線,必須使用C類子網192.1.0.x中的唯一IP地址配置PC。您還必須使用指向 C類IP地址192.1.0.2(或要直接連線的15454的現有IP地址)的預設網關。

註:已使用的機架的IP地址很可能與預設IP地址不同。直接檢視機架液晶屏上的此地址。如果 LCD顯示有缺陷,請向網路管理員獲取IP地址。在PC上配置唯一的IP地址。確保IP地址與機 打開PC上作業系統的TCP/IP屬性對話方塊。將PC IP地址的最後三位數更改為介於1和254之間的唯一值(請參閱圖3)。確保排除15454的預設IP地址(192.1.0.2)。

雖然PC和ONS 15454的IP地址必須是唯一的,但必須確保它們位於同一個C類子網中,前三位為 192.1.0.x。確保PC上的預設網關指向ONS 15454上的預設IP地址。圖3是Windows環境中TCP屬性 的示例:

圖3 - Microsoft TCP屬性

	Microsoft T(	CP/IP Pro	operties			ľ	? ×	
	IP Address	DNS 1	WINS Address	Routing				
	An IP address can be automatically assigned to this network card by a DHCP server. If your network does not have a DHCP server, ask your network administrator for an address, and then type it in the space below.							
	Adapter:							
	[1] Xircom CardBus Ethernet 10/100							
	С <u>о</u> ы	ain an IP a	address from a D	HCP serve	er			
		scify an IP Issue	address —	0 10	a 🕳			
	IF Add	iess.		255 0				
Note Specify the PC's class C subnet mask value of 255.255.255.0.	Default <u>G</u> ateway: 192 . 1 . 0 . 2							
This 24 bit mask leaves you the last three digits to specify values					4	\ <u>d</u> vanced	1	
between 1 and 254 for unique IP addresses			OK	Can	cel	Apply		
within this subnet		Note Specify th You need 192.1.0 × 1 and 254	ne PC's IP addre to specify a uni ie for the last th <b>. Do not</b> use th	ss using th que IP add ree digits y ne 192.1.0.1	ie PC's Idress w /ou need 2 addres	TCP configur ithin the clas I to specify a ss on the 154	ation p s C sul value t 154	anel. onet of oetweer
Note 192.1.0.2 is the with. When first configure 192.1 configuration pa	default IP addre connecting a P( .0.2 as the defau anel	ss that the C to the 15 Jt gateway	15454 is shipped 454 you need to in the PC's TCP	i ,	Note – tccp' is '	the default no	ode nar	ne
					that the If you se the 154 its datal deleted	15454 is ship ee this node r 54 could be a base could ha	iped wi iame u i new b ave bea	th. sed ox or m
	-							
SLU					to	cp ←		
						4/11		

#### 關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。