

Configuring EtherChannel and 802.1Q Trunking Between Catalyst L2 Fixed Configuration Switches and Catalyst Switches Running CatOS

Document ID: 23408

Contents

Introduction

Prerequisites

- Requirements
- Components Used
- Conventions
- Background Theory

Link Aggregation Control Protocol (LACP) and Port Aggregation Protocol (PAgP)

PAgP and LACP Modes

PAgP Restrictions

Dynamic Trunking Protocol (DTP)

Configure

Network Diagram

Configurations

Verify

Sample show Output for LACP Configurations

Sample show Output for PAgP Configurations

Troubleshoot

Related Information

Introduction

This document offers a sample configuration and command structure for the setup of an EtherChannel link that is a trunk link between a Catalyst Layer 2 (L2) fixed configuration switch, which includes the 2950/2955/2970/2940/2900XL/3500XL switches, and a Catalyst 4500/4000 switch that runs Catalyst OS (CatOS). You can configure the Catalyst L2 fixed configuration switch with any Catalyst 4500/4000, 5500/5000, or 6500/6000 series switch that runs CatOS in this scenario to obtain the same results. With the popularity of Fast Ethernet in current networks, the sample configuration uses Fast Ethernet. The sample bundles two Fast Ethernet ports from each of the switches into a Fast EtherChannel (FEC) and configures IEEE 802.1Q (dot1q) trunking on top of the FEC.

Prerequisites

Requirements

This document uses the same term, EtherChannel, to refer to FEC, Gigabit EtherChannel (GEC), port channel, channel, and port group. For further details on how to configure EtherChannel on the switches, refer to these documents:

- Configuring Fast EtherChannel and Gigabit EtherChannel on Catalyst 4000 switches
- Configuring EtherChannels on Catalyst 2950 switches
- Configuring EtherChannels on Catalyst 2950/2955 switches

- Configuring EtherChannels on Catalyst 2970 switches
- Configuring EtherChannels on Catalyst 2940 switches
- Configuring EtherChannel Between Catalyst 2900XL/3500XL Switches and CatOS Switches

Components Used

The information in this document is based on these software and hardware versions:

- Catalyst 2950 that runs Cisco IOS® Software Release 12.1(6)EA2c
- Catalyst 2955 that runs Cisco IOS Software Release 12.1(12c)EA1
- Catalyst 2940 that runs Cisco IOS Software Release 12.1(22)EA1
- Catalyst 2970 that runs Cisco IOS Software Release 12.1(19)EA1c
- Catalyst 2900XL/3500XL that runs Cisco IOS Software Release 12.0(5)WC9
- Catalyst 4000 that runs CatOS version 8.4.1

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Conventions

For more information on document conventions, refer to the Cisco Technical Tips Conventions.

Background Theory

When you use a Catalyst L2 fixed configuration switch and any Catalyst 4500/4000 family product that runs CatOS (Catalyst 4003/4006/2948G/2980G), keep in mind that the switches only support dot1q trunking encapsulation. Other Catalyst platforms support both dot1q and Inter-Switch Link Protocol (ISL). While dot1q is an IEEE standard, ISL is proprietary to Cisco. Only Cisco hardware can support ISL trunking encapsulation. If you use other Cisco switching platforms, such as the Catalyst 5500/5000 or Catalyst 6500/6000, and need to determine which trunking method has support, issue this command:

- **show port capabilities** *mod/port*

For more information on a specific port and what capabilities the specific port has (such as dot1q, ISL, and port channel), refer to:

- **show port capabilities**

Link Aggregation Control Protocol (LACP) and Port Aggregation Protocol (PAgP)

EtherChannels have automatic configuration with either Port Aggregation Protocol (PAgP) or Link Aggregation Control Protocol (LACP). You can also configure EtherChannels manually. PAgP is a Cisco–proprietary protocol that you can only run on Cisco switches and on those switches that licensed vendors license to support PAgP. IEEE 802.3ad defines LACP. LACP allows Cisco switches to manage Ethernet channels between switches that conform to the 802.3ad protocol. You can configure up to 16 ports to form a channel. Eight of the ports are in active mode and the other eight are in standby mode. When any of the active ports fail, a standby port becomes active. Standby mode works only for LACP, not for PAgP.

If you use one of these protocols, a switch learns the identity of partners able to support either PAgP or LACP and learns the capabilities of each interface. The switch then dynamically groups interfaces with similar configurations into a single logical link (channel or aggregate port); the switch bases these interface groups on

hardware, administrative, and port parameter constraints. For example, PAgP groups the interfaces with the same speed, duplex mode, native VLAN, VLAN range, and trunking status and type. After PAgP groups the links into an EtherChannel, PAgP adds the group to the spanning tree as a single switch port.

Switch	LACP Support	Minimum LACP Version with Support	PAgP Support	Minimum PAgP Version with Support
Catalyst 2940	Yes	Cisco IOS Software Release 12.1(19)EA1	Yes	Cisco IOS Software Release 12.1(13)AY
Catalyst 2950	Yes	Cisco IOS Software Release 12.1(14)EA1	Yes	Cisco IOS Software Release 12.0(5.2)WC(1)
Catalyst 2955	Yes	Cisco IOS Software Release 12.1(14)EA1	Yes	Cisco IOS Software Release 12.1(12c)EA1
Catalyst 2970	Yes	Cisco IOS Software Release 12.2(18)SE	Yes	Cisco IOS Software Release 12.1(11)AX
Catalyst 2900XL	No		No	
Catalyst 3500XL	No		No	

PAgP and LACP Modes

This section lists the user-configurable EtherChannel modes for the **channel-group** interface configuration command. Switch interfaces exchange PAgP packets only with partner interfaces with the `auto` or `desirable` mode configuration. Switch interfaces exchange LACP packets only with partner interfaces with the `active` or `passive` mode configuration. Interfaces with the `on` mode configuration do not exchange PAgP or LACP packets.

- `active` Places an interface into an active negotiation state, in which the interface starts negotiations with other interfaces through the send of LACP packets.
- `auto` Places an interface into a passive negotiation state, in which the interface responds to PAgP packets that the interface receives but does not start PAgP packet negotiation. This setting minimizes the transmission of PAgP packets.
- `desirable` Places an interface into an active negotiation state, in which the interface starts negotiations with other interfaces through the send of PAgP packets.
- `on` Forces the interface into an EtherChannel without PAgP or LACP. With the `on` mode, a usable EtherChannel exists only when an interface group in the `on` mode has a connection to another interface group in the `on` mode.
- `passive` Places an interface into a passive negotiation state, in which the interface responds to LACP packets that the interface receives, but does not start LACP packet negotiation. This setting minimizes the transmission of LACP packets.

There are only three valid combinations to run the LACP link aggregate, as this table shows:

Switch	Switch	Comments
active	active	Recommended.
active	passive	Link aggregation occurs if negotiation is successful.
on	on	Link aggregation occurs without LACP. Although this works, this combination is not recommended.

Note: By default, with the configuration of an LACP channel, the LACP channel mode is *passive*.

PAgP Restrictions

PAgP aids in the automatic creation of FEC links. PAgP packets transmit between FEC-capable ports to negotiate the formation of a channel. Some restrictions have been deliberately introduced into PAgP. The restrictions are:

- PAgP does not form a bundle on ports with configuration for dynamic VLANs. PAgP requires that all ports in the channel belong to the same VLAN or that the ports have trunk port configurations. When a bundle already exists and you modify the VLAN of a port, all ports in the bundle change to match that VLAN.
- PAgP does not group ports that operate at different speeds or port duplex. If you change speed and duplex when a bundle exists, PAgP changes the port speed and duplex for all ports in the bundle.
- PAgP modes are *off*, *auto*, *desirable*, and *on*. Only the combinations *auto-desirable*, *desirable-desirable*, and *on-on* allow the formation of a channel. If a device on one side of the channel does not support PAgP, such as a router, the device on the other side must have PAgP set to *on*. Catalyst 2950 switches support PAgP for channel negotiation with Cisco IOS Software Release 12.1(6)EA2 or later. Cisco IOS Software Release 12.0 supports only static configuration. All Catalyst switches that run CatOS support PAgP protocol channel negotiation.

Dynamic Trunking Protocol (DTP)

There are different types of trunking protocols. If a port can become a trunk, it may also have the ability to trunk automatically. In some cases, the port may even be able to negotiate what type of trunking to use on the port. This ability to negotiate the trunking method with the other device has the name Dynamic Trunking Protocol (DTP).

Catalyst 2950 switches support DTP for dynamic trunking with Cisco IOS Software Release 12.1(6)EA2 or later. Cisco IOS Software Release 12.0 supports only static configuration. All Catalyst switches that run CatOS support DTP.


Configure

In this section, you are presented with the information to configure the features described in this document.

Note: To find additional information on the commands used in this document, use the Command Lookup Tool [☞](#) (registered customers only) .

Network Diagram

This document uses this network setup:

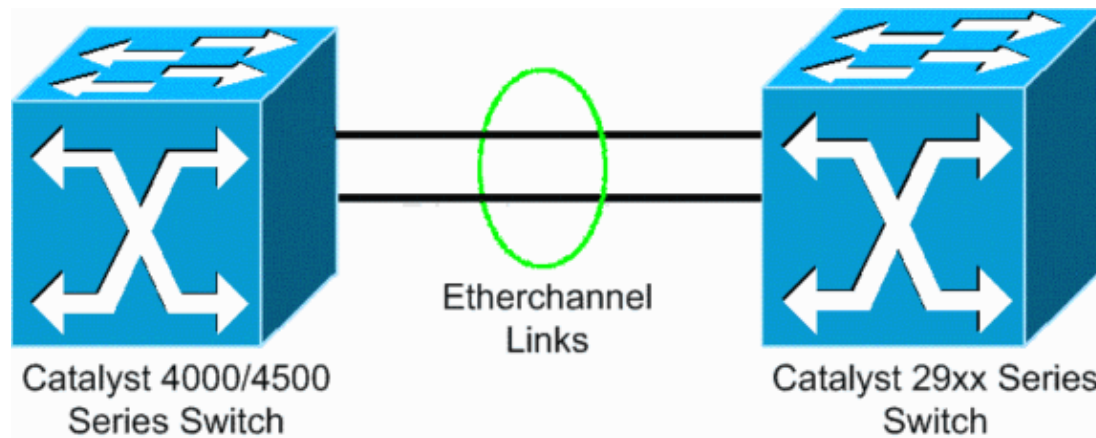

Configurations

This document uses these configurations:

- LACP on Catalyst 4000 that runs CatOS
- LACP on Catalyst L2 fixed configuration switch that runs Cisco IOS Software
- PAgP on Catalyst L2 fixed configuration switch that runs Cisco IOS Software
- PAgP on Catalyst 4000 that runs CatOS

Configure LACP on Catalyst 4000 That Runs CatOS

```
Catalyst 4000
Cat4003 (enable) show channelprotocol
Channel
Module Protocol
-----
2          PAGP
Cat4003 (enable)

!--- By default, all ports on a Catalyst 4500/4000 use channel protocol PAgP.
!--- So, to run LACP, you must change the channel protocol to LACP. On switches
!--- that run CatOS, you can only change the channel mode per module. In this
!--- example, the command set channelprotocol lacp module_number
!--- changes the channel mode for slot 2. Use the show channelprotocol command to
!--- verify the changes.

Cat4003 (enable) set channelprotocol lacp 2
Mod 2 is set to LACP protocol.
Cat4003 (enable)

Cat4003 (enable) set port lacp-channel 2/1-2
Port(s) 2/1-2 are assigned to admin key 80.
Cat4003 (enable)

!--- There is a parameter exchange in the LACP packet. The parameter is
!--- the admin key. A channel can only form between ports that have
!--- the same admin key. In this example, both ports have assignment to the same group.
!--- (The random assignment is admin key 80.)
```

```
!--- Keep in mind that the admin key is only locally significant. In other words,  
!--- the admin key must be the same only for ports within the switch and is not a factor  
!--- between different switches.
```

```
Cat4003 (enable) set port lacp-channel 2/1-2 mode active  
Port(s) 2/1-2 channel mode set to active.  
Cat4003 (enable)
```

To form the channel change the LACP channel mode to active state on one or both of the sides.

```
Cat4003 (enable) set trunk 2/1 desirable dot1q  
Port(s) 2/1-2 trunk mode set to desirable.  
Port(s) 2/1-2 trunk type set to dot1q.  
Cat4003 (enable)
```

```
!--- Configure the ports to the desirable trunk mode that makes the ports actively  
!--- attempt to convert the link to a trunk link. The ports become trunk ports if  
!--- the neighbor ports are in on, desirable, or auto mode.
```

```
Cat4003 (enable) show config  
This command shows non-default configurations only.  
Use 'show config all' to show both default and non-default configurations.
```

```
.....  
.....
```

```
..
```

```
begin
```

```
!--- Output suppressed.
```

```
#channelprotocol  
set channelprotocol lacp 2  
!  
#port channel  
set port lacp-channel 2/1-2 80  
!
```

```
!--- Output suppressed.
```

```
#module 2 : 48-port 10/100/1000 Ethernet  
set trunk 2/1 desirable dot1q 1-1005,1025-4094  
set trunk 2/2 desirable dot1q 1-1005,1025-4094  
!
```

```
!--- Output suppressed.
```

Configure LACP on Catalyst L2 Fixed Configuration Switch That Runs Cisco IOS Software

The configuration commands for the Catalyst L2 fixed configuration switch platforms are the same. To keep the document length reasonable, this document displays the configuration for just one of the platforms (Catalyst 2955). But tests of all the commands took place on all the Catalyst L2 fixed configuration switch platforms.

```

CAT2955# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
CAT2955(config)# interface fastethernet 0/9
CAT2955(config-if)# channel-group 1 mode active
Creating a port-channel interface Port-channel 1

Assign the interface to a channel group, and specify the LACP mode.

CAT2955(config-if)#
6d08h: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/9,changed state to down
6d08h: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/9,changed state to up
6d08h: %LINK-3-UPDOWN: Interface Port-channell, changed state to up
6d08h: %LINEPROTO-5-UPDOWN: Line protocol on Interface Port-channell,changed state to up
CAT2955(config-if)# interface fastethernet 0/10
CAT2955(config-if)# channel-group 1 mode active
CAT2955(config-if)#
6d08h: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/10,changed state to down
6d08h: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/10,changed state to up
CAT2955(config-if)# interface port-channel 1
CAT2955(config-if)# switchport mode trunk

Configuring the port channel interface to be a trunk pulls fa 0/9-10 in.

CAT2955(config-if)# ^Z
CAT2955# show run
6d08h: %SYS-5-CONFIG_I: Configured from console by consolerun
        Building configuration...

!--- Output suppressed.

!
interface Port-channell
  switchport mode trunk
  no ip address
  flowcontrol send off
  fcs-threshold 0
!

!--- Output suppressed.

interface FastEthernet0/9
  switchport mode trunk
  no ip address
  channel-group 1 mode active
!
interface FastEthernet0/10
  switchport mode trunk
  no ip address
  channel-group 1 mode active
!

!--- Output suppressed.

end

CAT2955#

```

Configure PAgP on Catalyst L2 Fixed Configuration Switch That Runs Cisco IOS Software

Catalyst L2 Fixed Configuration Switch

```

5-2950# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
5-2950(config)# interface fastethernet0/1
5-2950(config-if)# channel-group 1 mode desirable

```

Creating a port-channel interface Port-channell

!--- The software dynamically creates the port channel interface.

5-2950(config-if)#

*Mar 16 13:50:56.185: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to down

*Mar 16 13:50:57.013: %EC-5-BUNDLE: Interface Fa0/1 joined port-channel Po1

*Mar 16 13:50:58.053: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to up

*Mar 16 13:50:59.021: %LINK-3-UPDOWN: Interface Port-channell1, changed state to up

*Mar 16 13:51:00.021: %LINEPROTO-5-UPDOWN: Line protocol on Interface Port-channell1, changed state to up

5-2950(config-if)#

5-2950(config)# **interface fastethernet0/2**

5-2950(config-if)# **channel-group 1 mode desirable**

5-2950(config-if)#

5-2950(config-if)# **interface port-channel 1**

!--- Configuration of the port channel interface to be a trunk

!--- pulls in Fast Ethernet 0/1 and 0/2.

5-2950(config-if)# **switchport mode trunk**

*Mar 14 15:31:13.428: %DTP-5-TRUNKPORTON: Port Fa0/1 has become dot1q trunk

*Mar 14 15:31:14.880: %EC-5-BUNDLE: Interface Fa0/1 joined port-channel Po1

*Mar 14 15:31:14.908: %EC-5-UNBUNDLE: Interface Fa0/2 left the port-channel Po1

*Mar 14 15:31:14.944: %EC-5-BUNDLE: Interface Fa0/2 joined port-channel Po1

*Mar 14 15:31:15.908: %LINEPROTO-5-UPDOWN: Line protocol on Interface FastEthernet0/1, changed state to up

5-2950# **show run**

Building configuration...

Current configuration : 1608 bytes

!

version 12.1

no service pad

service timestamps debug uptime

service timestamps log datetime msec localtime

no service password-encryption

!

hostname 5-2950

!

!

clock timezone PST -8

ip subnet-zero

no ip finger

no ip domain-lookup

cluster enable SWITCH 0

!

!

!

interface Port-channel 1

!--- This is the port channel interface where you configure trunking that

!--- the members of the channel group inherit.

switchport mode trunk

!

interface FastEthernet0/1

switchport mode trunk

channel-group 1 mode desirable

!--- Here, the channel group corresponds with interface port-channel 1.

!

interface FastEthernet0/2

switchport mode trunk


```

channel-group 1 mode desirable

!--- Here, the channel group corresponds with interface port-channel 1.

!
interface FastEthernet0/3
!
interface FastEthernet0/4
!
interface FastEthernet0/5
!
interface FastEthernet0/6
!
interface FastEthernet0/7
!

```

Configure PAGP on Catalyst 4000 That Runs CatOS

Catalyst 4000 Switch

```

Console> (enable) set port channel 2/19-20 mode desirable
Port(s) 2/19-20 channel mode set to desirable.
Console> (enable) 2003 Jan 08 11:40:14 %PAGP-5-PORTFROMSTP:Port 2/19 left bridge port 2/19
2003 Jan 08 11:40:14 %PAGP-5-PORTFROMSTP:Port 2/20 left bridge port 2/20
2003 Jan 08 11:40:18 %PAGP-5-PORTTOSTP:Port 2/19 joined bridge port 2/19
2003 Jan 08 11:40:18 %PAGP-5-PORTTOSTP:Port 2/20 joined bridge port 2/20

Console> (enable) set trunk 2/19 desirable

!--- The set of the trunk on the first port of the channel
!--- dynamically trunks all channel ports.

Port(s) 2/19-20 trunk mode set to desirable.
!
Console> (enable)

!--- The dot1q trunk adopts the port VLAN assignment (VLAN 1 by default)
!--- as the native VLAN. If this switch were a Catalyst 5500/5000 or 6500/6000 switch
!--- (which also supports ISL trunking), you would specify dot1q encapsulation here.
!--- The Catalyst 2950 only supports dot1q.

```

Verify

This section provides information you can use to confirm your configuration is working properly.

Certain **show** commands are supported by the Output Interpreter Tool [🔗](#) (registered customers only), which allows you to view an analysis of **show** command output. The **show** commands on the L2 fixed configuration switch platforms are the same, but the output format may vary.

Sample show Output for LACP Configurations

Catalyst 2955 Switch

```

CAT2955# show etherchannel summary
Flags:  D - down          P - in port-channel
        I - stand-alone  s - suspended
        H - Hot-standby (LACP only)
        R - Layer3       S - Layer2
        u - unsuitable for bundling

```

U - in use f - failed to allocate aggregator

d - default port
Number of channel-groups in use: 1
Number of aggregators: 1

Group Port-channel Protocol Ports

-----+-----+-----+-----
1 Po1(SU) LACP Fa0/9(P) Fa0/10(Pd)

CAT2955#

CAT2955# **show interfaces fastethernet 0/9 switchport**

Name: Fa0/9
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: trunk (member of bundle Po1)
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 1 (default)
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001

Protected: false

Voice VLAN: none (Inactive)
Appliance trust: none

Catalyst 4000 Switch

Cat4003 (enable) **show lacp**

Channel Id Ports

417 2/1-2

Cat4003 (enable) **show lacp-channel 417**

Channel Ports id	Status	Channel Mode
417 2/1-2	connected	active

Cat4003 (enable)

Cat4003 (enable) **show trunk**

* - indicates vtp domain mismatch

- indicates dot1q-all-tagged enabled on the port

Port	Mode	Encapsulation	Status	Native vlan
2/1	desirable	dot1q	trunking	1
2/2	desirable	dot1q	trunking	1

Port Vlans allowed on trunk

2/1 1-1005,1025-4094
2/2 1-1005,1025-4094

Port Vlans allowed and active in management domain

2/1 1,10

2/2 1,10

Port Vlans in spanning tree forwarding state and not pruned

2/1 1,10
2/2 1,10

Cat4003 (enable)

Sample show Output for PAgP Configurations

Catalyst 2950 Switch

```
5-2950# show etherchannel summary
Flags: D - down          P - in port-channel
       I - stand-alone  s - suspended
       R - Layer3        S - Layer2
       U - port-channel in use
Group Port-channel  Ports
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
1      Po6(SU)      Fa0/1(P)   Fa0/2(P)

5-2950# show interface fastethernet0/1 switchport
Name: Fa0/1
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: trunk (member of bundle Po6)
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 1 (default)

!--- This line shows that the trunk link is up.

Trunking VLANs Enabled: ALL

!--- This line shows that all VLANs trunk.

Pruning VLANs Enabled: 2-1001

Protected: false

Voice VLAN: none (Inactive)
Appliance trust: none
```

Catalyst 4000 Switch

```
Console> show port channel
Port  Status      Channel Admin      Ch Mode Group Id
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
2/19  connected  desirable silent      174    815
2/20  connected  desirable silent      174    815
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
Port  Device-ID          Port-ID          Platform
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
2/19  5-2950             Fa0/1            cisco WS-C2950-24
2/20  5-2950             Fa0/2            cisco WS-C2950-24
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+

Console> (enable) show trunk
* - indicates vtp domain mismatch
```

Port	Mode	Encapsulation	Status	Native vlan
2/19	desirable	dot1q	trunking	1
2/20	desirable	dot1q	trunking	1

Port	Vlans allowed on trunk
2/19	1-1005
2/20	1-1005

Port	Vlans allowed and active in management domain
2/19	1,100,300,350,450
2/20	1,100,300,350,450

Port	Vlans in spanning tree forwarding state and not pruned
2/19	1,100,300,350,450
2/20	1,100,300,350,450

Console> (enable)

Troubleshoot

There is currently no specific troubleshooting information available for this configuration.

Related Information

- ***EtherChannel Configuration Guidelines* Configuring the Switch Ports**
- **Catalyst 2950 Desktop Switch Software Configuration Guide, 12.1(6)EA2c**
- **Software Configuration Guide (5.5)**
- **LAN Product Support Pages**
- **LAN Switching Support Page**
- **Technical Support – Cisco Systems**

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2014 – 2015 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Nov 16, 2007

Document ID: 23408
