

# ASA/PIX: NTP with and without an IPsec Tunnel Configuration Example

## Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Related Products](#)

[Conventions](#)

[Configuration](#)

[Network Diagram](#)

[VPN Tunnel ASDM Configuration](#)

[NTP ASDM Configuration](#)

[ASA1 CLI Configuration](#)

[ASA2 CLI Configuration](#)

[Verify](#)

[Troubleshoot](#)

[Troubleshooting Commands](#)

[Related Information](#)

## [Introduction](#)

This document provides a sample configuration for synchronizing the PIX/ASA Security Appliance clock with a network time server using Network Time Protocol (NTP). ASA1 communicates directly with the network time server. ASA2 passes NTP traffic through an IPsec tunnel to ASA1, which in turn forwards the packets to the network time server.

Refer to [ASA 8.3 and Later: NTP with and without an IPsec Tunnel Configuration Example](#) for more information on the identical configuration on Cisco ASA with versions 8.3 and later.

**Note:** A Router can also be used as an NTP server for synchronizing the PIX/ASA Security Appliance clock.

## [Prerequisites](#)

## [Requirements](#)

Ensure that you meet these requirements before you attempt this configuration:

- End-to-end IPsec connectivity must be established before starting this NTP configuration.

- The Security Appliance license must be enabled for Data Encryption Standard (DES) encryption (at a minimum encryption level).

## Components Used

The information in this document is based on the software and hardware versions below.

- Cisco Adaptive Security Appliance(ASA) with version 7.x and later
- ASDM version 5.x.and later

**Note:** Refer to [Allowing HTTPS Access for ASDM](#) in order to allow the ASA to be configured by the ASDM.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

## Related Products

This configuration can also be used with the Cisco PIX 500 Series Security Appliance, which runs version 7.x and later.

**Note:** NTP support was added in PIX version 6.2. Refer to [PIX 6.2: NTP with and without an IPsec Tunnel Configuration Example](#) in order to configure NTP on the Cisco PIX Firewall.


## Conventions

Refer to the [Cisco Technical Tips Conventions](#) for more information on document conventions.

## Configuration

### Network Diagram

This document uses the network setup shown in this diagram.

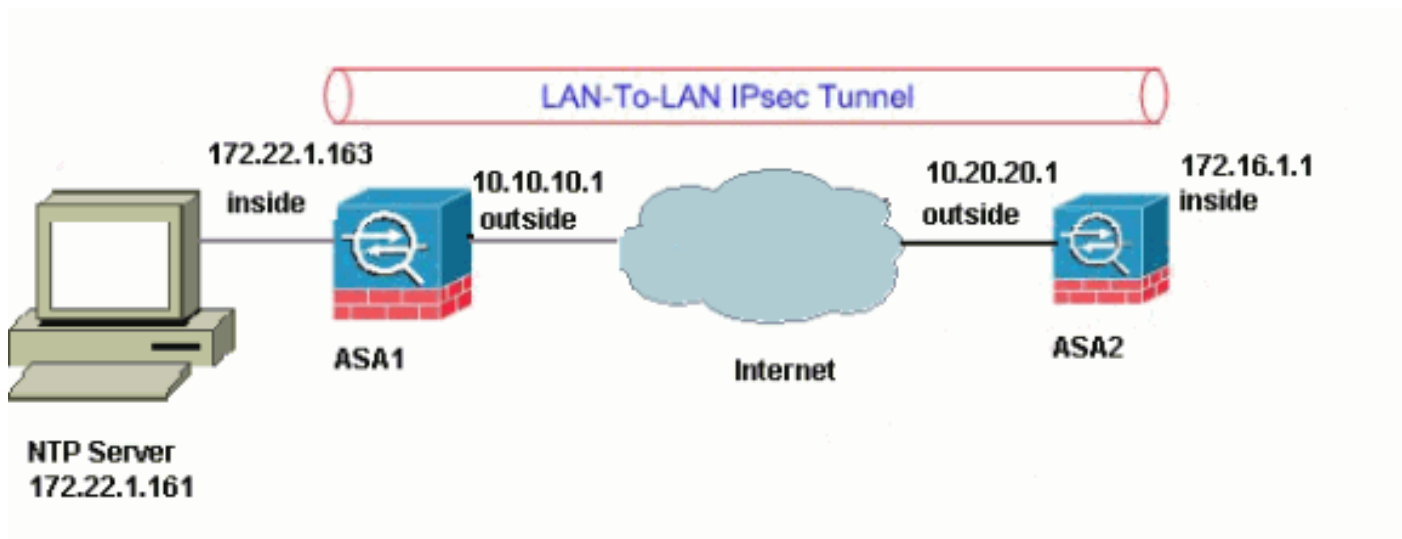

**Note:** The IP addressing schemes used in this configuration are not legally routable on the


Internet. They are [RFC 1918](#) addresses, which have been used in a lab environment.

- [VPN Tunnel ASDM Configuration](#)
- [NTP ASDM Configuration](#)
- [ASA1 CLI Configuration](#)
- [ASA2 CLI Configuration](#)


## VPN Tunnel ASDM Configuration

Complete these steps to create the VPN tunnel:

1. Open your browser and type **https://<Inside\_IP\_Address\_of\_ASA>** to access the ASDM on the ASA. Be sure to authorize any warnings your browser gives you related to SSL certificate authenticity. The default username and password are both blank. The ASA presents this window to allow the download of the ASDM application. This example loads the application onto the local computer and does not run in a Java applet.

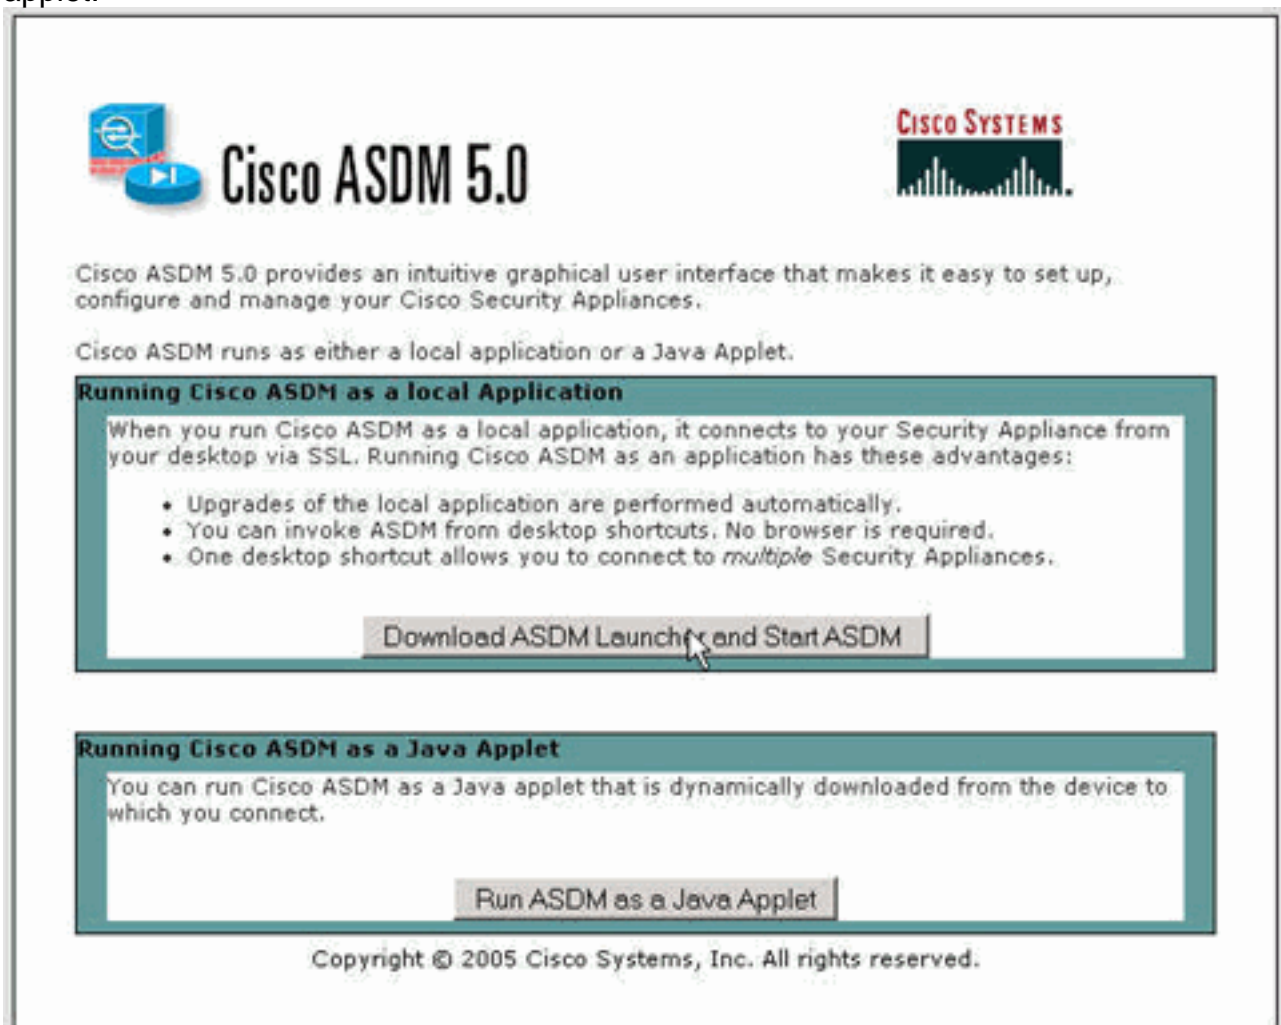


2. Click **Download ASDM Launcher and Start ASDM** in order to download the installer for the ASDM application.
3. Once the ASDM Launcher downloads, complete the steps directed by the prompts in order to install the software and run the Cisco ASDM Launcher.
4. Enter the IP address for the interface you configured with the **http -** command and a username and password if you specified one. This example uses the default blank username

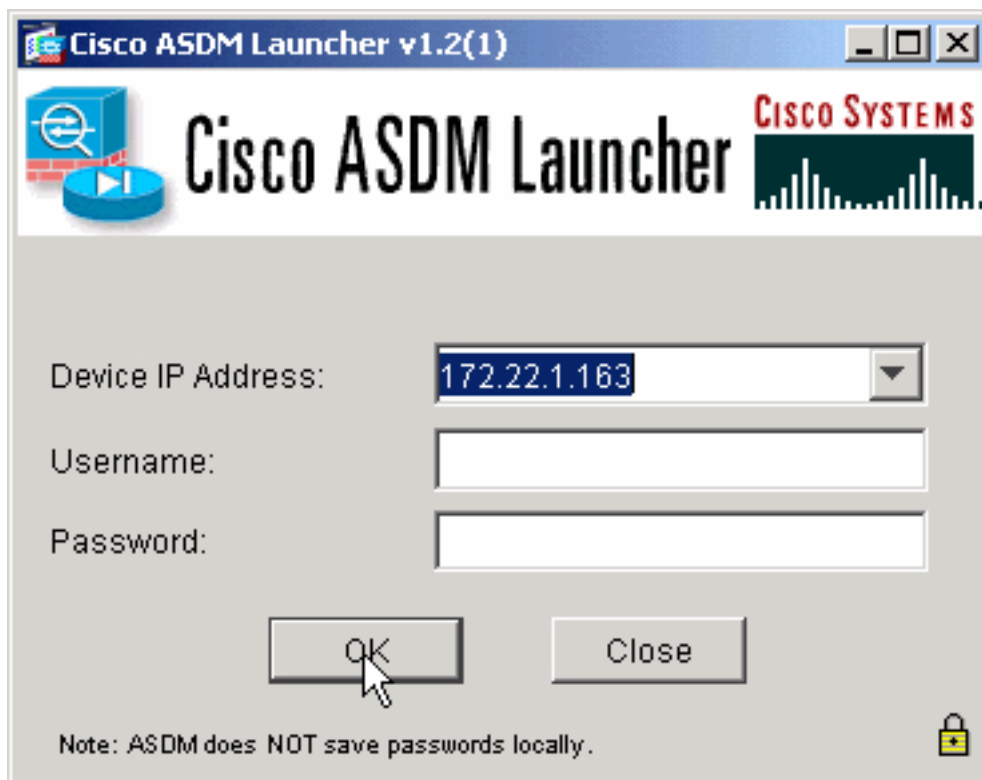


and password.

5. Run the VPN Wizard once the ASDM application connects to the ASA.

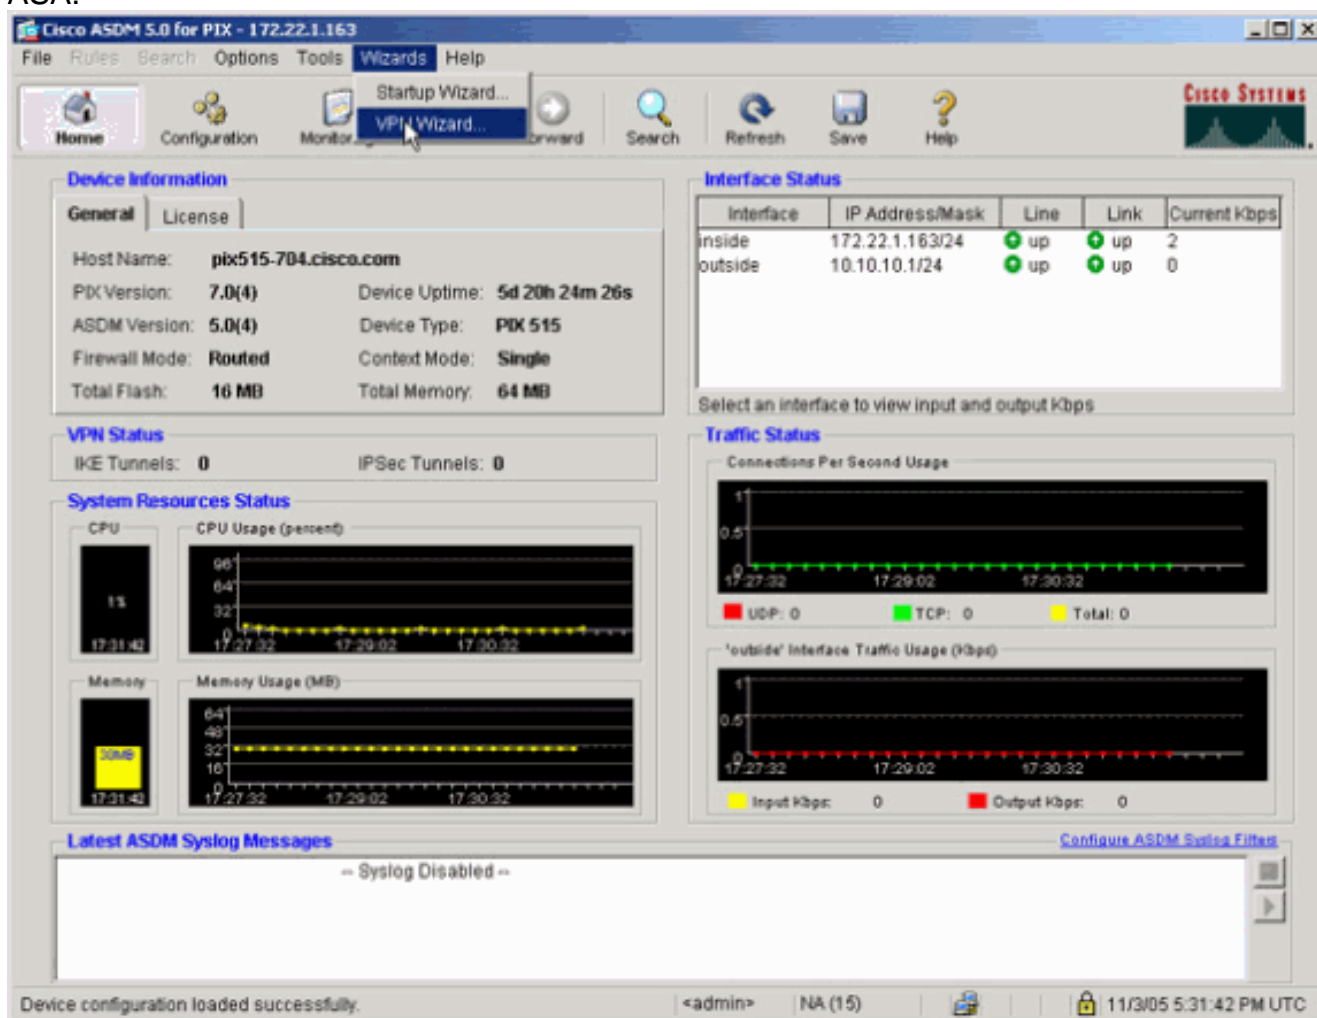


6. Choose the **Site-to-Site** IPsec VPN tunnel

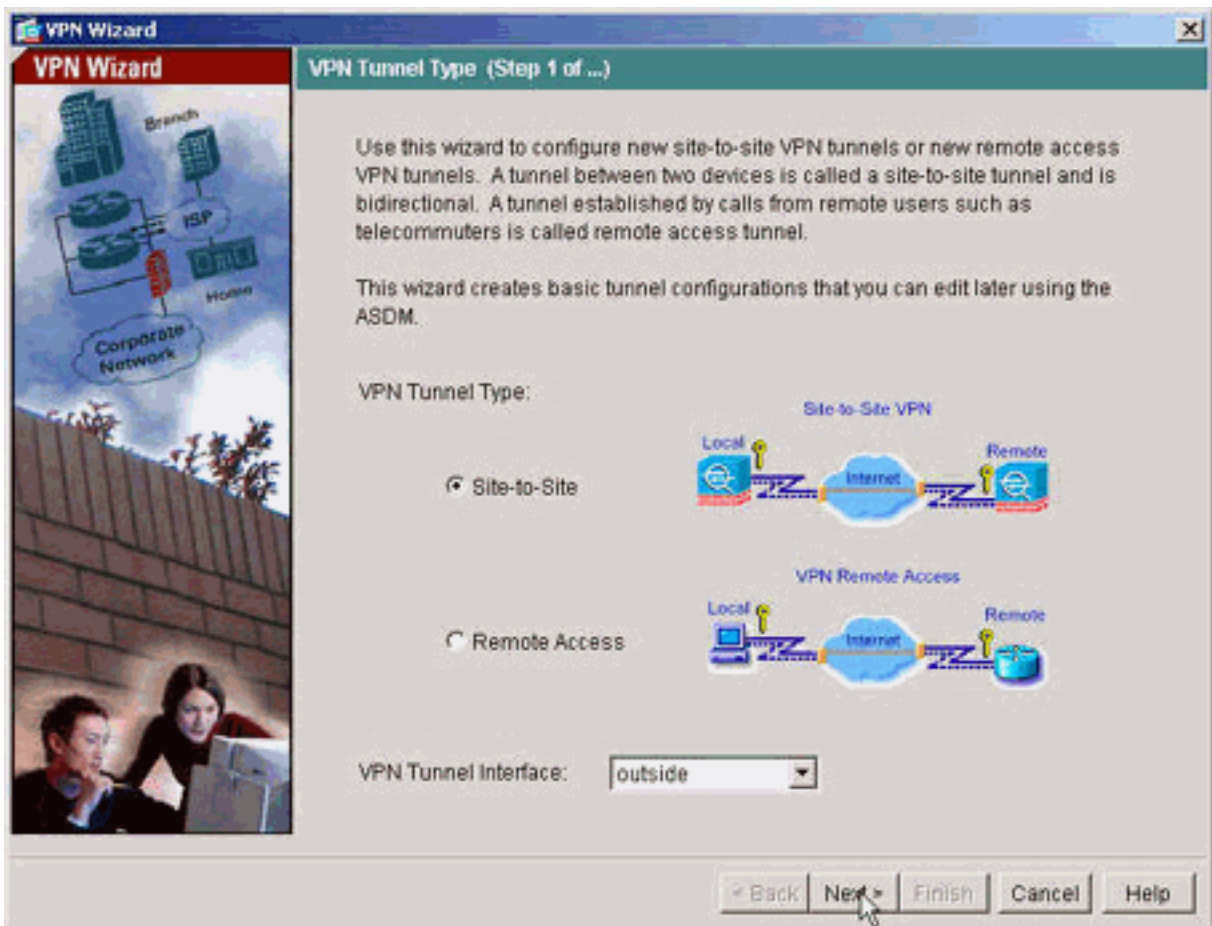


type.

7. Specify the outside IP address of the remote peer. Enter the authentication information to use, which is the pre-shared key in this example.

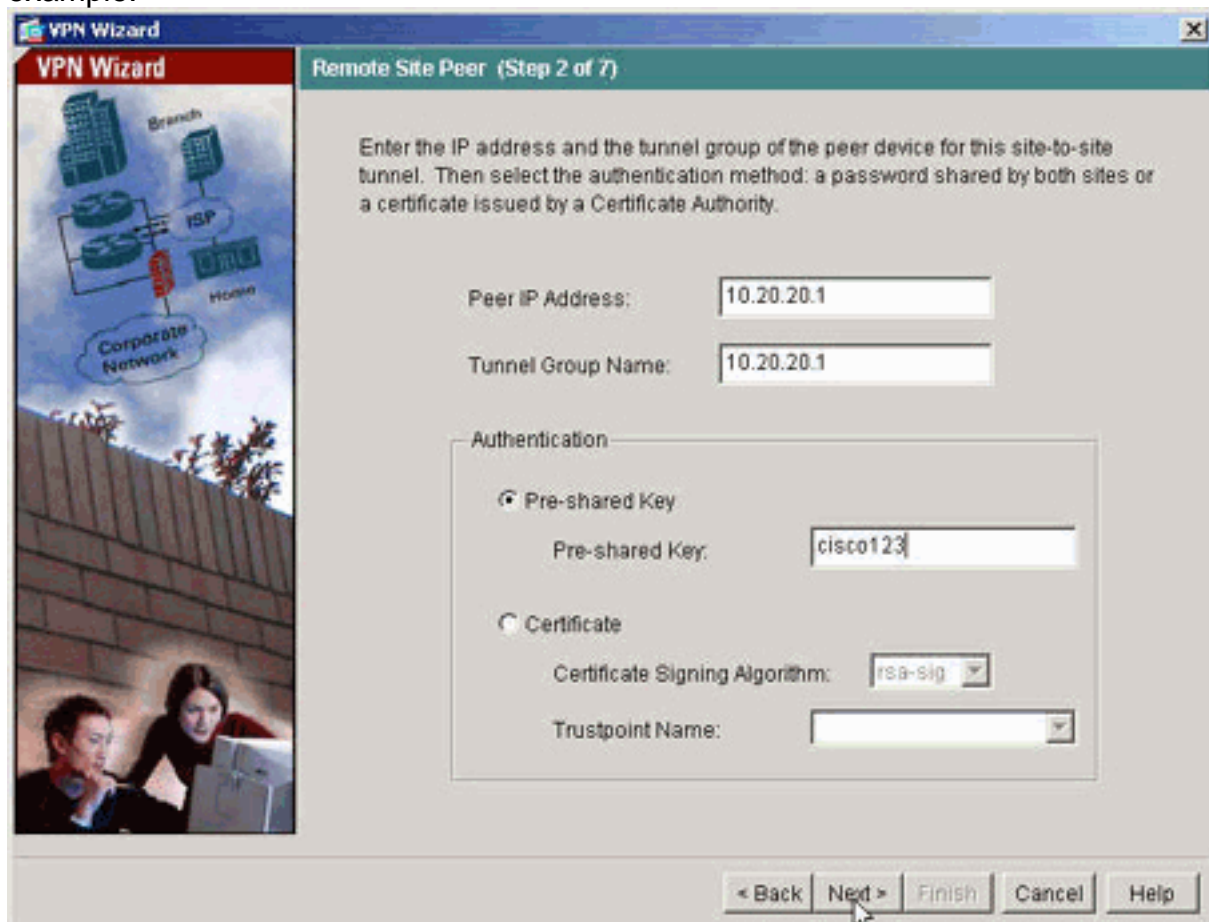


8. Specify the attributes to use for IKE, also known as Phase 1. These attributes must be the

same on both sides of the

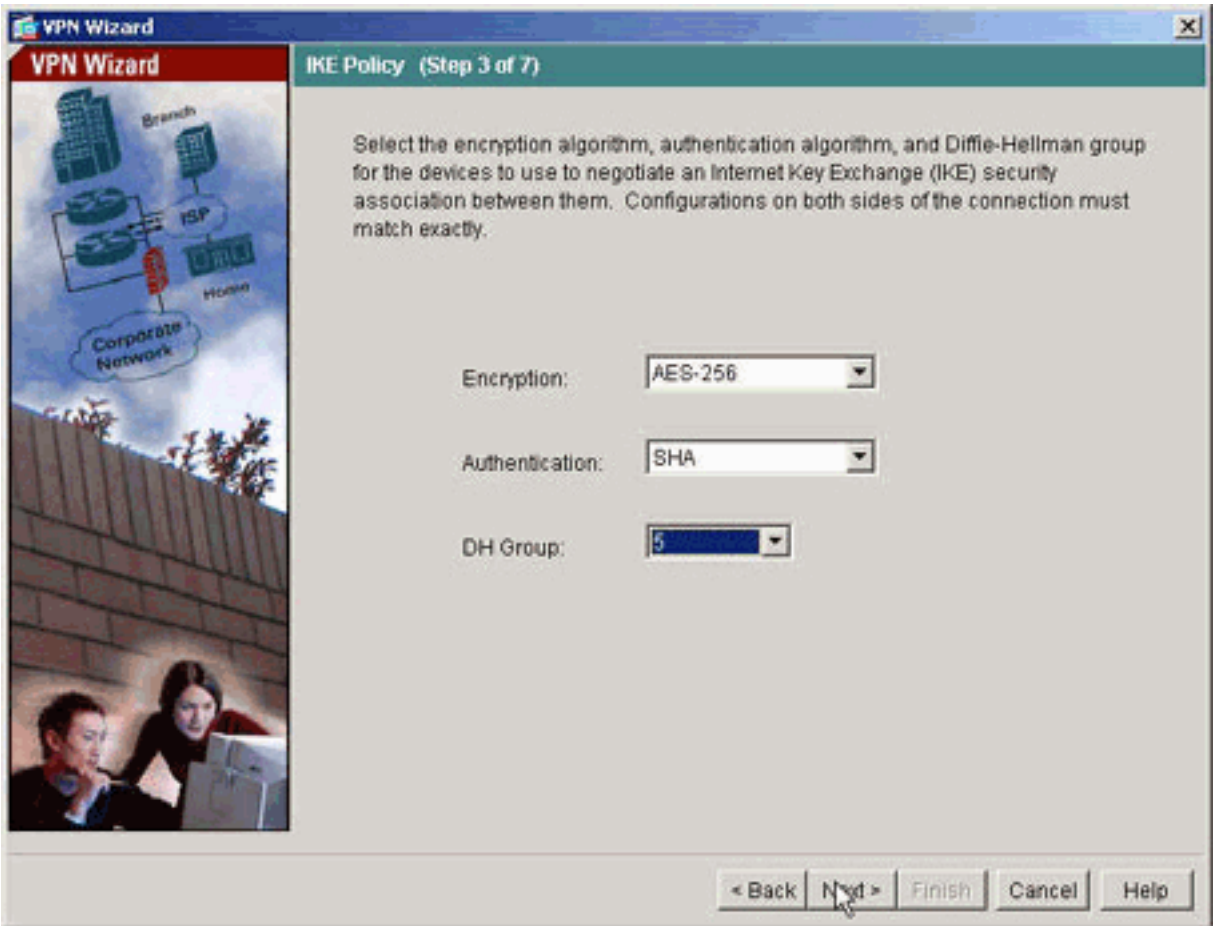

tunnel.


9. Specify the attributes to use for IPsec, also known as Phase 2. These attributes must match on both

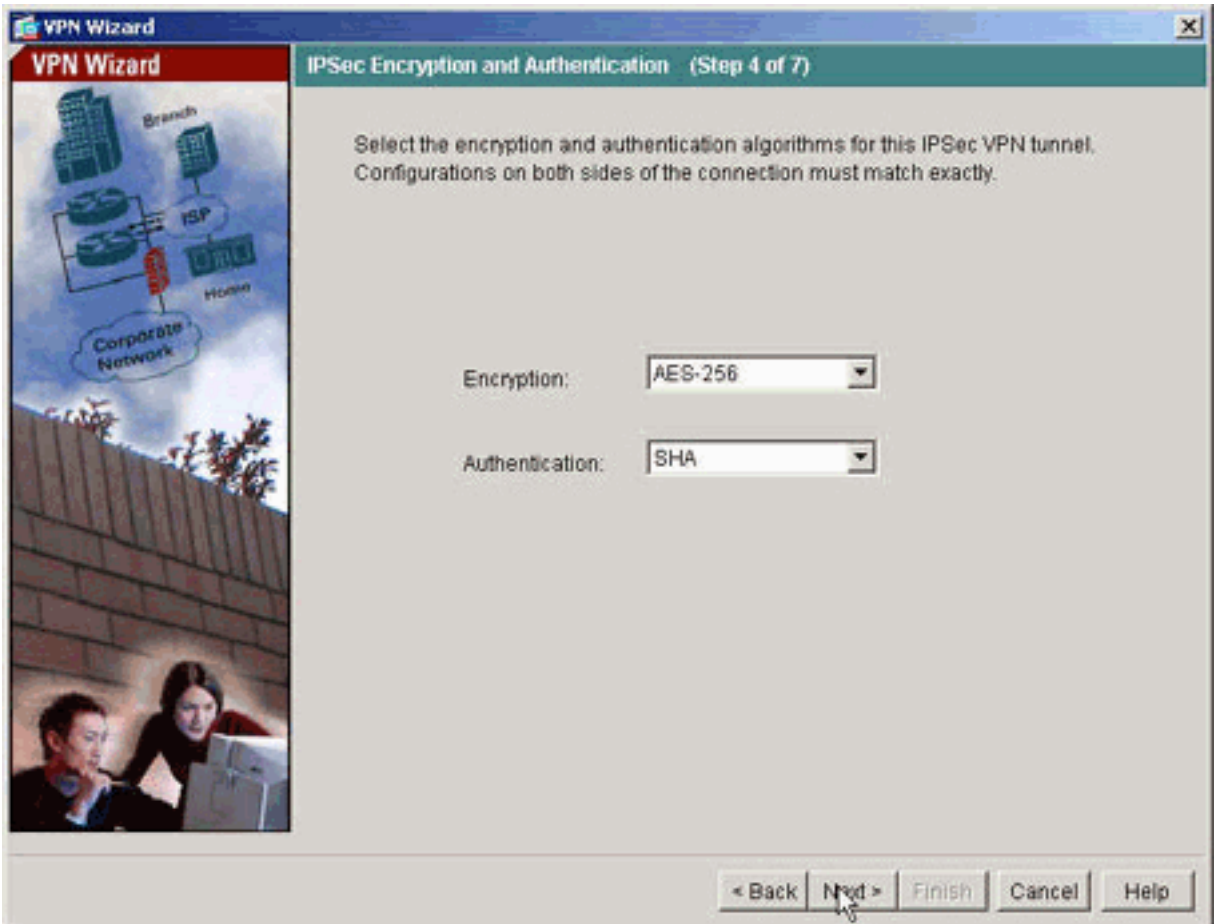


sides.

10. Specify the hosts whose traffic should be allowed to pass through the VPN tunnel. In this


step, the hosts local to ASA1 are specified.

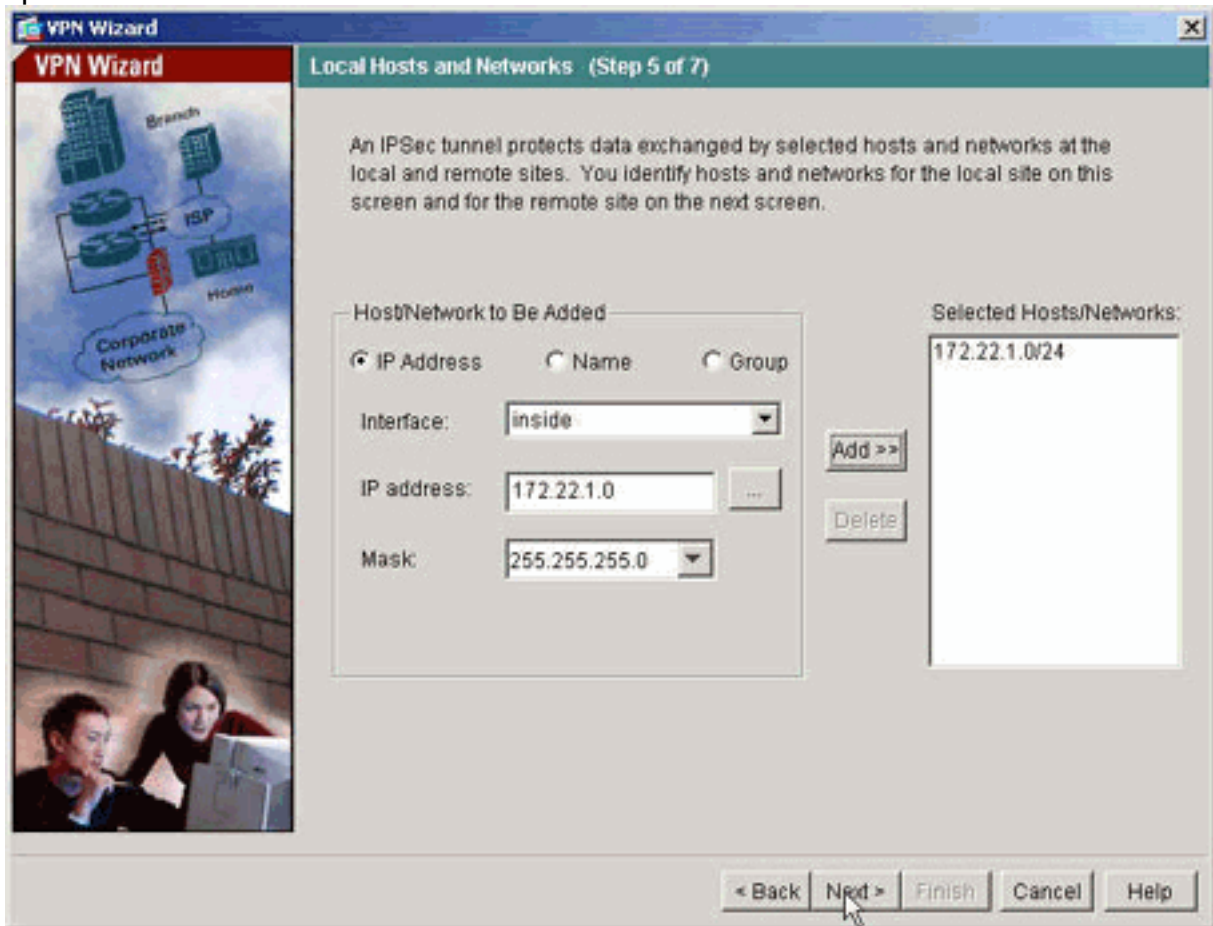

11. The hosts and networks on the remote side of the tunnel are specified.

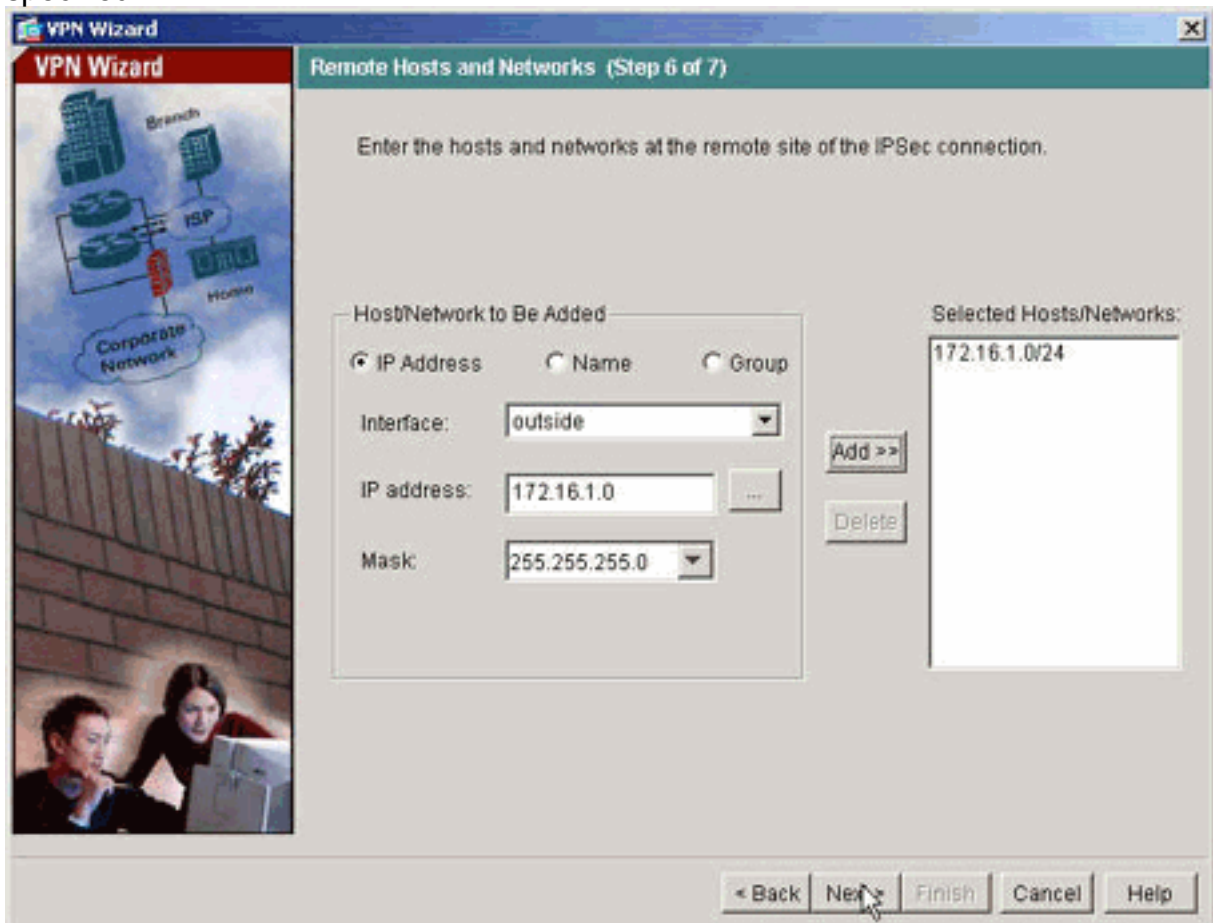

12. The attributes defined by the VPN Wizard are displayed in this summary. Double check the configuration and click **Finish** when you are satisfied the settings are correct.

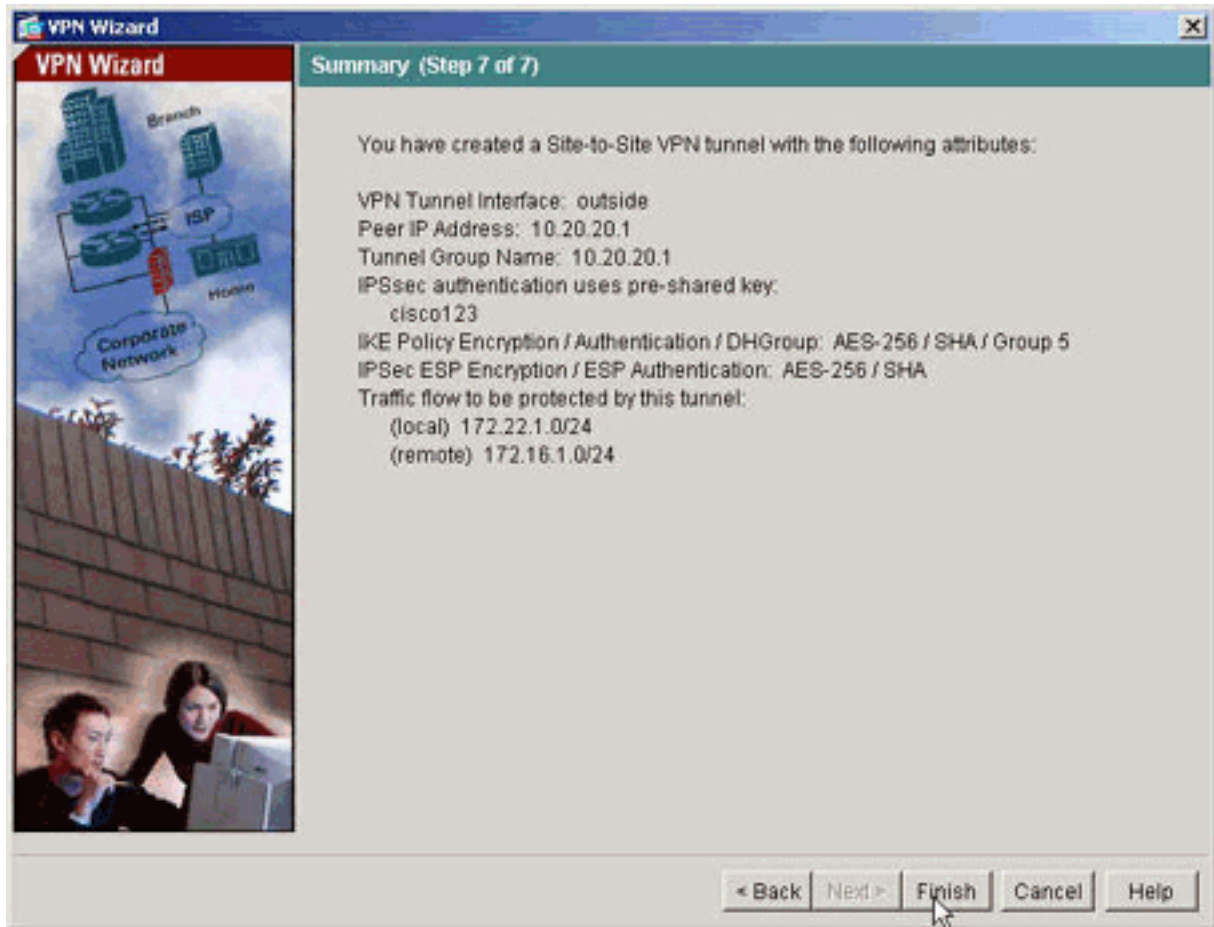


## [NTP ASDM Configuration](#)

Complete these steps to configure NTP on the Cisco Security Appliance:

1. Choose **Configuration** in the ASDM home page as shown




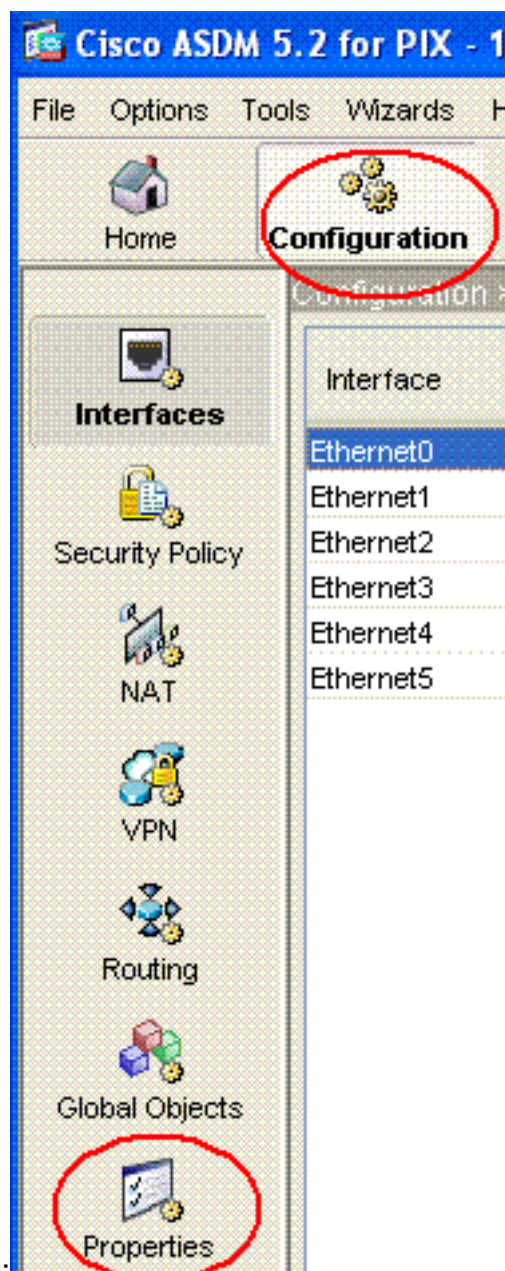

here:

2. Now choose **Properties > Device Management > NTP** in order to open the **NTP** configuration page of ASDM as shown

here:

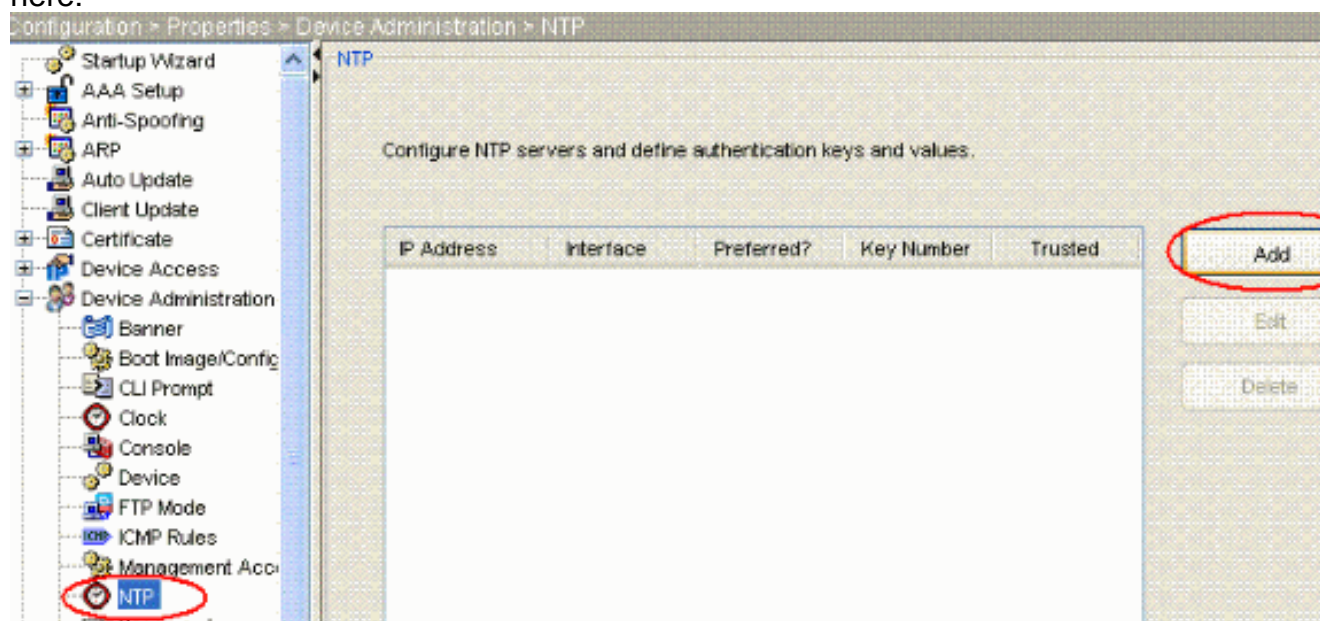

3. Click the **ADD** button in order to add a NTP server and provide the required attributes such as IP address, Interface name (Inside or Outside), key number and key value for Authentication in the new window that comes up after you have clicked on the **ADD** button as shown in the screen shot. Then click on

The screenshot shows a dialog box titled "Add NTP Server Configuration". It has a blue title bar with a close button. The main area is light gray with a grid pattern. It contains the following fields and controls:

- IP Address: 172.22.1.161
- Interface: inside
- Key Number: 1
- Key Value: \*\*\*\*\*
- Reenter Key Value: \*\*\*\*\*
- Preferred:
- Trusted:
- Buttons: OK, Cancel, Help


The "OK" button is circled in red.

OK.

**Note:** The interface name should be chosen as inside for ASA1 and outside for ASA2. **Note:** The ntp authentication key should be the same in ASA and the NTP server. The Authentication attribute configuration in cli for ASA1 and ASA2 are shown

below:  
ASA1#ntp authentication-key 1 md5 cisco ntp trusted-key 1 ntp server 172.22.1.161 key 1 source inside  
ASA2#ntp authentication-key 1 md5 cisco ntp trusted-key 1 ntp server 172.22.1.161 key 1 source outside

4. Now click the checkbox **Enable NTP Authentication** and click **Apply**, which completes the NTP configuration task.

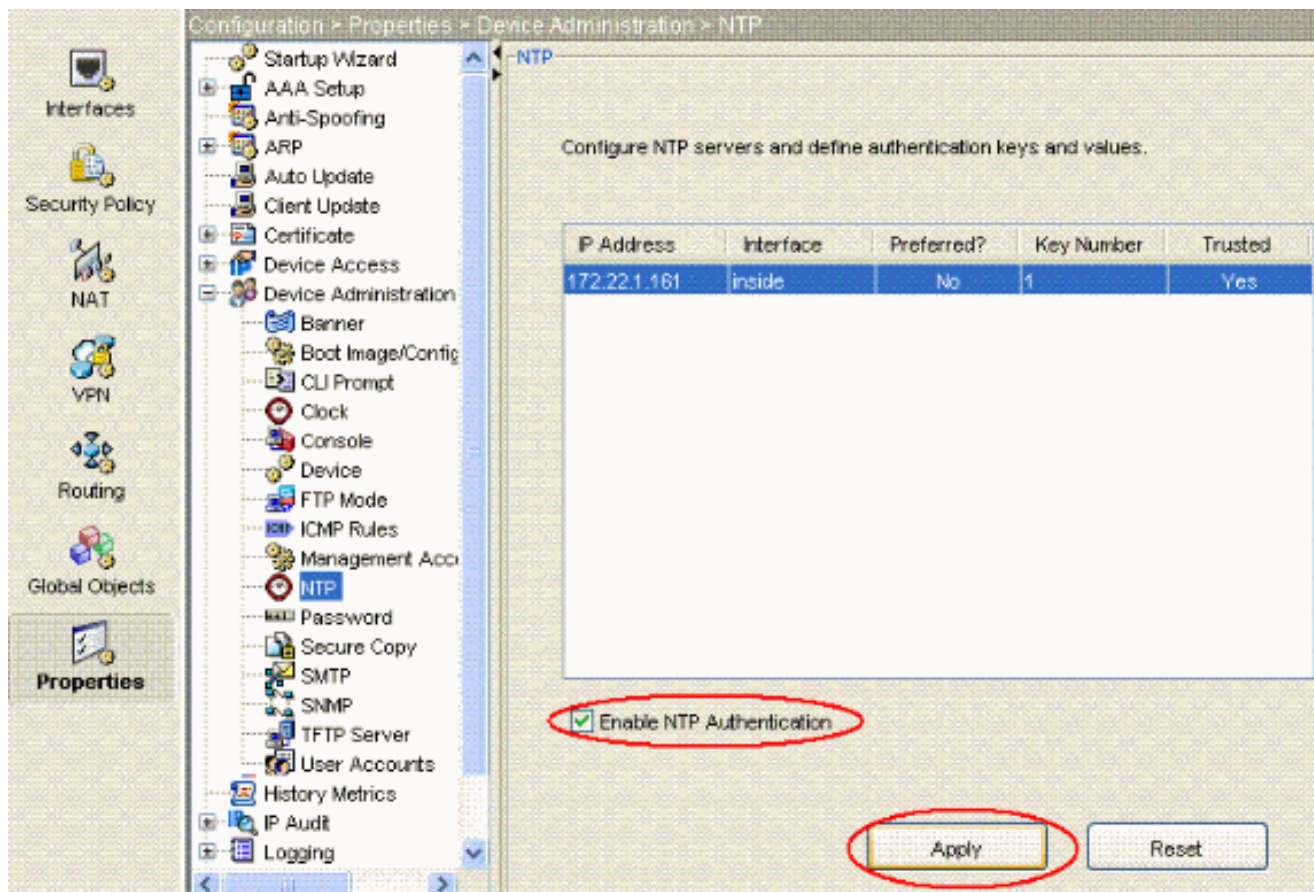

## ASA1 CLI Configuration

### ASA1

```
ASA#show run : Saved ASA Version 7.1(1) ! hostname ASA1
domain-name default.domain.invalid enable password
8Ry2YjIyt7RRXU24 encrypted names ! interface Ethernet0
nameif outside security-level 0 ip address 10.10.10.1
255.255.255.0 !--- Configure the outside interface. !
interface Ethernet1 nameif inside security-level 100 ip
address 172.22.1.163 255.255.255.0 !--- Configure the
inside interface. ! !-- Output suppressed ! passwd
2KFQnbNIdI.2KYOU encrypted ftp mode passive dns server-
group DefaultDNS domain-name default.domain.invalid
access-list inside_nat0_outbound extended permit ip
172.22.1.0 255.255.255.0 172 .16.1.0 255.255.255.0 !---
This access list (inside_nat0_outbound) is used !---
with the nat zero command. This prevents traffic which
!--- matches the access list from undergoing network
address translation (NAT). !--- The traffic specified by
this ACL is traffic that is to be encrypted and !---
sent across the VPN tunnel. This ACL is intentionally !-
-- the same as (outside_cryptomap_20). !--- Two separate
access lists should always be used in this
configuration. access-list outside_cryptomap_20 extended
permit ip 172.22.1.0 255.255.255.0 172 .16.1.0
255.255.255.0 !--- This access list
(outside_cryptomap_20) is used !--- with the crypto map
outside_map !--- to determine which traffic should be
encrypted and sent !--- across the tunnel. !--- This ACL
is intentionally the same as (inside_nat0_outbound). !--
- Two separate access lists should always be used in
this configuration. pager lines 24 mtu inside 1500 mtu
outside 1500 no failover asdm image flash:/asdm-511.bin
```

```


!--- Enter this command to specify the location of the
ASDM image. asdm history enable arp timeout 14400 nat
(inside) 0 access-list inside_nat0_outbound !--- NAT 0
prevents NAT for networks specified in !--- the ACL
inside_nat0_outbound. route outside 0.0.0.0 0.0.0.0
10.10.10.2 1 timeout xlate 3:00:00 timeout conn 1:00:00
half-closed 0:10:00 udp 0:02:00 icmp 0:00:02 timeout
sunrpc 0:10:00 h323 0:05:00 h225 1:00:00 mgcp 0:05:00
timeout mgcp-pat 0:05:00 sip 0:30:00 sip_media 0:02:00
timeout uauth 0:05:00 absolute http server enable !---
Enter this command in order to enable the HTTPS server
!--- for ASDM. http 172.22.1.1 255.255.255.255 inside !-
-- Identify the IP addresses from which the security
appliance !--- accepts HTTPS connections. no snmp-server
location no snmp-server contact !--- PHASE 2
CONFIGURATION ---! !--- The encryption types for Phase 2
are defined here. crypto ipsec transform-set ESP-AES-
256-SHA esp-aes-256 esp-sha-hmac !--- Define the
transform set for Phase 2. crypto map outside_map 20
match address outside_cryptomap_20 !--- Define which
traffic should be sent to the IPsec peer. crypto map
outside_map 20 set peer 10.20.20.1 !--- Sets the IPsec
peer crypto map outside_map 20 set transform-set ESP-
AES-256-SHA !--- Sets the IPsec transform set "ESP-AES-
256-SHA" !--- to be used with the crypto map entry
"outside_map". crypto map outside_map interface outside
!--- Specifies the interface to be used with !--- the
settings defined in this configuration. !--- PHASE 1
CONFIGURATION ---! !--- This configuration uses isakmp
policy 10. !--- Policy 65535 is included in the config
by default. !--- The configuration commands here define
the Phase !--- 1 policy parameters that are used. isakmp
enable outside isakmp policy 10 authentication pre-share
isakmp policy 10 encryption aes-256 isakmp policy 10
hash sha isakmp policy 10 group 5 isakmp policy 10
lifetime 86400 isakmp policy 65535 authentication pre-
share isakmp policy 65535 encryption 3des isakmp policy
65535 hash sha isakmp policy 65535 group 2 isakmp policy
65535 lifetime 86400 tunnel-group 10.20.20.1 type ipsec-
l2l !--- In order to create and manage the database of
connection-specific !--- records for ipsec-l2l-IPsec
(LAN-to-LAN) tunnels, use the command !--- tunnel-group
in global configuration mode. !--- For L2L connections
the name of the tunnel group MUST be the IP !--- address
of the IPsec peer. tunnel-group 10.20.20.1 ipsec-
attributes pre-shared-key * !--- Enter the pre-shared-
key in order to configure the !--- authentication
method. telnet timeout 5 ssh timeout 5 console timeout 0
! class-map inspection_default match default-inspection-
traffic !! policy-map global_policy class
inspection_default inspect dns maximum-length 512
inspect ftp inspect h323 h225 inspect h323 ras inspect
netbios inspect rsh inspect rtsp inspect skinny inspect
esmtplib inspect sqlnet inspect sunrpc inspect tftp inspect
sip inspect xdmcp ! service-policy global_policy global
!--- Define the NTP server authentication-key,Trusted-key
!--- and the NTP server address for configuring NTP. ntp
authentication-key 1 md5 * ntp trusted-key 1 !--- The
NTP server source is to be mentioned as inside for ASA1
ntp server 172.22.1.161 key 1 source inside
Cryptochecksum:ce7210254f4a0bd263a9072a4ccb7cf7 : end

```

This video posted to the [Cisco Support Community](#) explains with a demo, the procedure to

configure ASA as NTP client:

[How to configure a Cisco Adaptive Security Appliance \(ASA\) to synchronize its clock with a Network Time Protocol \(NTP\) Server.](#) 

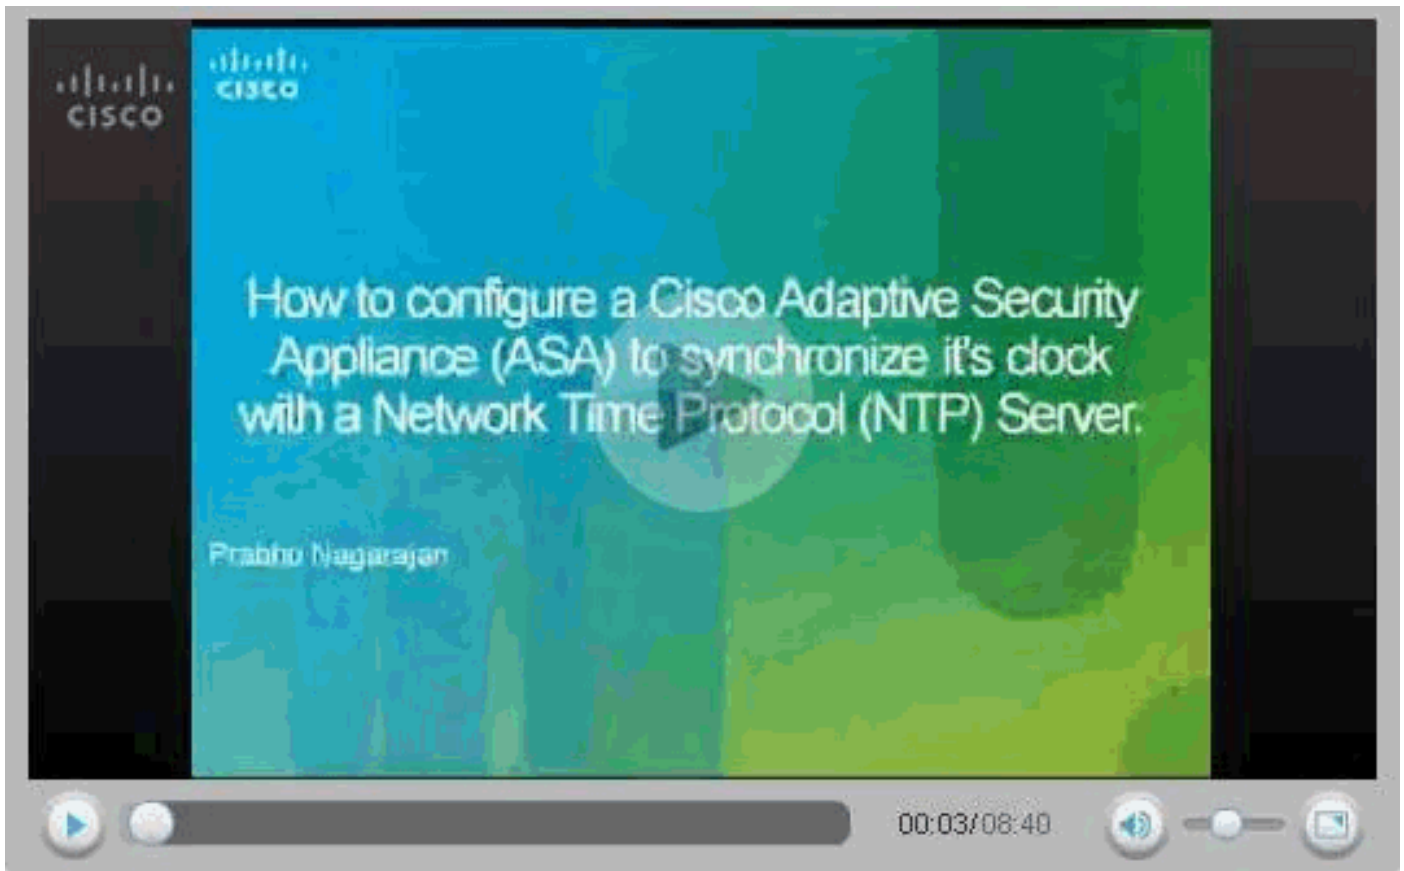

## [ASA2 CLI Configuration](#)

### ASA2

```
ASA Version 7.1(1)
!
hostname ASA2
domain-name default.domain.invalid
enable password 8Ry2YjIyt7RRXU24 encrypted
names
!
interface Ethernet0
 nameif outside
 security-level 0
 ip address 10.20.20.1 255.255.255.0
!
interface Ethernet1
 nameif inside
 security-level 100
 ip address 172.16.1.1 255.255.255.0
!
passwd 2KFQnbNIdI.2KYOU encrypted
ftp mode passive
dns server-group DefaultDNS
 domain-name default.domain.invalid

access-list inside_nat0_outbound extended permit ip
172.16.1.0 255.255.255.0 172
```

```
.22.1.0 255.255.255.0
!--- Note that this ACL is a mirror of the
inside_nat0_outbound !--- ACL on ASA1. access-list
outside_cryptomap_20 extended permit ip 172.16.1.0
255.255.255.0 172 .22.1.0 255.255.255.0 !--- Note that
this ACL is a mirror of the outside_cryptomap_20 !---
ACL on ASA1. pager lines 24 mtu inside 1500 mtu outside
1500 no failover asdm image flash:/asdm-511.bin no asdm
history enable arp timeout 14400 nat (inside) 0 access-
list inside_nat0_outbound timeout xlate 3:00:00 timeout
conn 1:00:00 half-closed 0:10:00 udp 0:02:00 icmp
0:00:02 timeout sunrpc 0:10:00 h323 0:05:00 h225 1:00:00
mgcp 0:05:00 timeout mgcp-pat 0:05:00 sip 0:30:00
sip_media 0:02:00 timeout uauth 0:05:00 absolute http
server enable http 0.0.0.0 0.0.0.0 inside no snmp-server
location no snmp-server contact crypto ipsec transform-
set ESP-AES-256-SHA esp-aes-256 esp-sha-hmac crypto map
outside_map 20 match address outside_cryptomap_20 crypto
map outside_map 20 set peer 10.10.10.1 crypto map
outside_map 20 set transform-set ESP-AES-256-SHA crypto
map outside_map interface outside isakmp enable outside
isakmp policy 10 authentication pre-share isakmp policy
10 encryption aes-256 isakmp policy 10 hash sha isakmp
policy 10 group 5 isakmp policy 10 lifetime 86400
tunnel-group 10.10.10.1 type ipsec-l2l tunnel-group
10.10.10.1 ipsec-attributes pre-shared-key * telnet
timeout 5 ssh timeout 5 console timeout 0 ! class-map
inspection_default match default-inspection-traffic ! !
policy-map global_policy class inspection_default
inspect dns maximum-length 512 inspect ftp inspect h323
h225 inspect h323 ras inspect netbios inspect rsh
inspect rtsp inspect skinny inspect esmtp inspect sqlnet
inspect sunrpc inspect tftp inspect sip inspect xdmcp !
service-policy global_policy global !--- Define the NTP
server authentication-key,Trusted-key !--- and the NTP
server address for configuring NTP. ntp authentication-
key 1 md5 * ntp trusted-key 1 !--- The NTP server source
is to be mentioned as outside for ASA2. ntp server
172.22.1.161 key 1 source outside
Cryptochecksum:d5e2ee898f5e8bd28e6f027aead7f41b : end
ASA#
```

## Verify

This section provides information you can use to confirm your configuration works properly.

Certain **show** commands are supported by the [Output Interpreter Tool](#) ([registered](#) customers only), which allows you to view an analysis of **show** command output.

- **[show ntp status](#)** —Displays the NTP clock information.  
ASA1#show ntp status Clock is synchronized, stratum 2, reference is 172.22.1.161 nominal freq is 99.9984 Hz, actual freq is 99.9983 Hz, precision is 2\*\*6 reference time is ccf22b77.f7a6e7b6 (13:28:23.967 UTC Tue Dec 16 2008) clock offset is 34.8049 msec, root delay is 4.78 msec root dispersion is 60.23 msec, peer dispersion is 25.41 msec
- **[show ntp associations \[detail\]](#)** —Displays the configured network time server associations.  
ASA1#show ntp associations detail 172.22.1.161 configured, authenticated, our\_master, sane, valid, stratum 1 ref ID .LOCL., time ccf2287d.3668b946 (13:15:41.212 UTC Tue Dec 16 2008) our mode client, peer mode server, our poll intvl 64, peer poll intvl 64 root delay 0.00 msec, root disp 0.03, reach 7, sync dist 23.087 delay 4.52 msec, offset 9.7649 msec, dispersion 20.80 precision 2\*\*19, version 3 org time ccf22896.f1a4fca3

```
(13:16:06.943 UTC Tue Dec 16 2008) rcv time ccf22896.efb94b28 (13:16:06.936 UTC Tue Dec 16 2008) xmt time ccf22896.ee5691dc (13:16:06.931 UTC Tue Dec 16 2008) filtdelay = 4.52 4.68 4.61 0.00 0.00 0.00 0.00 0.00 0.00 0.00 filtoffset = 9.76 7.09 3.85 0.00 0.00 0.00 0.00 0.00 filtererror = 15.63 16.60 17.58 14904.3 14904.3 14904.3 14904.3 14904.3
```

## [Troubleshoot](#)

This section provides information you can use to troubleshoot your configuration.

### [Troubleshooting Commands](#)

Certain **show** commands are supported by the [Output Interpreter Tool](#) ([registered](#) customers only), which allows you to view an analysis of **show** command output.

**Note:** Before issuing **debug** commands, refer to [Important Information on Debug Commands](#).

- **debug ntp validity**—Displays NTP peer clock validity. This is **debug** output from the key mismatch:  
NTP: packet from 172.22.1.161 failed validity tests 10 Authentication failed
- **debug ntp packet**—Displays NTP packet information. When there is no response from the server, only the NTP xmit packet is seen on the ASA with no NTP rcv packet. ASA1# NTP: xmit packet to 172.22.1.161:

```
  leap 0, mode 3, version 3, stratum 2, ppoll 64
  rtdel 012b (4.562), rtdsp 0cb6 (49.652), refid ac1601a1 (172.22.1.161)
  ref ccf22916.f1211384 (13:18:14.941 UTC Tue Dec 16 2008)
  org ccf22916.f426232d (13:18:14.953 UTC Tue Dec 16 2008)
  rec ccf22916.f1211384 (13:18:14.941 UTC Tue Dec 16 2008)
  xmt ccf22956.f08ee8b4 (13:19:18.939 UTC Tue Dec 16 2008)
NTP: rcv packet from 172.22.1.161 to 172.22.1.163 on inside:
  leap 0, mode 4, version 3, stratum 1, ppoll 64
  rtdel 0000 (0.000), rtdsp 0002 (0.031), refid 4c4f434c (76.79.67.76)
  ref ccf2293d.366a4808 (13:18:53.212 UTC Tue Dec 16 2008)
  org ccf22956.f08ee8b4 (13:19:18.939 UTC Tue Dec 16 2008)
  rec ccf22956.f52e480e (13:19:18.957 UTC Tue Dec 16 2008)
  xmt ccf22956.f5688c29 (13:19:18.958 UTC Tue Dec 16 2008)
  inp ccf22956.f982bcd9 (13:19:18.974 UTC Tue Dec 16 2008)
```

## [Related Information](#)

- [Cisco PIX Firewall Software](#)
- [Cisco Adaptive Security Device Manager](#)
- [Cisco ASA 5500 Series Adaptive Security Appliances](#)
- [Cisco Secure PIX Firewall Command References](#)
- [Requests for Comments \(RFCs\)](#) 
- [Technical Support & Documentation - Cisco Systems](#)